

**ENG** TABLE OF CONTENTS

**Cautions, Disclaimers AND Warnings (Read before use) 1**

Limitation of Liability (Read Before Use)

Safety Certifications

**What's Included 12**

**User Friendly OS 13**

Control Panel

Power

Settings

Fan

Navigation

**Remote Control 16**

Using the Remote

Power

Fan

Temperature Adjustment

Audio / Beep

Auto-Off Timer

LED Lights

**Operation 17**

Aromatherapy

Glass Connoisseur Bowl

Tuff Bowl Grips

Whip System

Balloon System

Balloon Assembly

**Cleaning and Maintenance 20**

Replacing the Air Intake Filter

**Warranty, Troubleshooting and Service 21**

## WHAT'S INCLUDED

- 1 x XQ2 Multi Purpose Heater
- 1 x XQ2 Power Adapter and Cord
- 1 x XQ2 Remote Control
- 2 x XQ2 Glass Connoisseur Bowls
- 2 x XQ2 Tuff BowlGrips
- 1 x XQ2 Glass Aromatherapy Dish
- 1 x XQ2 3' Whip (Silicone)
- 1 x XQ2 Glass Mini Whip w./ Dome Screen
- 1 x XQ2 Frosted Glass Balloon Mouthpiece
- 1 x XQ2 Balloon Connector
- 2 x XQ2 Balloon Bags
- 1 x XQ2 Balloon Cap
- 1 x XQ2 Air Filter Cartridge w./ Filter
- 1 x XQ2 Stainless Steel Stirring Tool
- 1 x XQ2 Flat Screen
- 1 x XQ2 Dome Screen
- 1 x Sample Aromatic Botanicals
- 1 x XQ2 Owner's Manual



① Sample Aromatic Botanicals not included in Australian package

## USER FRIENDLY OS

### Control Panel

- ① Power Button
- ② Settings Button
- ③ Fan Button
- ④ Navigation Buttons
- ⑤ Current Temperature
- ⑥ Set Temperature



## Power

Press the Power Button to instantly turn the unit on and off. Hold for 2 seconds to start the unit if the Delay Start setting is activated. The unit will beep once when turned On or Off when audio is activated.

## Settings

Press the Settings Button to access the menu and press the Up or Down buttons to navigate. When the desired Custom Session Setting is displayed, press the Settings button to select it, then press the Up or Down buttons to scroll through the options. When the desired option is displayed, press the Settings button to return to the menu, or wait 5 seconds to return to the temperature display.

### LED Lights

LED lights in the unit base and heater can be set to Off, Dynamic Mode, Spectrum Mode, or one of 8 individual color options. Spectrum Mode changes the color every 2 seconds in a continuous loop. Dynamic mode allows you to tell the state of the unit at a glance:

- **Heating:** Pulses from Yellow to Orange during heat up
- **Reach Set Temperature:** Blinks Green twice when set temperature is reached
- **Stable Temperature:** Pulses orange continuously while set temperature is maintained
- **Fan Operation:** Pulses purple when fan is active
- **Cooling:** Pulses cyan while the temperature is cooling down
- **Cooling with Fan:** Pulses blue while cooling with the fan activated.

### Screen Brightness

The color display has two brightness options: High and Low.

### Audio / Beep

This setting has three volume options: Low, High and Off.

### Temp. Alert

When this setting is activated, two beeps will be heard when the set temperature is reached. This option can also be turned Off.

### Auto-Off Timer

A programmable shut-off timer can be set at 30 minute intervals, up to 2 hours, and can be deactivated for longer use.

### Temp. Settings

The default display setting is Celsius, which can easily be changed to Fahrenheit.

### Delay Start

When this Setting is activated, the Power Button must be held for 2 seconds to turn on the unit. If the power button is not held, a double beep error warning will sound.

### Fan

Press the Fan button to switch between Low, Medium, High and Off. The Remote Control also has four dedicated buttons to change fan speeds directly.

### Navigation

The Up and Down buttons are used to navigate the menu settings and options, and to change the temperature settings directly. Press the Up or Down button once to change the temperature in 1-degree increments. Press and hold the Up or Down button to change the temperature in 10-degree increments.

## REMOTE CONTROL

### Using the Remote

The Remote Control gives direct access to frequently used Custom Session Settings and will quickly become your "go to" accessory. Before first use, ensure the plastic insert covering the battery has been removed.

#### Power

Press to instantly turn the unit on and off. Hold for 2 seconds to start the unit if the "Delay Start" setting is activated.

#### Fan

There are 4 dedicated fan buttons for Off, Low, Med, and High. Press the buttons to activate or change the fan speed.

#### Temperature Adjustment

The Up and Down arrows are dedicated to adjusting temperature settings. There are three programmable temperature preset buttons. The preset button default temperatures are: (1) 170C/338F, (2) 185C/365F, and (3) 200C/392F. To reprogram the presets, set the temperature you would like to save, then press and hold the chosen button (1, 2 or 3) until you hear a beep.

#### Audio / Beep

Press the Audio button to switch between the setting options.

#### Auto-Off Timer

Press the Auto-Off Timer button to switch between the setting options.

#### LED Lights

Press the LED button to switch between the Light setting options.



Remote Control


## OPERATION

### Aromatherapy

Botanicals such as Lavender, Chamomile, Orange Peels, and many more, can be vaporized for aromatherapy. By heating your favorite herbs and flowers to precise temperatures, the pleasing aromas, terpenes, and botanical compounds are released to promote/enhance energetic or relaxing environments.

1. Set the unit to a low temperature 100C - 150C (212F - 302F).
2. Place some dried botanicals into the Aromatherapy Dish.
3. Attach the Aromatherapy Dish to the unit
4. Turn on the fan to diffuse the aromas. Use fan speed 1 so the materials do not blow out of the bowl.
5. Discard the contents of the bowl and refill as desired.

⚠ Do not pour liquids of any kind into the Aromatherapy Dish. Liquid damage is not repairable and is not covered under warranty.

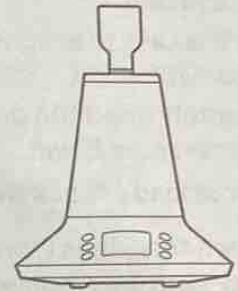

Aromatherapy

### Glass Connoisseur Bowl

The Glass Connoisseur Bowl has an optimized full-coverage air flow that evenly distributes heat for the most efficient use of flowers, herbs and botanicals, with two chamber sizes:

#### Cloud Chamber

Large capacity chamber with the glass screen closer to the heater. Produces a stronger/thicker vapor. Ideal for multi bag sessions.

 
#### Flavor Chamber

Small capacity chamber with the glass screen further from the heater. Produce a smoother/lighter vapor. Ideal for personal use and micro-dosing.

① We recommend using the all-glass screen alone, but the flat metal screen can be added for finely ground materials.

### Tuff BowlGrips

Heat-safe silicone Tuff BowlGrips can be used on both ends of the Connoisseur Bowl for easy handling.



Cloud Chamber



Flavor Chamber

## Whip System

1. Set the Unit to a higher temperature to suit your preference for light or thick vapor 170C-220C (338F-428F).
2. Coarsely grind the desired amount of material and load it into the top of the Connoisseur Bowl.

⚠ Do not load or pack the bowl too tightly or airflow could be restricted.

3. Attach the Glass Connoisseur Bowl to the unit, then attach the 3' Whip to the bowl. Wait for approximately 3-5 minutes to prime the materials for use.
4. Inhale through the glass mouthpiece in a slow, steady draw.
5. Alternately, turn on the Fan while inhaling for an assisted draw.
6. Periodically stirring the bowl contents will help get the most out of your material. Use the provided Stirring Tool to stir the material in the chamber. Remove the bowl from the unit before stirring.
7. Discard used bowl contents and refill as desired.

ⓘ The Dome Screen in the 3' Whip can clog and needs to be cleaned or replaced periodically for optimal performance.

## Balloon System

1. Set the Unit to a higher temperature to suit your preference for light or thick vapor 170C-220C (338F-428F).
2. Coarsely grind the desired amount of material and load it into the top of the Connoisseur Bowl.


⚠ Do not load/pack the bowl too tightly or airflow could be restricted.

Always load from the top of the Bowl and never load both bowl chambers at the same time.

3. Attach the loaded Glass Connoisseur Bowl to the unit, then attach the mini-whip to the bowl. Wait for approximately 3-5 minutes to prime the materials for use.
4. Attach the balloon mouthpiece to the mini-whip.
5. Activate the Fan to your preferred speed and allow the balloon to fill with vapor.
6. Detach the balloon from the mini-whip, then inhale through the Frosted Glass Balloon Mouthpiece. Seal the balloon between draws using the silicone Balloon Cap to prevent leakage.



Whip System

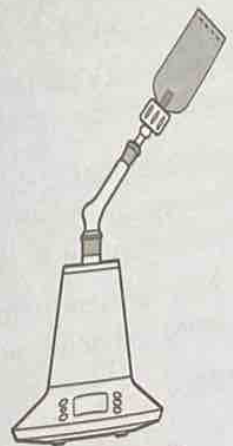

Balloon System



7. Periodically stirring the bowl contents will help get the most out of your material. Remove the bowl from the unit before stirring, and use the Stirring Tool to stir the material in the chamber
  8. Discard used bowl contents and refill as desired.
- ⓘ If the balloon is filling slowly or not filling, the bag may need to be replaced.
  - ⓘ The Dome Screen in the Mini Whip can clog and needs to be cleaned or replaced periodically for optimal performance.

### Balloon Assembly

The Balloon consists of the Bag, Balloon Connector, Balloon Cap and Frosted Glass Balloon Mouthpiece.

1. Slip the silicone balloon cap over the glass mouthpiece so it rests between the glass bulbs.
  2. Insert the bottom (unfrosted end) of the glass mouthpiece through the top of the hole of the silicone balloon connector. Push until the bulbs of the mouthpiece are on each side of the cap.
  3. Gather the open end of the balloon and insert it through the large opening in the threaded base until there is enough material to fold evenly back past the base threads.
- ⓘ The size of the bag can be adjusted by changing how much material is pulled through the opening. Trim excess material away with scissors.
4. Push the two pieces of the balloon connector together until they lock. Slide the connector up the glass until it rests against the bulb closest to the frosted mouthpiece.



Step 1



Step 2



Step 3



Step 4

## CLEANING AND MAINTENANCE

Unplug unit from outlet before cleaning. Let the unit and all parts cool down before handling and/or cleaning. When cleaning any glass DO NOT expose hot glass parts to cold water or extreme temperature change, as this will cause cracking and breaking of the glass.

All parts/screens are removable for ease of cleaning. Regular Isopropyl Rubbing Alcohol, Q-Tips, Pipe Cleaners, etc. can be used to clean/sterilize. Do not soak the tubing in alcohol as it may absorb the smell/taste. All glass and metal screens are safe to soak. When parts are clean, rinse thoroughly under hot water. Repeat as necessary. Make sure all the glass parts and accessories are fully dry before the next use.

If you experience difficulty removing the tubing from the glass parts, soak the tubing in hot water for a few minutes and the tubing will become softer and more pliable to work with.


To clean the warming unit and remote do not use any abrasive or hard cleaners, a simple soft cloth dampened (not wet) with warm water will do the job. Contact cleaner for keyboards and electronics can also be used.

If materials are spilled down inside the unit, turn the unit OFF and unplug. Turn the unit upside down and gently shake it back and forth until the debris falls out.

### Replacing the Air Intake Filter

To maintain optimal performance, periodically change the filter in the reusable Air Filter Cartridge.

1. Unplug the XQ2 and ensure that all parts have fully cooled.
2. Turn it upside down and pull the tab on the bottom of the unit to open the air filter compartment.
3. Remove the plastic Air Filter Cartridge by grasping the two finger holes.
4. Insert your finger in the large opening and pull off the perforated cover (exposing the white filter) and remove the old filters.
5. Insert the new black filter into the Cartridge, then place the second filter with white side facing out.
6. Replace the top of the Cartridge, ensuring the two tabs snap into place inside.
7. Place the Cartridge back into the bottom of the XQ2 with the two finger holes facing outward.
8. Close the air filter compartment cover by pressing the cover down until both tabs lock with an audible click.

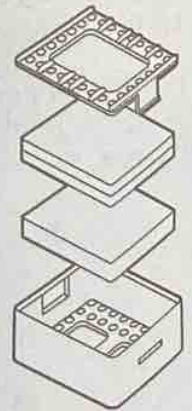

Air Filter

## WARRANTY, TROUBLESHOOTING AND SERVICE

- ① Fan speed may be noticeably different when the air filter is not being used. This will not have any bearing on temperature or vapor quality, only fill time for balloons.

### Replacing the Glass Heater Cover

If the internal glass part accidentally breaks there's no need to worry, it's easy to replace and replacement parts are available for purchase. Contact [service@arizer.com](mailto:service@arizer.com) for assistance.

### Warranty

The XQ2 carries a lifetime warranty on the heating element and a limited 3-Year warranty covering parts and labor costs against defects in materials or workmanship. Glass is not covered under warranty. Retain proof of purchase for warranty service. Warranty is non-transferrable, valid from the original date of purchase and does not extend or renew with service. Returning the product and costs incurred are the responsibility of the user. Arizer will repair or replace warrantied items at our discretion. The warranty does not cover units damaged by dropping, tampering, unauthorized service performed or attempted, modifying the unit, misuse or abuse.

### Troubleshooting

If you experience an issue with your Arizer XQ2 send an email to [service@arizer.com](mailto:service@arizer.com) and an expert Arizer customer service representative will reply as soon as possible to help troubleshoot and resolve any issues. To expedite your service request please include a description of the problem, your full name, your shipping address, the serial number on the bottom of your device, and a copy of your sales receipt.

### Available Accessories

All Spare parts and accessories are available on our website: [www.arizer.com](http://www.arizer.com)