



How to adjust the back rest

- 1. Turn the metal disc anti clockwise to remove.
- 2. Using the allen key, loosen the bolts.
- 3. Straighten the back rest and retighten the bolts.
- 4. Replace the metal disc, turning it clockwise to secure.