
RP04 - RAPHIA WARDROBE Assembly Instructions

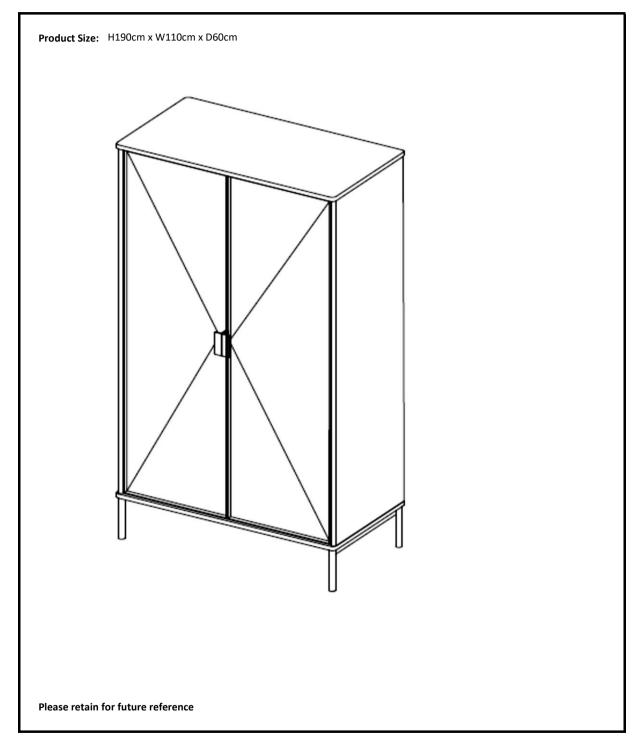

Made in India

Page 1 of 12

RP04 - RAPHIA WARDROBE Assembly Instructions

Before You Start

Warnings

Please retain these instructions for future reference.

> Keep fittings out of children's reach and keep children well away from the assembly area.

> Ensure that this product is only used on firm, level ground.

> Periodically check all fittings and re-tighten as necessary.

> Do not sit or stand on your furniture.

> Avoid exposing the furniture to excessive heat or direct sunlight, as this can cause deterioration of the colour.

> Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

 
Number of People Required to Assemble

4 persons are required to assemble this item.

Time to Assemble

Approximately 45 minutes required to assemble this item.

Tools required



Missing Parts or Issues

If you have any problems, please don't hesitate to get in touch with your retailer directly.

Do

> Spend a short time reading through this leaflet before you start.

> When you are ready to start, make sure that you have the right tools and plenty of space.

> Unwrap all packaging materials and place components on a clean surface to protect them from damage.

> The packaging should be used to protect the product during assembly.

> Carefully check that you have all parts before beginning assembly.

> tThe furniture should be assembled in the room that it is intended to be used in.

> Ensure the product is fully assembled as shown, and that all fixings are fully tightened before use.

> Wipe occasionally with a soft cloth slightly dampened with water, then buff with a dry clean soft cloth.

Don't

> Do not drag or pull your furniture.


> Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.

> Never allow any kind of liquid to remain on your furniture.

> Absorption can cause wood to warp or finishes to delaminate.

> Do not place hot items (e.g. hot drinks) directly on to the surface. Make sure you always use a placemat or coaster.

Assembly Instructions

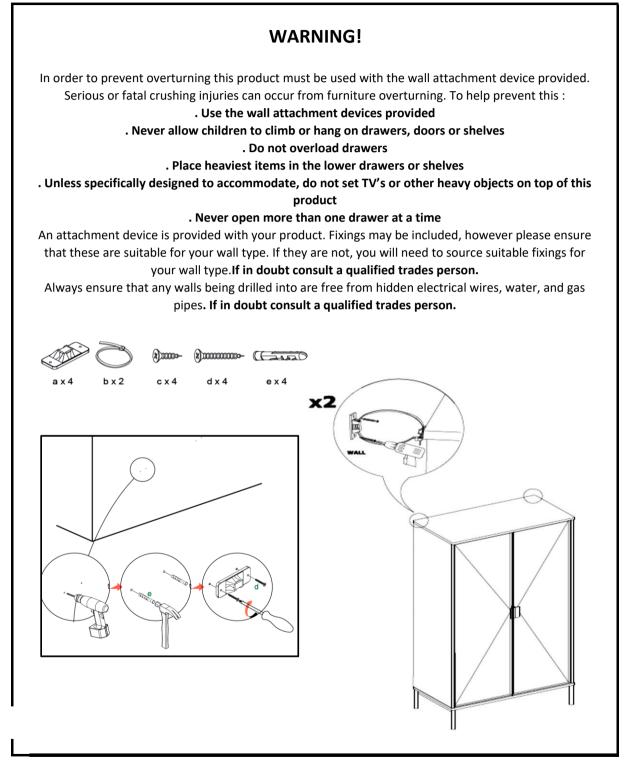


Page 3 of 12

Assembly Instructions


Assembly instructions										
Getting to Know your Product Components supplied. Please use this guide if you require replacement parts.										
#	NAME							Visual	Qty	Ctn
1	RIGHT SIDE PANEL							the second second		
2	воттом							<u></u>		
3	LEFT SIDE PANEL									
4	TOP SHELF							\bigcirc		
5	BOTTOM SHELF									
6	ТОР								•	
7	BACK PANEL							7A 7B 7C		
8	MATEL HANGER									
9	RIGHT SIDE DOOR							<u> </u>	,	
10	LEFT SIDE DOOR							()		
Fixtures and Fittings										
Main F	ixtures and Fittings									
Ref	Dimensions	Qty mm	10	20	30	40 5	50 60	70 80	90 10	00
А	Ax2	2								
В		1								
С	M6x16	14								
D	(M8x16	14								
E	\$ 	26								
Other	Fixtures and Fitting	s Supplied (Not To	Scale)	-	-	-			-	
Ref	Dimensions	Visual	Qty							
F	4MM		1							
G			1							

Assembly Instructions

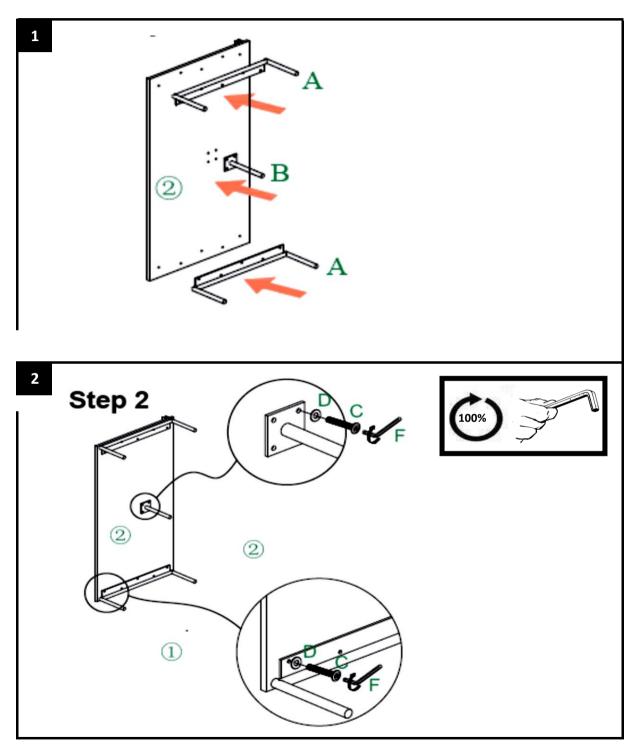


Page 5 of 12

Assembly Instructions

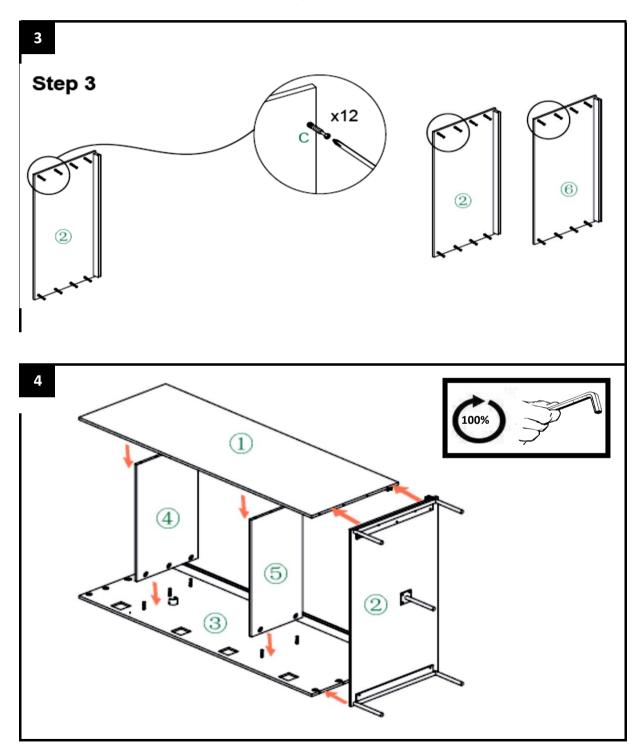


Assembly Instructions

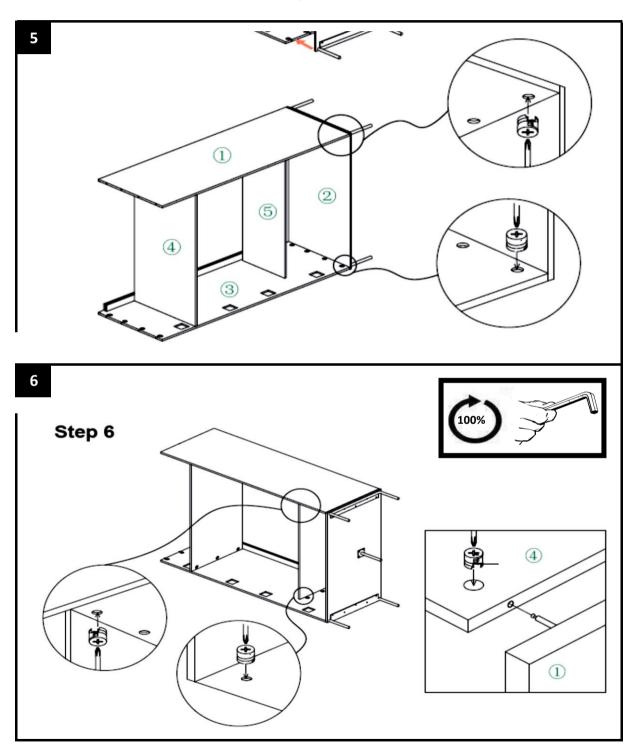

Page 7 of 12


Assembly Instructions

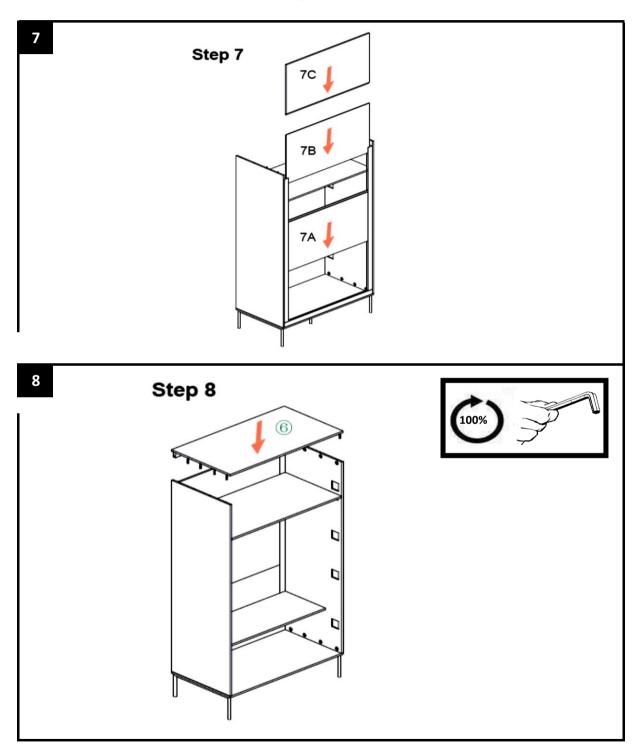

Page 8 of 12


RP04 - RAPHIA WARDROBE

Assembly Instructions

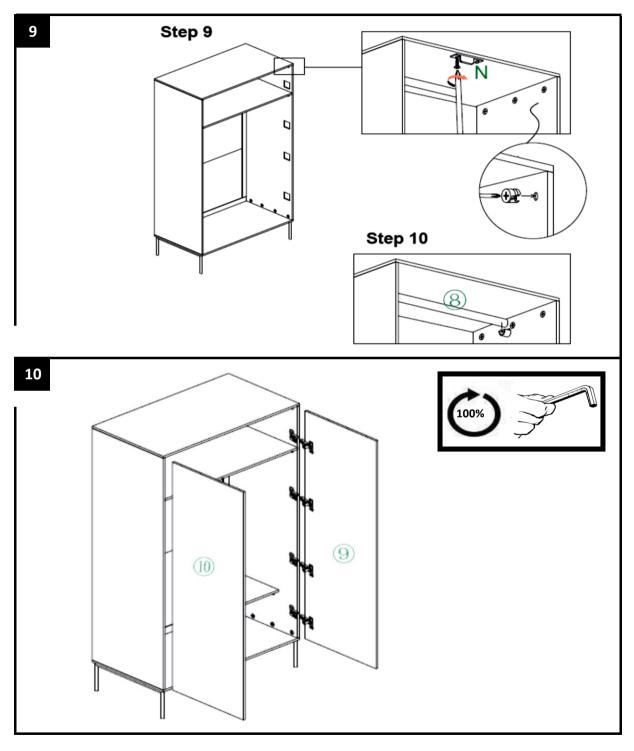


Page 9 of 12

Assembly Instructions

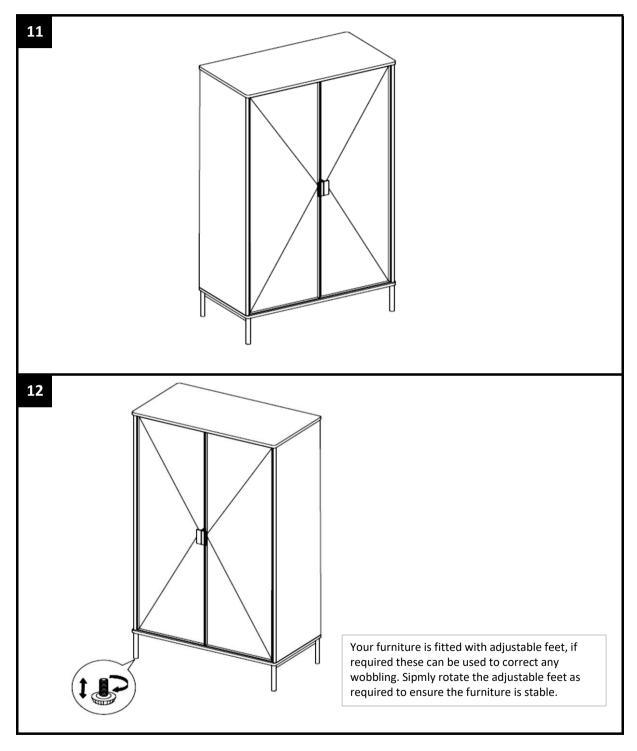

Page 10 of 12


RP04 - RAPHIA WARDROBE Care Guide

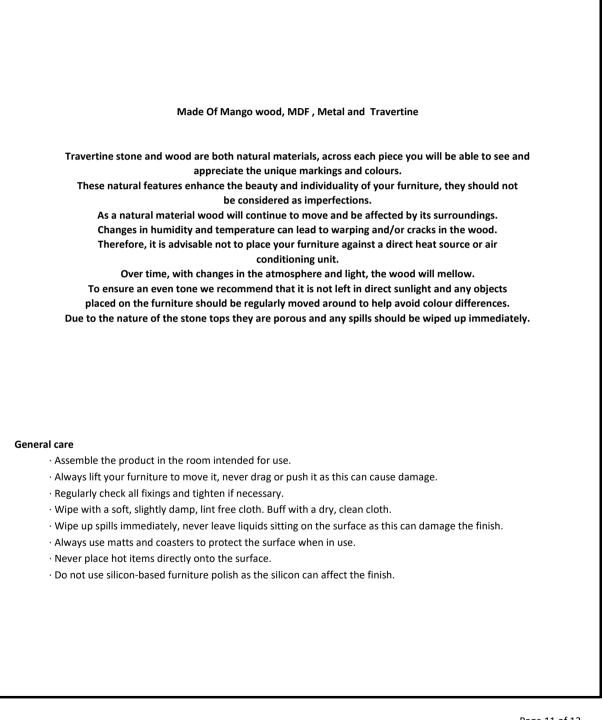

Page 11 of 12

Hinge Adjustment

Door Adjustment 1. Side Adjustment

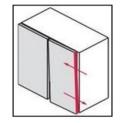

0

 
The right and left sides of the door panel are not flush with the side panels.

To move the door towards or away from the centre of the unit, loosen the screw indicated by the red arrow.

Adjust the position of the door and once it is in the required position retighten the screw.

Adjustments should be done only when the unit is in place.

2. Depth Adjustment



Q

The door will appear too far or too close to the unit.

 
To move the door towards or away from the unit, adjust the screw indicated by the red arrows and move the door towards or away from the unit until there is an even gap between the door and the unit.



Adjustment should be done only when the unit is in place.

3.

The top an



٦٥



Height Adjustment

The top and bottom of the door will not be flush with the unit.

To move the door up or down loosen the screws indicated by the red arrows on all hinges.

Adjust the position of the door and retighten all screws.

Adjustment should be done only when the unit is in place.

