

Low Profile Jib

Model - ILP



Description

When height is at a premium the **Low-Profile Jib** allows the movement of long and awkward loads from inaccessible locations, with the potential of 5 different lifting centres.

Model	Capacity (kg) at Centres (mm)					Weight (kg)	C of G (mm)	LLC (mm)
	500	1000	1250	1500	1750			
ILP-1.0-OP	1000	700	500	400	250	75	750	N/A
ILP-1.5-OP	1500	1100	900	650	450	80	750	N/A
ILP-2.0-OP	2000	1600	1200	900	600	89	750	N/A
ILP-3.0-OP	3000	2100	1600	1100	850	107	750	N/A
ILP-4.0-OP	4000	3200	2500	1900	1100	118	750	N/A

Standard Features

- Multi hook positioning from 500-1750 load centres
- Supplied complete with swivel hook and bow shackles
- Four way pocket entry for ease of storage
- Maximum fork section 150 x 50 mm at 281 mm centres.
- Zinc plated heel pins for safe attachment to truck
- Painted bright orange for safety



INVICTA TECHNICAL FILE
OPERATION, MAINTENANCE, & HEALTH AND SAFETY INSTRUCTIONS
MODEL: FORK MOUNTED LOW PROFILE JIB

Operation

1. Position the forks to the correct distance apart to locate into fork pockets.
2. Remove the heel pins from the attachment.
3. Drive the forks into the fork pockets.
4. Insert fork pocket heel pins directly behind the heel of the fork and attach safety lynch pin into hole provided.
5. Position the swivel hook and shackle to the desired lifting point, ensuring that the shackle is adequately tightened.
6. The attachment is now ready for use.

Maintenance

1. The Fork Mounted Low Profile Jib should be inspected weekly for general condition with particular attention paid to:
 - A – All weld points
 - B – Wear and distortion of fork pockets and heel pin attachments
 - C – Any damaged/worn components
 - D – General condition of swivel hook, safety latch and shackle
2. Damage or failure must be reported and rectified immediately prior to re-use of the attachment.
3. General surface rusting especially in the critical areas should be treated with proprietary inhibitors, primers and paint on a regular basis.
4. This product is certified for six (6) months from the date of manufacture after which it is the customer's responsibility to have the product re-tested at an approved testing facility or inspected and logged in a register by a competent person as advised by the HSE.

Health and Safety

1. The manager of the department or section where the attachment is to be used must be responsible for ensuring the operators are fully conversant with the attachment, its operation, maintenance and that the heel pins are fitted correctly.
2. Ensure both the truck and attachments are capable of handling the intended load and its contents.
3. Ensure the shackle pins are adequately tightened before each use.
4. Ensure that the heel pins are correctly inserted, retained and positioned in relation to the heel of the fork prior to each and every use.
5. Do not drive into the fork pockets without removing the heel pins.
6. Side pockets are for positional use only. **DO NOT MAKE SIDEWAY LIFTS.**
7. Ensure only vertical lifts are made and not angular lifts when using this attachment.
8. Do not shock load the attachment under any circumstances.
9. The safe working load must not be exceeded at each lifting point.

The Operator should ensure that the above product is used for the purpose that it has been designed, tested and intended to do and no deviation to this occurs. If in doubt, consult your Fork Truck Dealer or approved Attachment Supplier.