D312U

DISCOVER

Telephone Headset

User Manual

D312U is a lightweight telephone headset with retractable headband. It's compatible with all kinds of mobile devices and computers, supports the functions of playing music and HD web phone calls.

1. Design



- 1) Retractable headband
- Microphone
 3.5mm AUX Connector
- USB Connector
 Volume Control
- 6) Volume "+"
- 7) Volume "-" 8) Mute
- 9) Microphone Mute


2. Button Function

Note: The led indicator is red only when microphone is mute. Under other status, the indicator is blue.

No	Icon	Name	Function
1	(d)×	Mute	While playing music, short press to pause or continue to play.
2	-	Volume "+"	Short press "+" to volume up; Long press "+" to make it up to maximum volume.
3	_	Volume "-"	Short press "-" to volume down; Long press "-" to make it down to minimum volume.
4	Q	Microphone Mute	While in a call, single press the button, microphone is mute, and indicator is red; Single press the button again to back to a

normal status, and the indicator is blue.

3. Connection

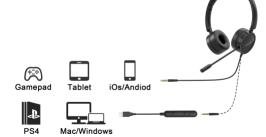

4. Operation Instruction

1) For Windows Computer

Step 1: Click on "Start" at lower left corner, and then click "Settings".



Step 2: Input "Audio" in "Windows Settings", and then choose "Manage audio devices".

Windows Settings				
Audio	>			
☐ Choose if Narrator plays audio cues				
Find and fix audio substack problems				
Find and for adio recording problems				
Manage audio devices				
Use audio description for video				
Show all results				

Step 3: In sound options, choose "D312U" in the list of "Playback" and "Recording".



2) For MAC or iOS Computer

Step 1: Click top left corner of your screen and select "System Preferences"



Step 2: Select "Sound" from the list.



Step 3: In sound options, choose "USB Audio Device" in the list of output and input.



5. Specification

- 1) Nominal Impedance (AC): 32Ω±15%
- Rated working power: 10mW
 Effective frequency range: 20Hz-20KHz
- 4) Microphone sensitivity: -42±3dB
- 5) Headset sensitivity: 115±3dB 6) Sound distortion: ≤3%

6. Common Problems

Q1: No sound in headset.

Solution: Ensure the connection is correct; ensure USB port of your computer is in good condition; ensure the 3.5mm audio connector

plugs into the jack perfectly; ensure the mute function is off.

Q2: A sharp voice in speaker or microphone.

Solution: The volume maybe too loud or the microphone is too close to your mouth. Please adjust your speaker to a suitable volume and the microphone in a proper distance.

Q3: Hear some buzz sound when in a call.

Solution: Try to use another USB port. The contact for USB port might be poor.

7. Points for attention

1) Using non-original accessories may cause low performance, body

- damage, short circuit and warranty failure.

 2) Disassembling your earphone may damage the earphone and would be beyond our service warranty.

 3) Do not use your earphone in a dusty environment.
- Please use a clean, soft and dry cloth to clean your earphone.
 Keep placing the earphone in its original package when not using
- it.
 6) Do not let your children play with the earphone. They may hurt
- themselves or damage the earphone.

 7) Do not place the earphone in hot or cold environment, otherwise

it may be temporarily unusable.