To open the filter chamber



Turn over the Airpura



Remove the 4 retaining screws



Take off the cover



Remove the gasket



Position the Prefilter inside the filter chamber



Place a felt gasket at the bottom of the filter chamber



Unfold the filter slider (Supplied with replacement filters or on request Part#6F 001)



Roll it into a spiral



Insert the tube into the filter chamber inside the Prefilter



Let the spiral open to fill the opening



Open the top of the spiral to make a slight funnel



Insert the Carbon canister into the funnel and hold it straight



Let the canister slide down thefilter slider



out of the cavity using both hands and let the canister slide to the bottom of the cavity



Pull the filter slider up



Remove the filter slider and fold it for further use



Slide in the Hepa filter



Replace the gasket



To close the filter chamber

Position the indentation in the cover into the center of the HEPA filter



Replace the 4 screws and tighten



Turn the Airpura back on casters

OPERATING FILTER REPLACEMENT DIRECTIONS

TO BEGIN USING YOUR

AIRPURA

Inspect the exterior of your Airpura to verify there is no damage from shipping. If any damage is noted, please follow the instructions from the distributor returns policy.

Wipe the unit with a damp cloth to remove any dust from packaging

Plug the unit into a regular grounded 110 volt outlet

Turn on the unit to MAX and allow it to run for at least 30 minutes

Set the variable speed control to the level you wish

The most efficient way to use your Airpura for regular air quality maintenance is to run it at a low speed **24 hours a day 7 days a week.**

Always maintain a humidity level of approximately 40% in your home to ensure the unit is operating at optimal levels. When using purifer with a dehumidifer, keep dehumidifier at least 6 feet away.



FILTER MAINTENANCE AND REPLACEMENT

The Prefilter


Can be vacuumed from the exterior of the unit once a month or more often. Should be replaced at least after 12 months of use

To vacuum the Prefilter

Use the brush attachment on your vacuum cleaner Vacuum slowly around the mesh surface of the filter chamber

IMPORTANT SAFETY NOTE

Please ensure air purifier is turned OFF when plugging into a power source. Failure to do so may result in motor potentially stalling and/or burning.

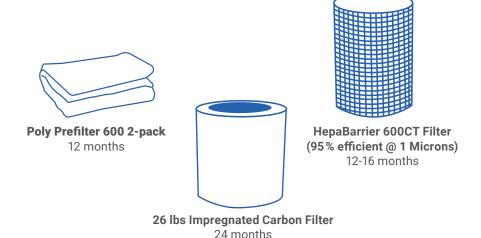

Technical specifications

Odors, airborne chemical control and VOC control

26 lbs super enhanced impregnated activated Carbon 13"H x 13.25"OD x 7.5"ID

Particle removal

HepaBarrier

Carbon bed

3 in deep x 570 in² surface

Air Flow 635 cfm

More cfm than any other home unit available

Prefilter

570 in² x 1 in

Post particle filter

306 in²

Size

23 in x 15 in

Weight

49 lbs total

Watts

120 on high / 40 on low

Sound Level

30.2* db on low (at 6 feet) 63.0 db on high (635 cfm) *at test conditions









Air purifiers models and filter configurations

| Prefilter | |
|------------|--|
| Alternates | Cotton Prefilter TarBarrier Prefilter |