

#### **TOOLS REQUIRED**




#### панние

(Not Included)



#### Philips Screwdriver

(Not Included)

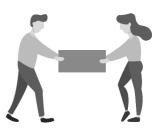

2 - People Recommended

#### **ASSEMBLY RATING**



EASY → DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

VERSION # 21-06-30



Are you missing anything?  Double-check all parts, hardware and accessories listed are all accounted for.	
Should we send any replacements?  Are there any irregularities or flaws in the parts? We can send replacements!	

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

#### Prep Time!

Please review the assembly instructions and all diagrams prior to assembling. Arrange parts as recommended on Page 7 and group identical hardware together to make assembling easier.

# PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





#### **Teamwork**

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





#### **Suitable Location**

Assembling near the area of the intended location is highly recommended.





#### **Sufficient Space**

Make sure you have enough space to move around during the assembly.





#### **Avoid Scratches**

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.





#### Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

# ASSEMBLY AND CARE ADVICE



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.



Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.



After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

# CAM LOCK FASTENER ASSEMBLY INSTRUCTIONS

#### Note:

Every cam lock bolt must have a cam lock connector in order to fasten the parts together.









cam bolt

cam lock


screwdriver

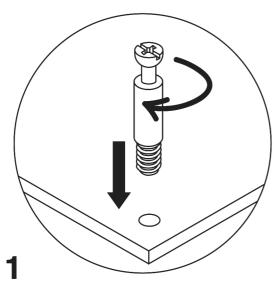


Screw the cam bolt into panel.

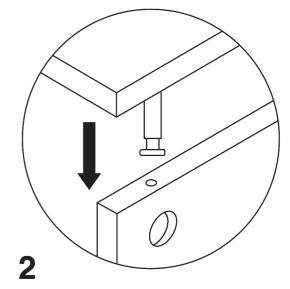

Insert the cam bolt into the bolt hole of joint panel.

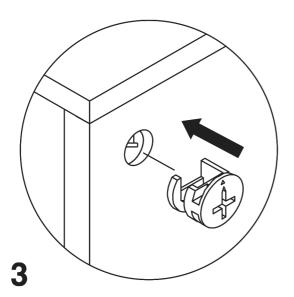

Align the cam lock with its side opening (or arrow) pointing to cam bolt.

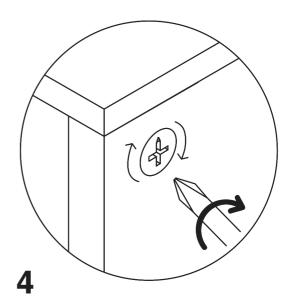



Turn the cam lock clockwise gently until it will not turn any more.


#### TV STAND



 - Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

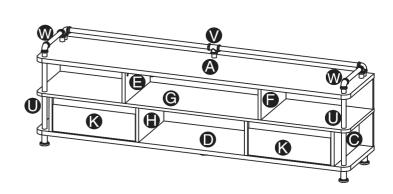


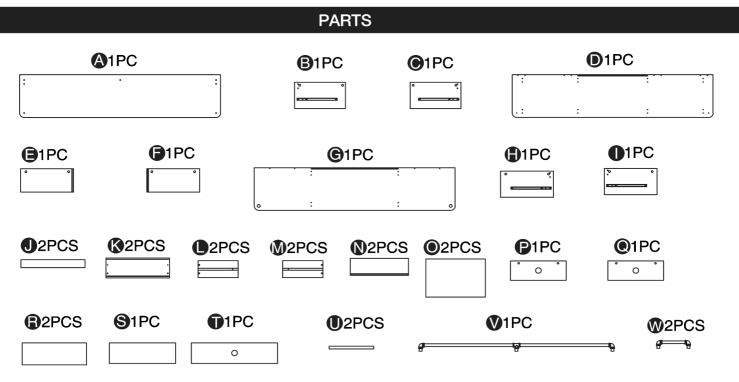




**HARDWARE** 




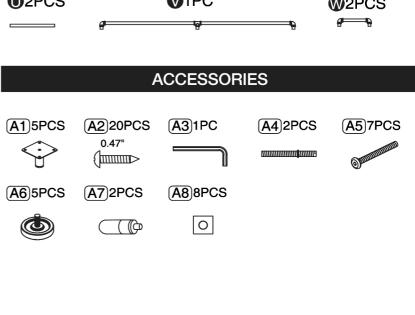


# **GET READY**

Please group boards as below.

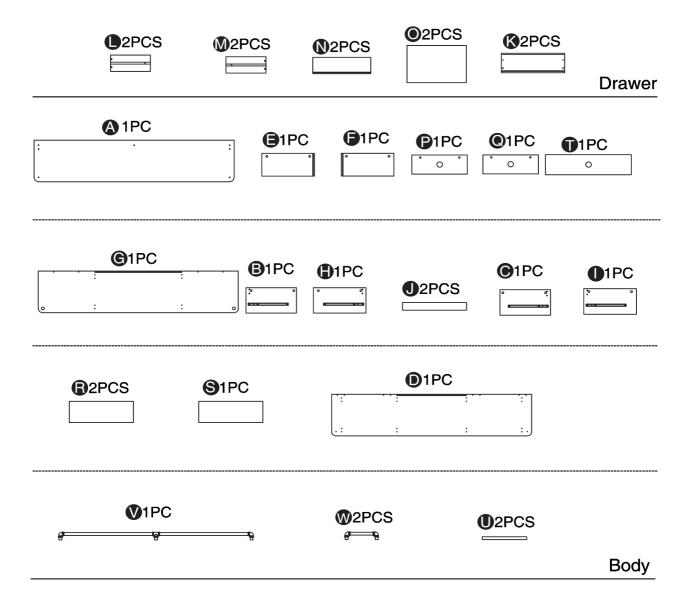

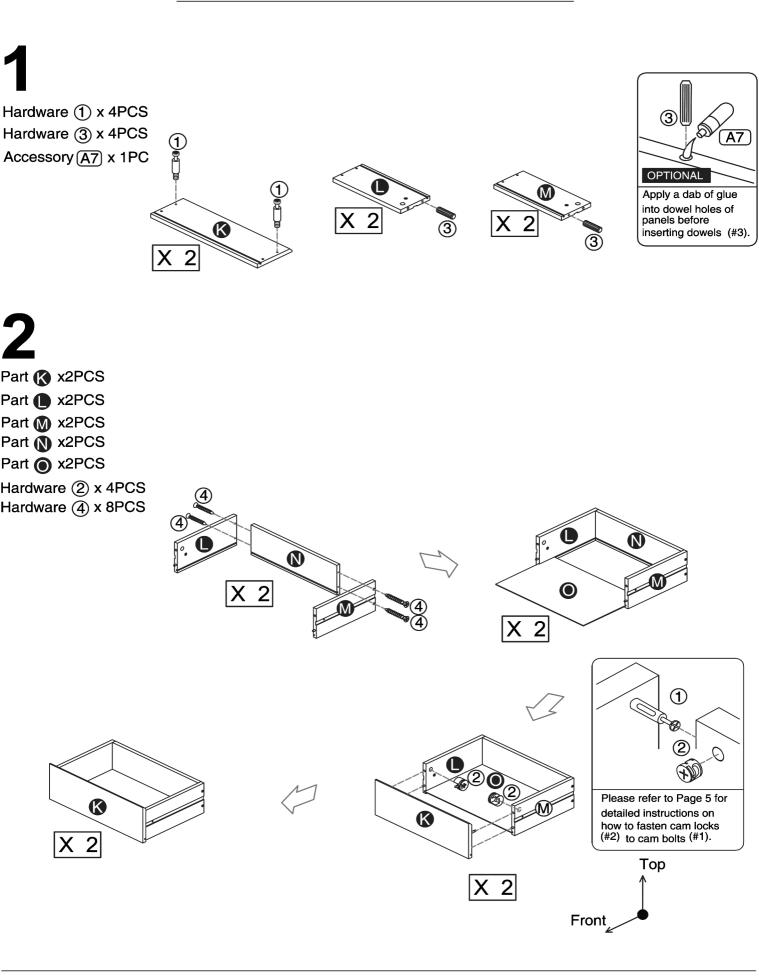


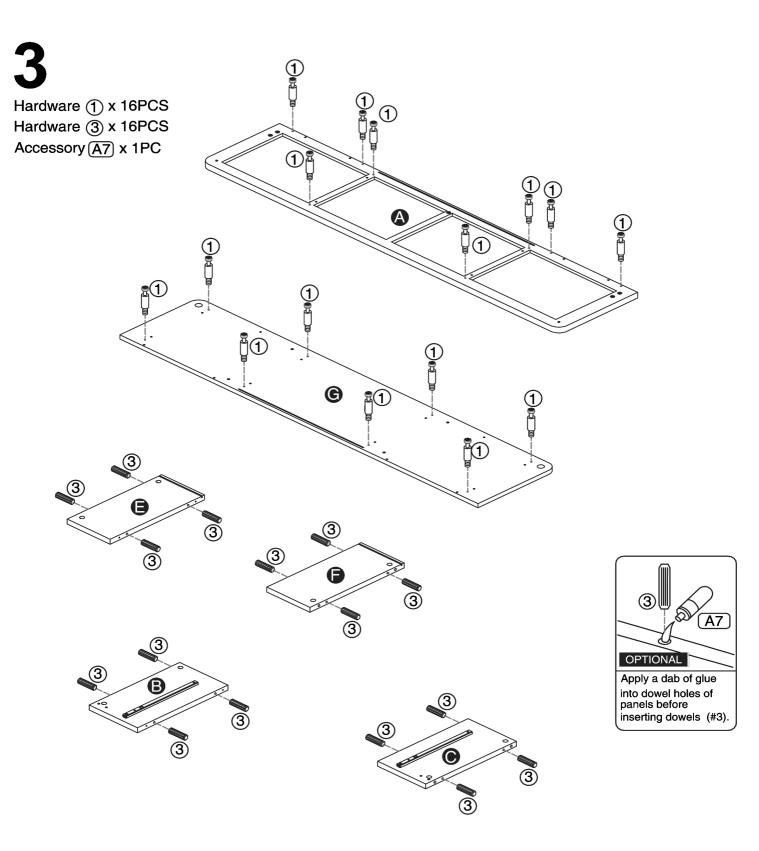


4

Hardware ③ x 34PCS

Accessory (A7) x 1PC

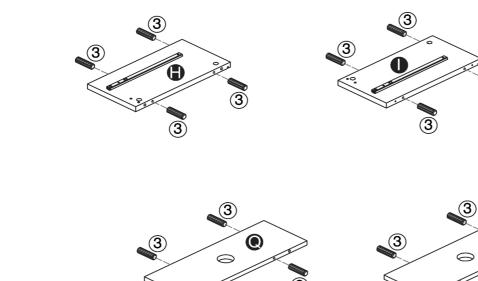


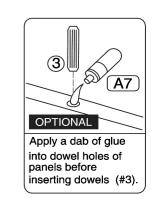


3

P

<u>3</u>

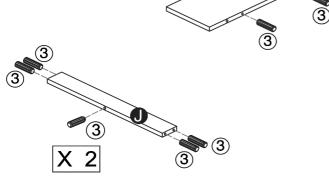



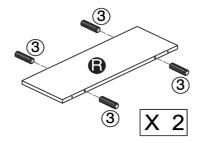

5


Part (B) x1PC

Part ( x1PC

Part (1) x1PC

Part 1 x1PC

Part ① x2PCS

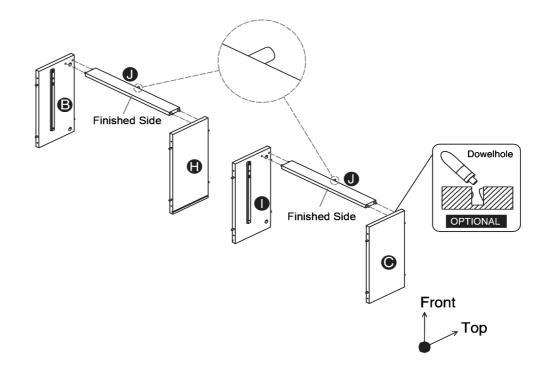

6

Part A x1PC

Part V x1PC


Part W x2PCS


Accessory (A3) x 1PC

Accessory (A5) x 5PCS





Recommend using a power tool to only tighten hardware (#A5) faster. Accessory (#A3) could also work for hardware (#A5) if a power tool is not present.

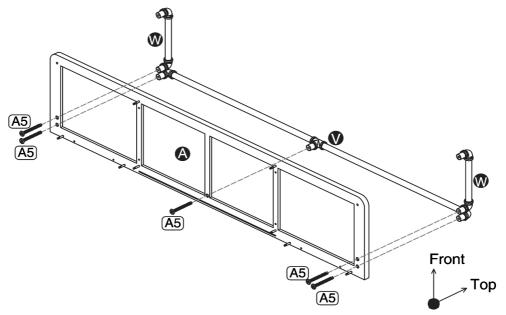


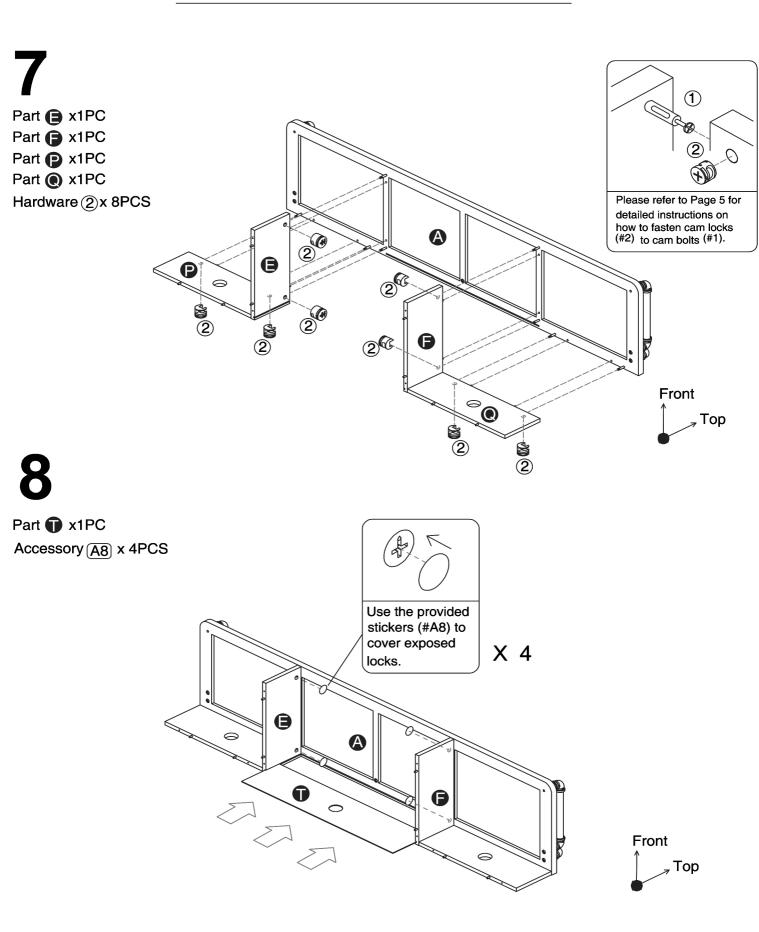



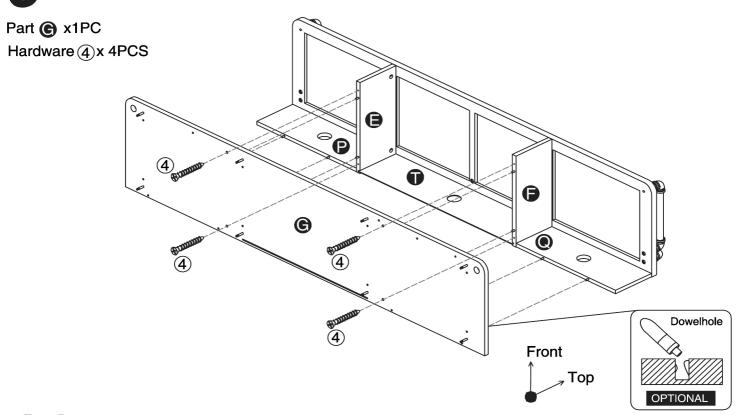

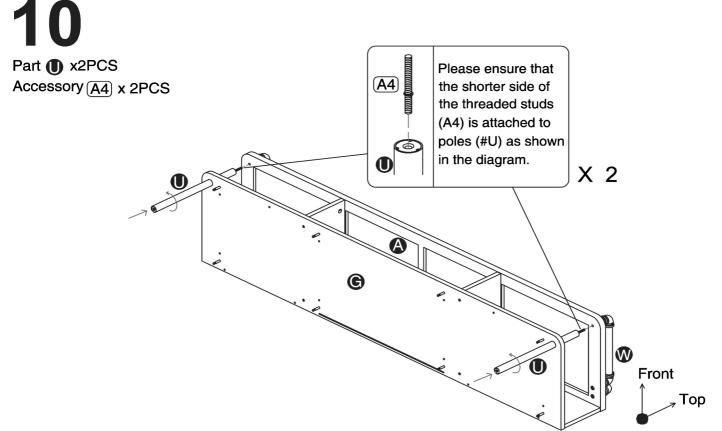

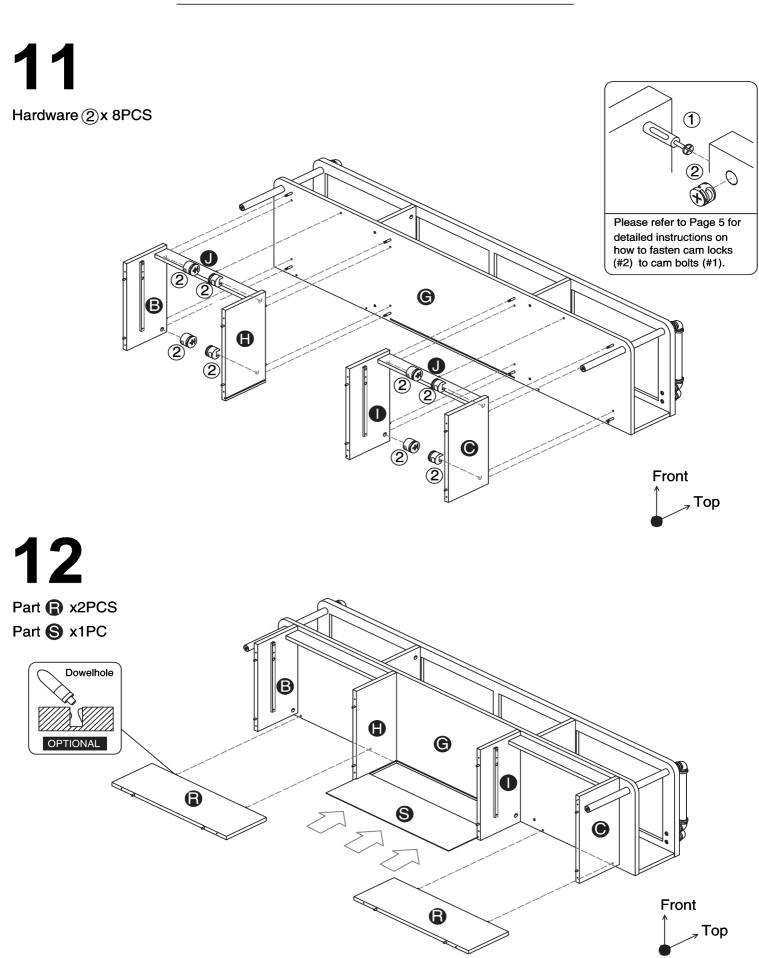


# 13

Part 


x1PC

Hardware 4x 12PCS

Accessory (A5) x 2PCS

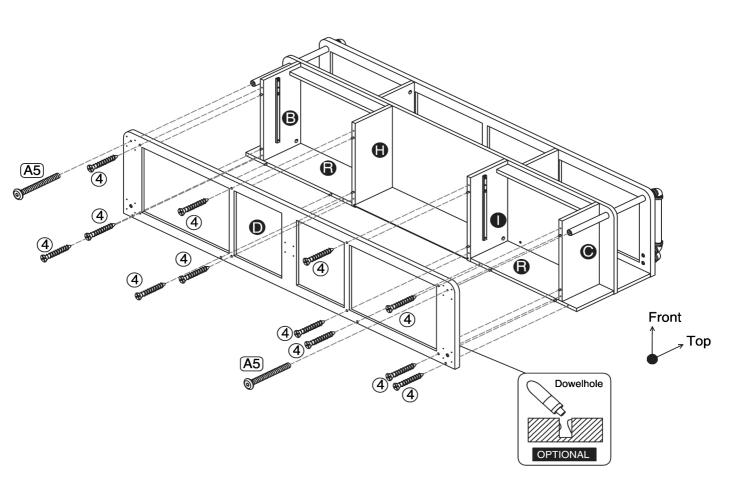


# 14

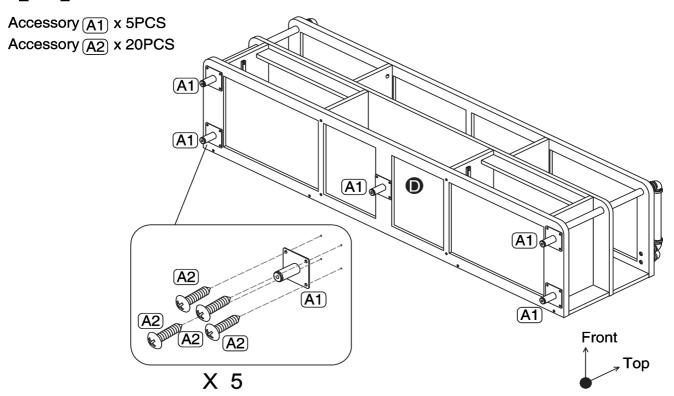

# **15**

Accessory (A6) x 5PCS

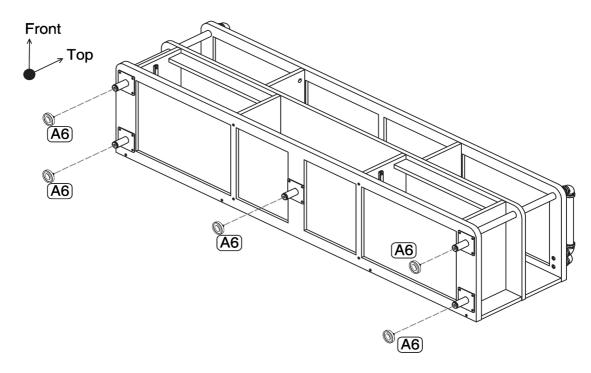



# 16

Hardware 6x 4PCS 6 Fully extend drawer rails then align the rail's smallest hole to the drawer side panel's holes. Secure with bolts (#6). 6 Top

Front 4

 **17** 

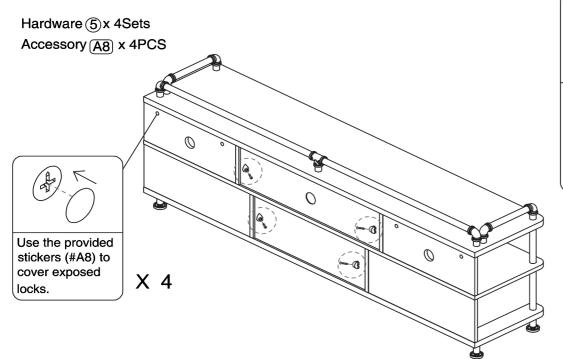



Evenly space fixative plates (#5) throughout gaps between back and side panels, then secure with screws (#5).

[ No pre-drilled holes ]

X 4



18

# ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and

✓ Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.

