 


# Assembly Instructions

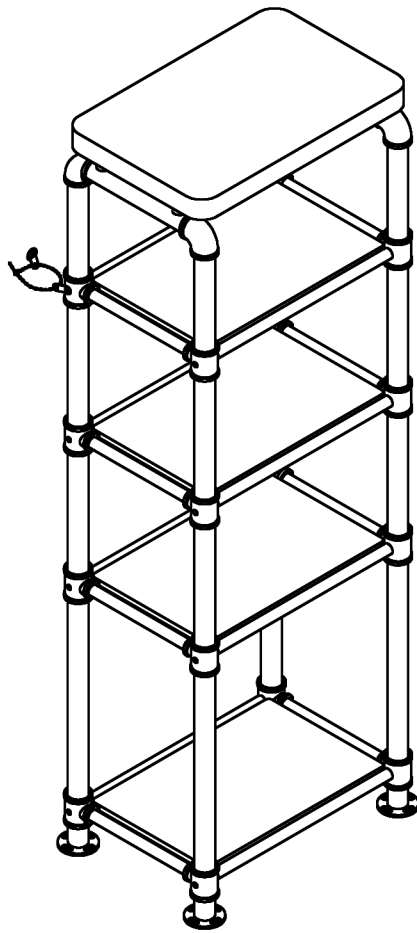

## ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

 
EASY



DIFFICULT


## Tools Required For Assembly:

Allen Wrench



(Included)

 Phillips Screwdriver



(Not Included)




2 PERSONS RECOMMENDED


# ASSEMBLY & CARE ADVICE

 FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


## BASIC ASSEMBLY TECHNIQUES

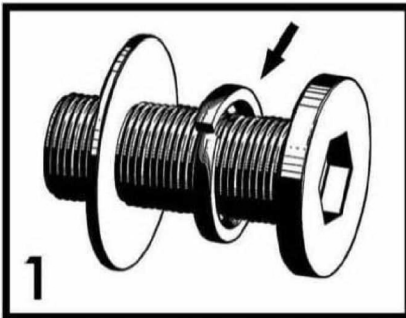

 
1  
When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

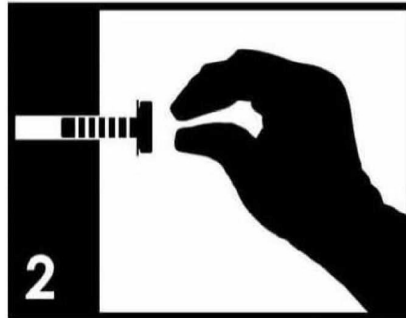

 
2  
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

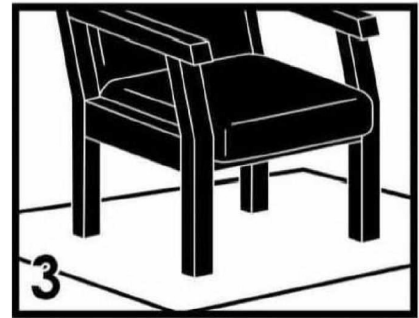

 
3  
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

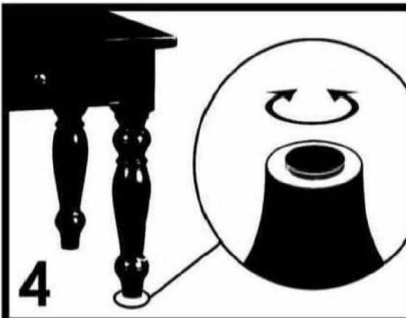

 4  
Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

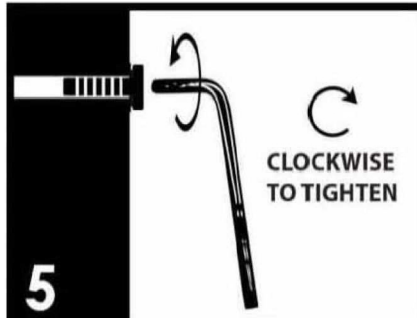

 5  
Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

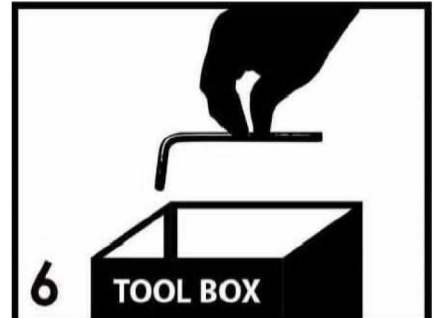


6  
Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



**FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.**

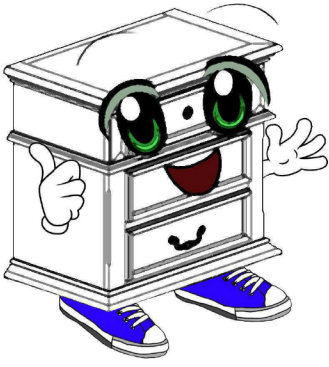


Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

### Parts List


 
#1 x 1pc  
Top Panel



#2 x 2pcs  
Side Frame



#3 x 4pcs  
Shelf



#4 x 4pcs  
Adjust Foot

### Hardware List



#A x 20pcs  
Bolt 1/4" X 3"



#B x 4pcs  
Washer



#C x 4pcs  
Floor Protector



#D x 1pc  
Allen Wrench M4



#E x 1pc  
Screw M4 X 37



#F x 2pcs  
Bracket



#G x 1pc  
Anchor



#H x 1pc  
Gird

 
 


#1

#2

#A x 16pcs  
#F x 1pc

Note, insert the bracket (#F) into this bolt.

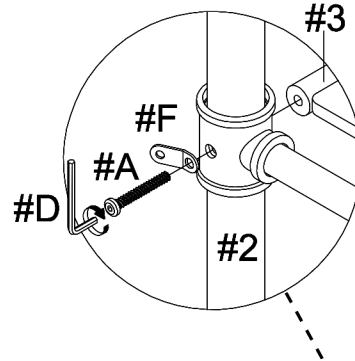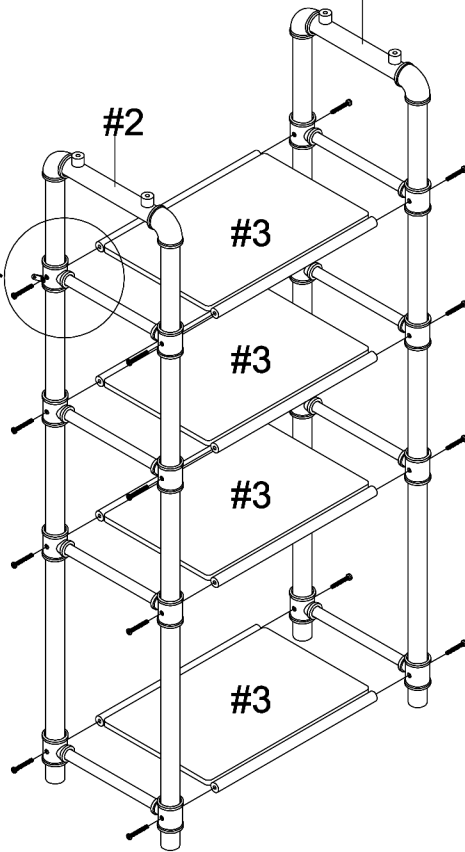

Align the shelves (#3) to the holes along the side frames (#2), then insert a bolt (#A) into each hole. Secure using the Allen wrench.





#2

  
2-1

2-2

#A x 4pcs  
#B x 4pcs  
#C x 4pcs

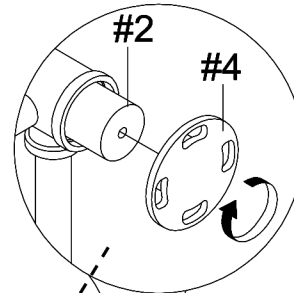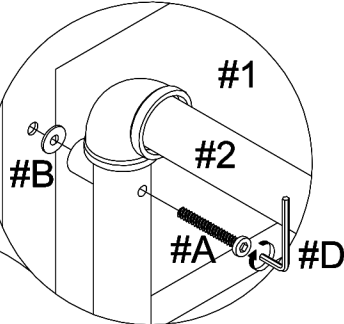


 
2. Insert the foot (#4) into each end, turn right to tighten.

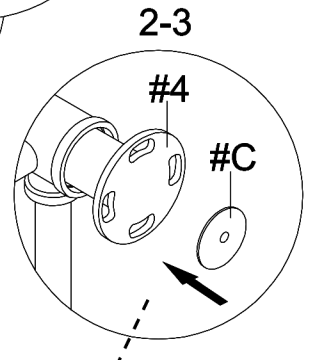

3. Apply a floor protector (#C) onto each foot (#4).

  
1. Align a washer (#B) to the top panel (#1), then align to the top of the side frames. Insert a bolt (#A) and secure.

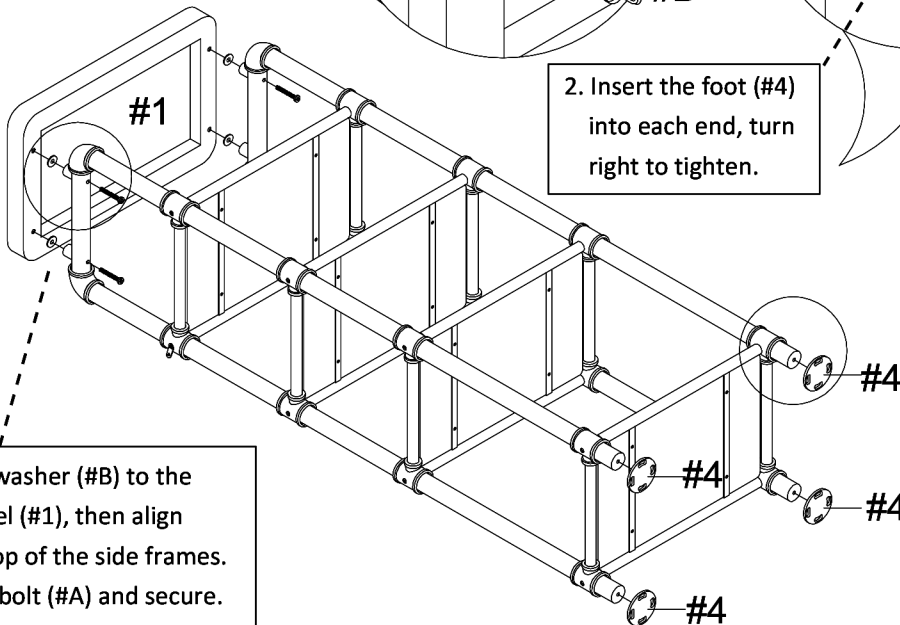

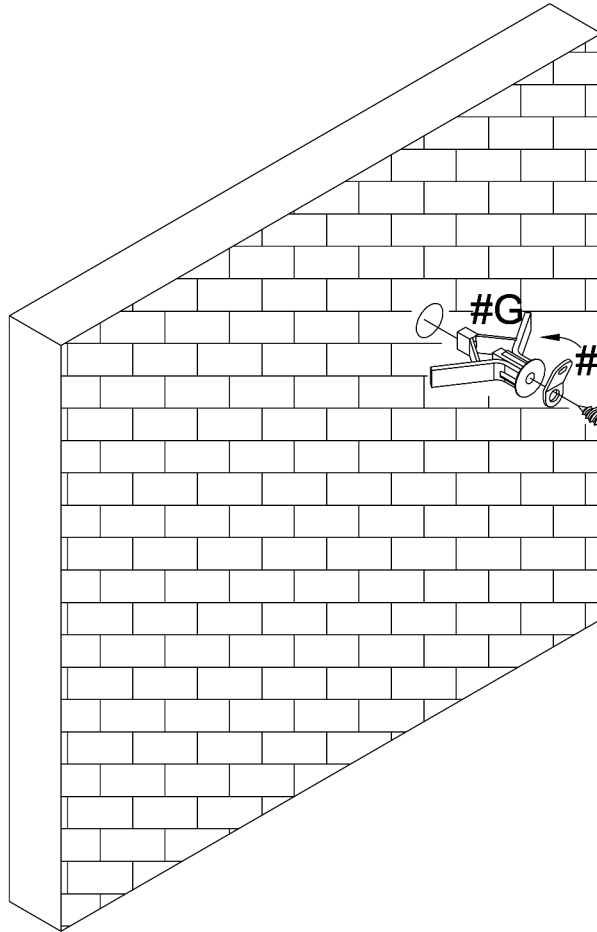


#E x 1pc  
#F x 1pc  
#G x 1pc

 1. Drill a hole slightly smaller than the anchor (#G), then insert the anchor until secured.
2. Align a bracket (#F) to the anchor, then insert a screw (#E). Secure using a screwdriver.

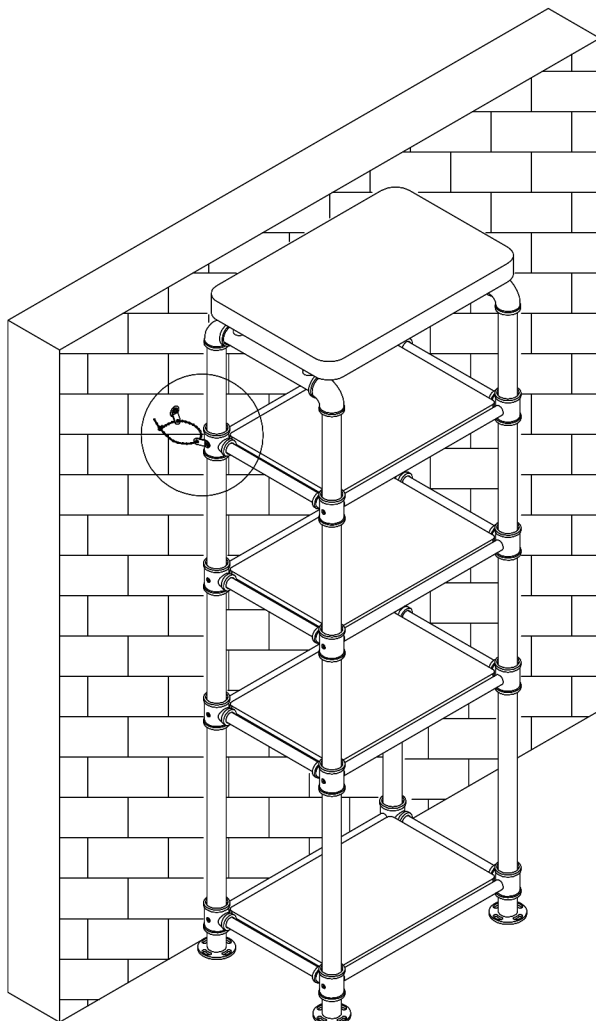

#H x 1pc

 To Prevent Tip over  
Product Must Be  
Attached To Wall

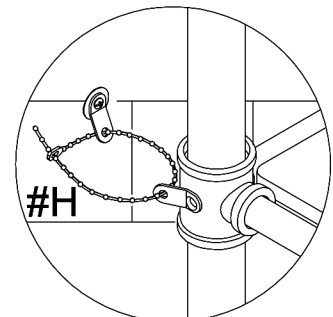

Insert the gird (#H) into the  
brackets, adjust as needed.

