 


# Assembly Instructions

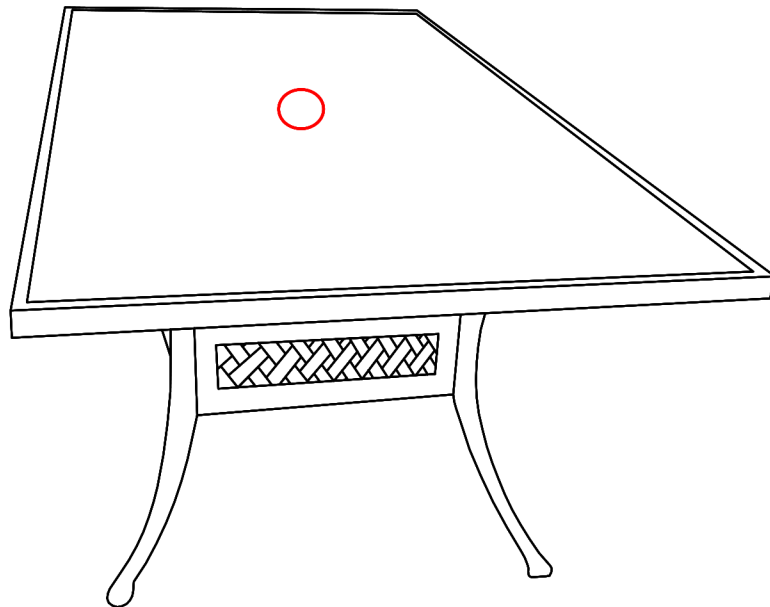

 
## ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY  DIFFICULT

## Tools Required For Assembly:

Wrench



(Included)




2 PERSONS RECOMMENDED


# ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


## BASIC ASSEMBLY TECHNIQUES

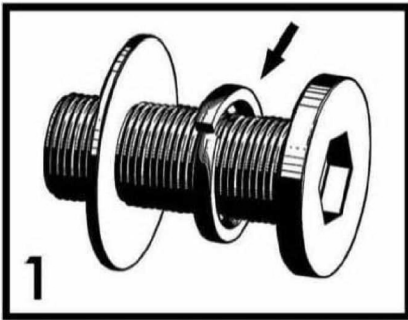

 When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

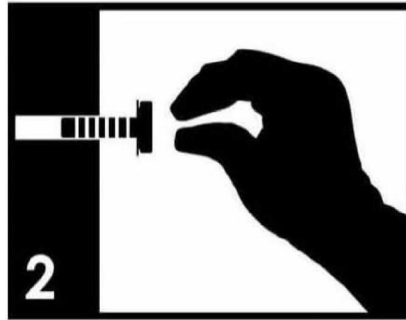

 
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

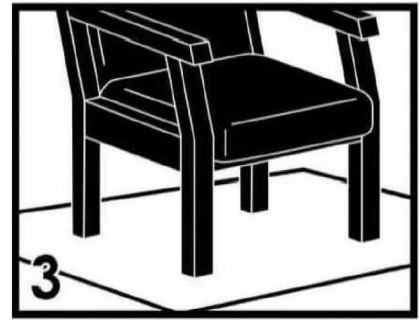


Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.



 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

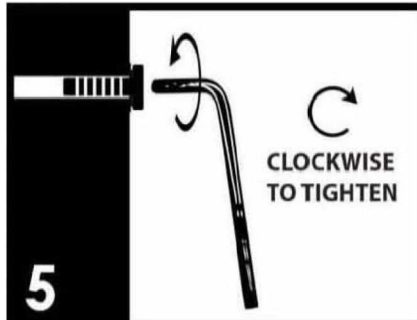

 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

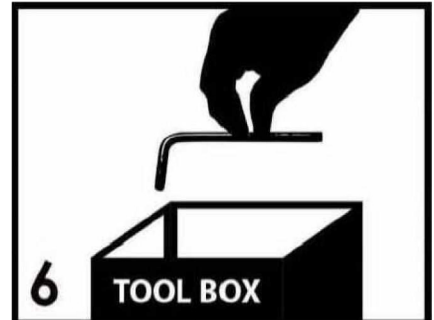


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.








**FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.**

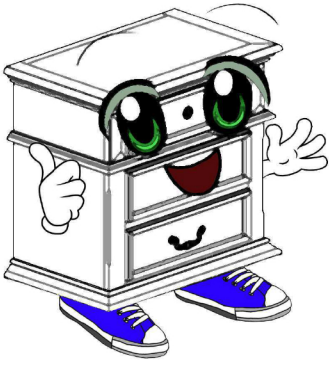







Before you begin, please read Page 2 of "Assembly and Care Advice".


And remember, do not tighten until each step is completed or instructed.

### Parts List

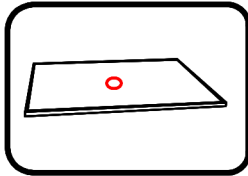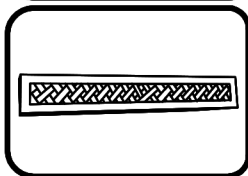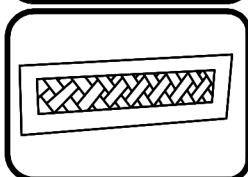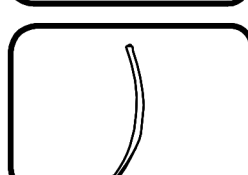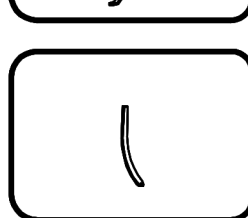     -  #1 x 1pc  
Table Top
-  #2 x 2pcs  
Leg Support Panel A
-  #3 x 2pcs  
Leg Support Panel B
-  #4 x 4pcs  
Table leg A
-  #5 x 2pcs  
Table leg B

### Hardware List

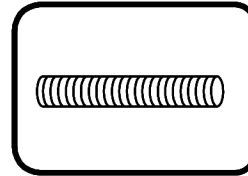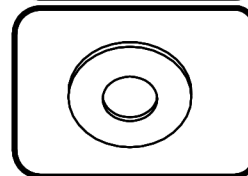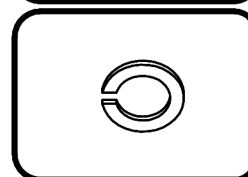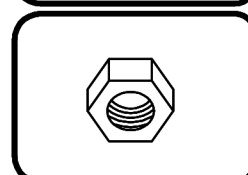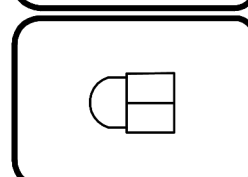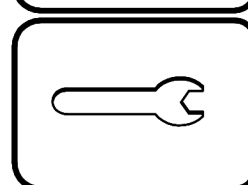       
-  #A x 6pcs  
Bolt M8X40MM
-  #B x 18pcs  
Flat Washer
-  #C x 18pcs  
Lock Washer
-  #D x 18pc  
Nut
-  #E x 18pcs  
Nut Cap
-  #F x 1pc  
Wrench

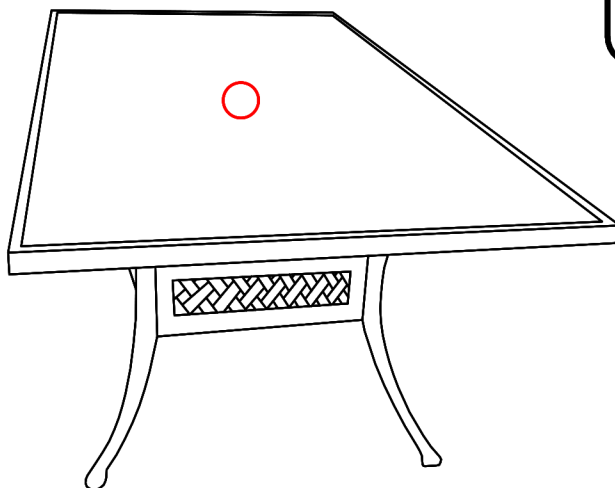




Screw bolts (#A) to table top (#1). Insert table legs (#4,5), flat washer (#B), lock washer (#C), and lastly secure with hex nut (#D) by using a wrench (#F) in that order. Place nut cap (#E) on top of the bolt.

 - #A x 6pcs
- #B x 6pcs
- #C x 6pcs
- #D x 6pcs
- #E x 6pcs

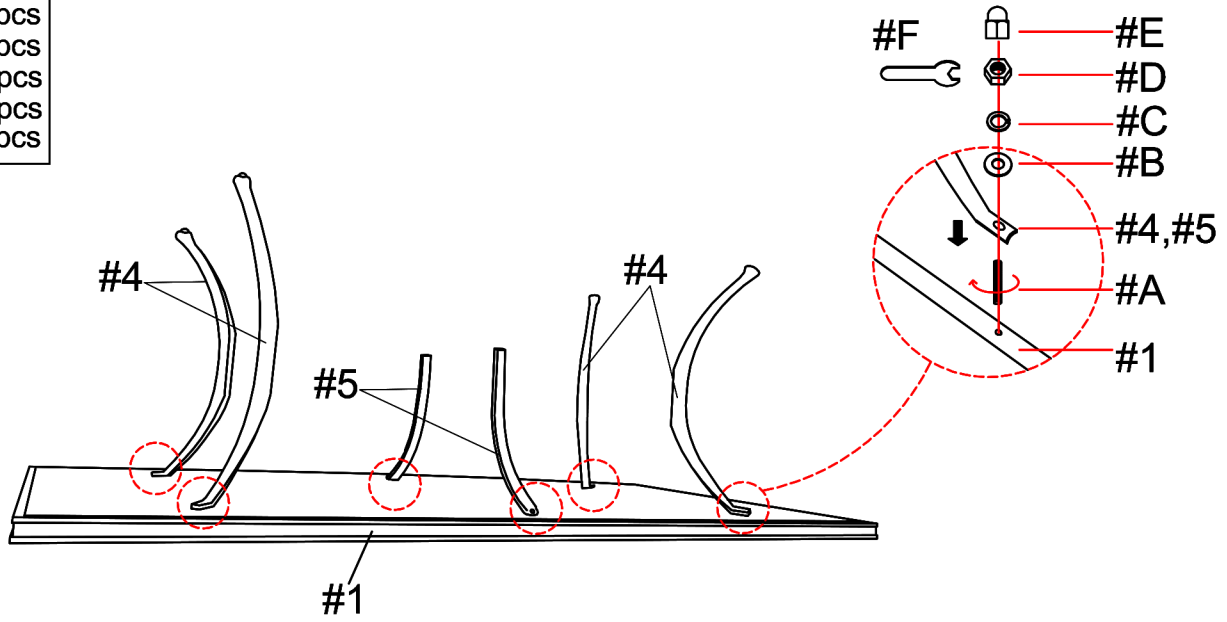

Align leg support panels (#2,3) to the table legs (#4,5). Insert flat washer (#B), lock washer (#C), and then secure with nuts (#D). Place the nut cap (#E) on the nut.

 - #B x 12pcs
- #C x 12pcs
- #D x 12pcs
- #E x 12pcs

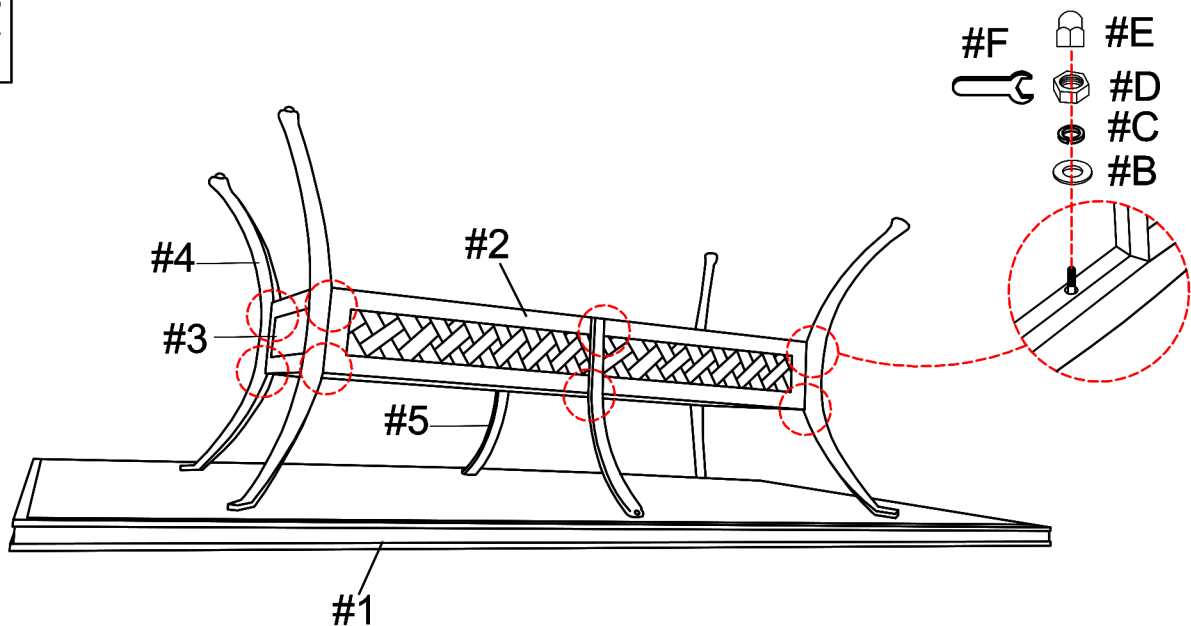



Umbrella cap can be removed to fit an umbrella.

