
TOOLS REQUIRED



Phillips Screwdriver

(Not Included)



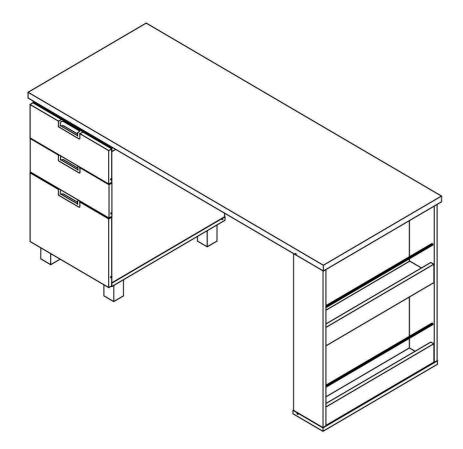

2 - People Recommended

ASSEMBLY RATING



EASY → DIFFIC

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



	Are you missing anything?	Check out our Quick Tips!
	Double-check all parts, hardware and accessories listed on Page 6 are accounted for.	We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
П	Should we send any replacements?	Prep Time!
	Are there any irregularities or flaws in the parts? We can send replacements!	Please review the assembly instructions and all diagrams prior to assembling. Arrange parts as recommended on Page 7 and group identical hardware together to make assembling easier.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.





Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.





Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE




FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.

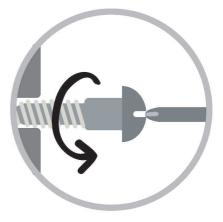

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.



After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

CAM LOCK FASTENER ASSEMBLY INSTRUCTIONS

Note:

Every cam lock bolt must have a cam lock connector in order to fasten the parts together.









cam bolt

cam lock


screwdriver

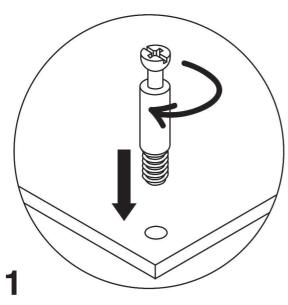


Screw the cam bolt into panel.

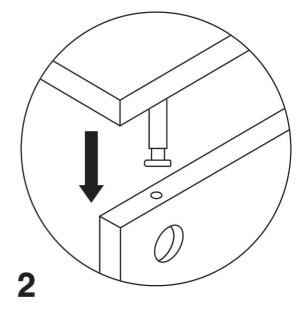

Insert the cam bolt into the bolt hole of joint panel.

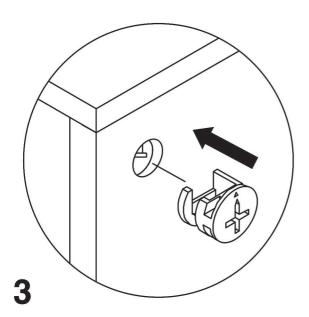

Align the cam lock with its side opening (or arrow) pointing to cam bolt.

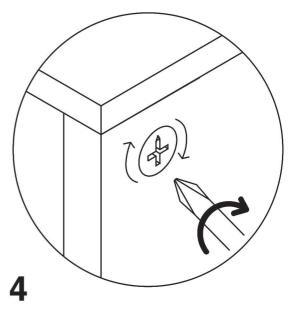

Turn the cam lock clockwise gently until it will not turn any more.


DESK



7 2PCS

0.78"

- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

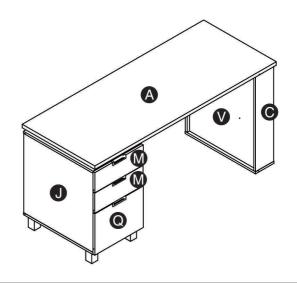


(A1) 3PCS

(A4) 1PC

(A2) 6PCS (A3) 2PCS

0.43"

(A5) 1PC

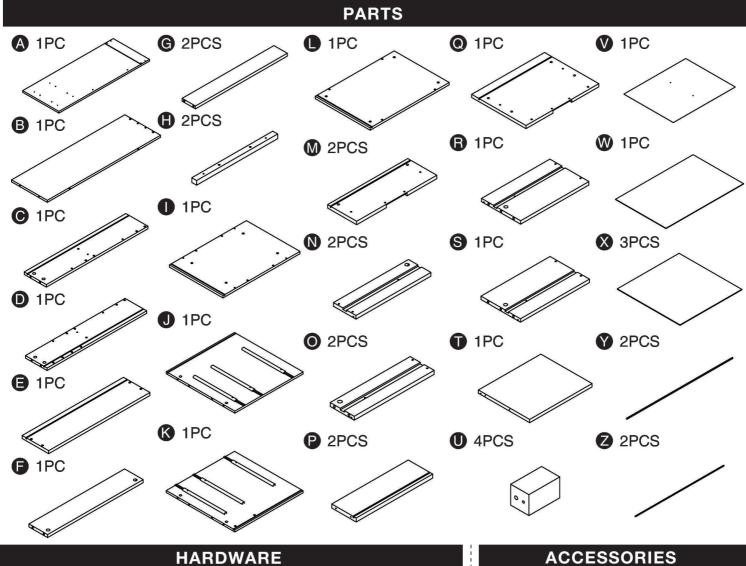

0.49"

(IIII

0.59

(1) 16PCS (2) 16PCS (3) 32PCS (4) 12PCS (5) 18PCS (6) 6PCS

8 2PCS 9 12PCS 10 12PCS 11 2PCS


1.25"

0.75"


1.18"

GET READY

Please group boards as below.

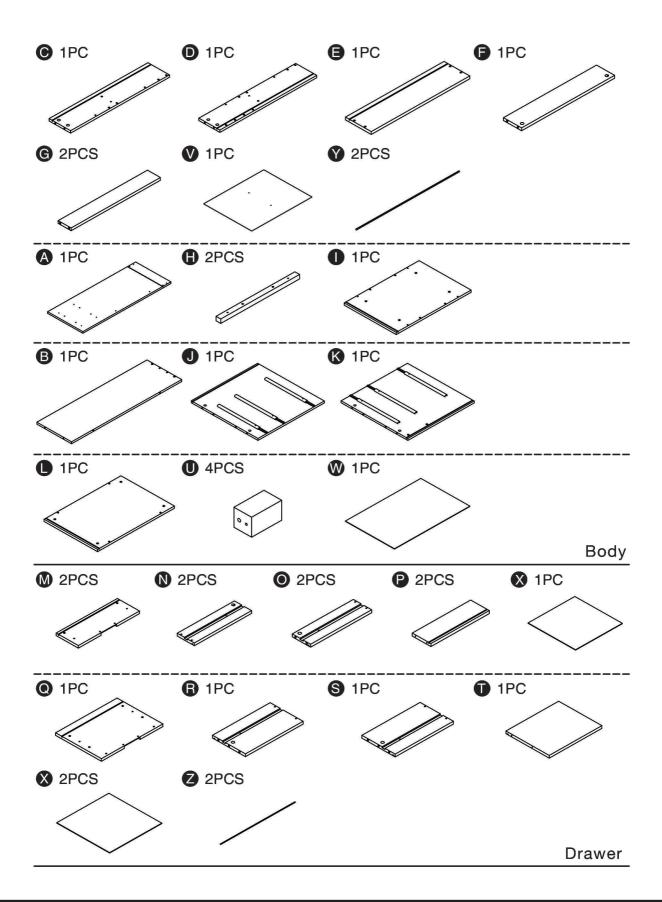


Hardware ① x6PCS Hardware ③ x4PCS Hardware ⑦ x2PCS Accessory (A5) x1PC 7 3 Use the shorter dowels (#7) on this side of panel (#B). B 3 3 3 (A5) Use the longer dowels (#3). OPTIONAL Apply a dab of glue into dowel holes of panels before inserting dowels (#3).

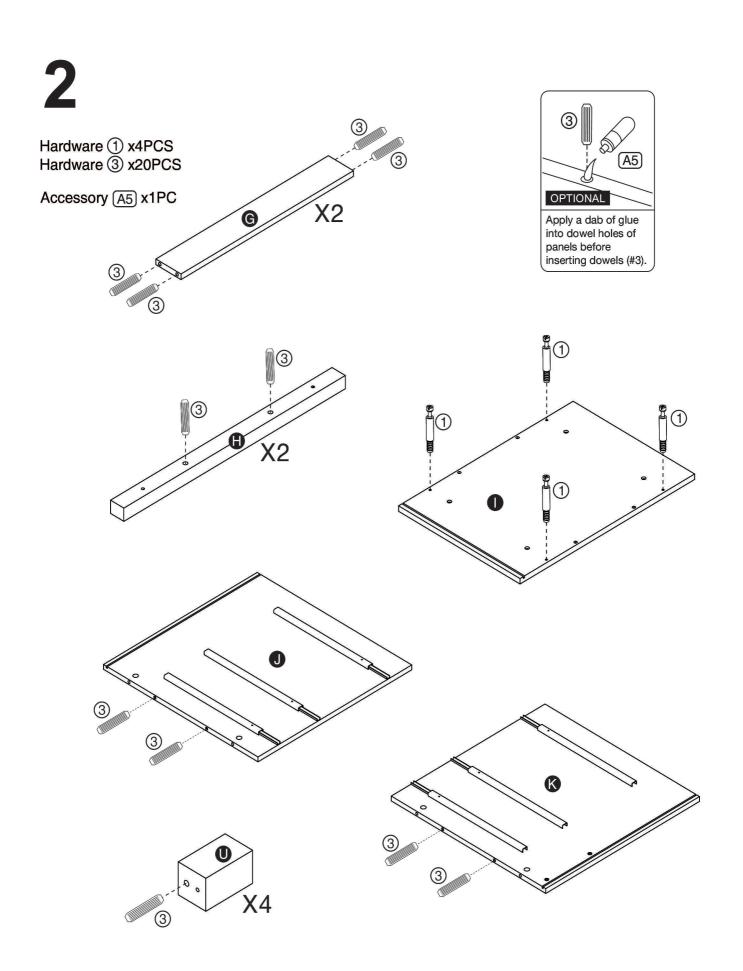


3


Hardware ① x6PCS Hardware ③ x8PCS


Accessory A1 x3PCS Accessory A2 x6PCS Accessory A5 x1PC

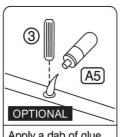



Apply a dab of glue into dowel holes of panels before inserting dowels (#3).

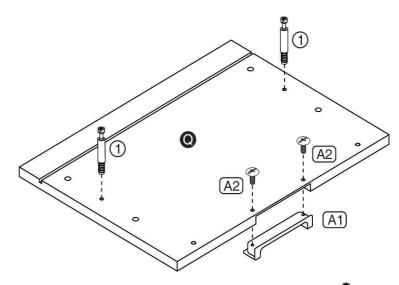


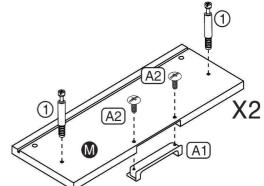

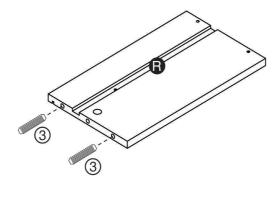

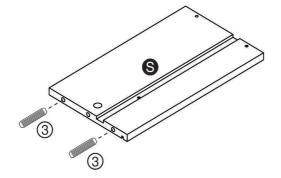

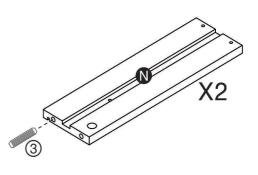

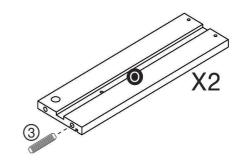


Part @ x1PC


Part D x1PC
Part C x1PC
Part C x2PCS

Part **Y** x2PCS

Hardware ② x2PCS

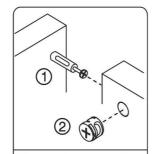



Please refer to page 5 for detailed instructions on how to fasten cam locks (#2) to cam bolts (#1).

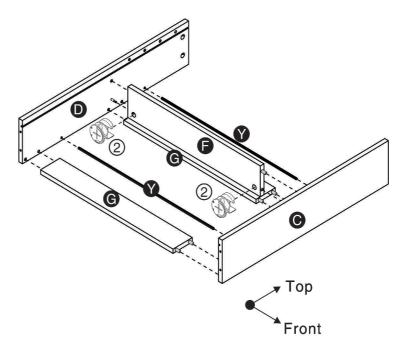

Part (3 x1PC

Hardware (5) x4PCS Accessory (A4) x1PC 0 (A4) Top Front

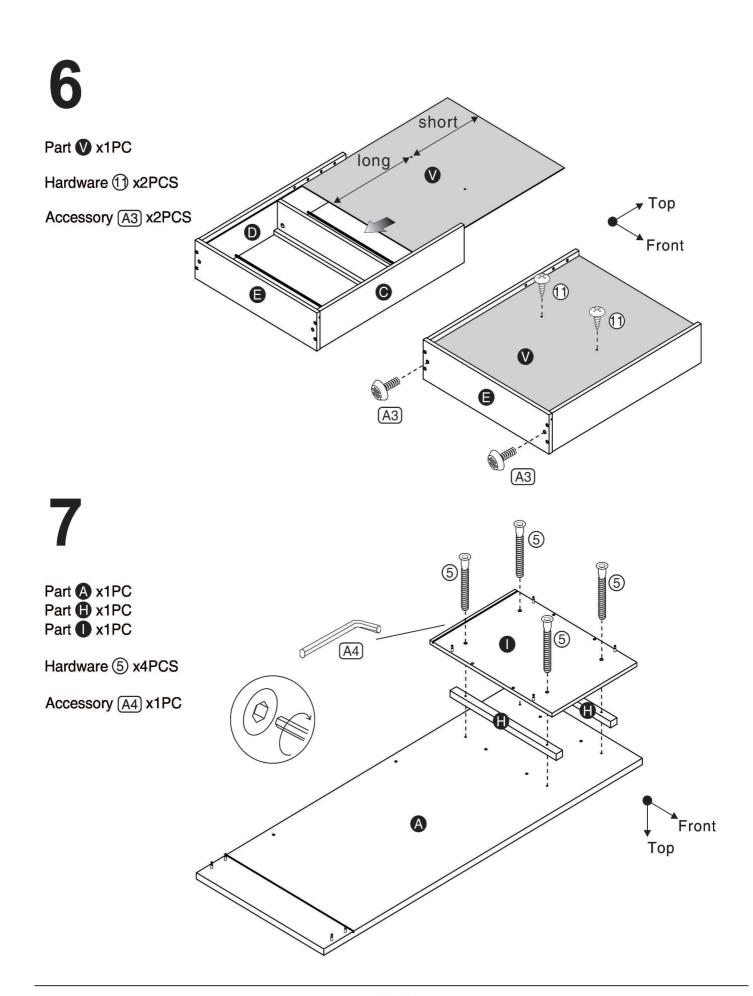

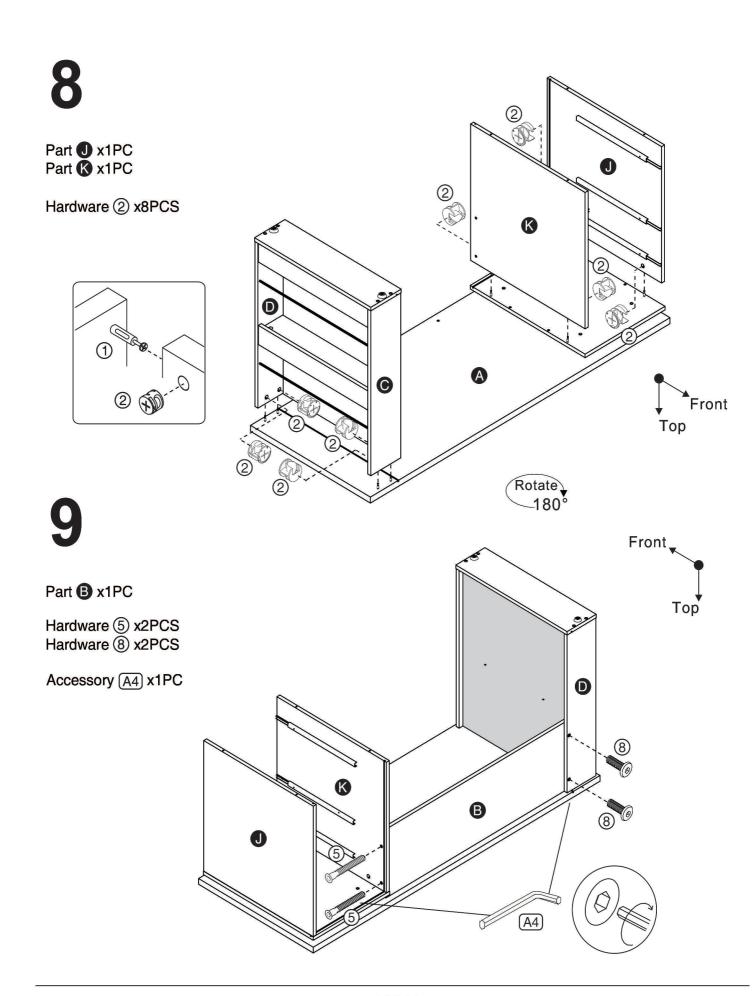


10

Part ① x1PC Part ① x4PCS

Hardware ⑤ x4PCS

Accessory A4 x1PC

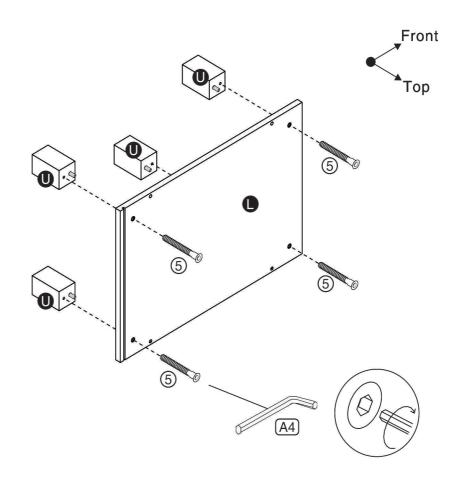


11

Part W x1PC


Hardware ⑤ x4PCS

Accessory A4 x1PC

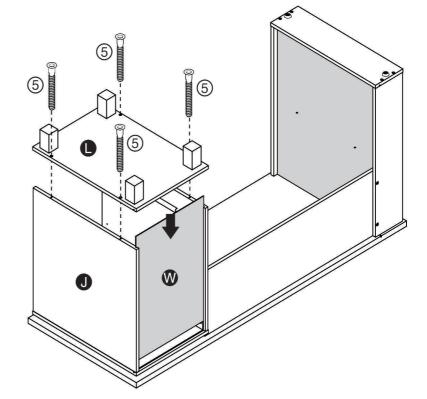

Front

12 Тор Part M x2PCS 0 Front X Part N x2PCS Part O x2PCS Part P x2PCS Part X x2PCS Hardware ② x4PCS Hardware ④ x8PCS 4 P 2 0 4 X2 13 Ø 8 Part @ x1PC Part (B) x1PC Part S x1PC Part x1PC **B** 4 Part X x1PC Part 2 x2PCS 0 Hardware ② x2PCS Hardware 4 x4PCS 2 0 S 4 0

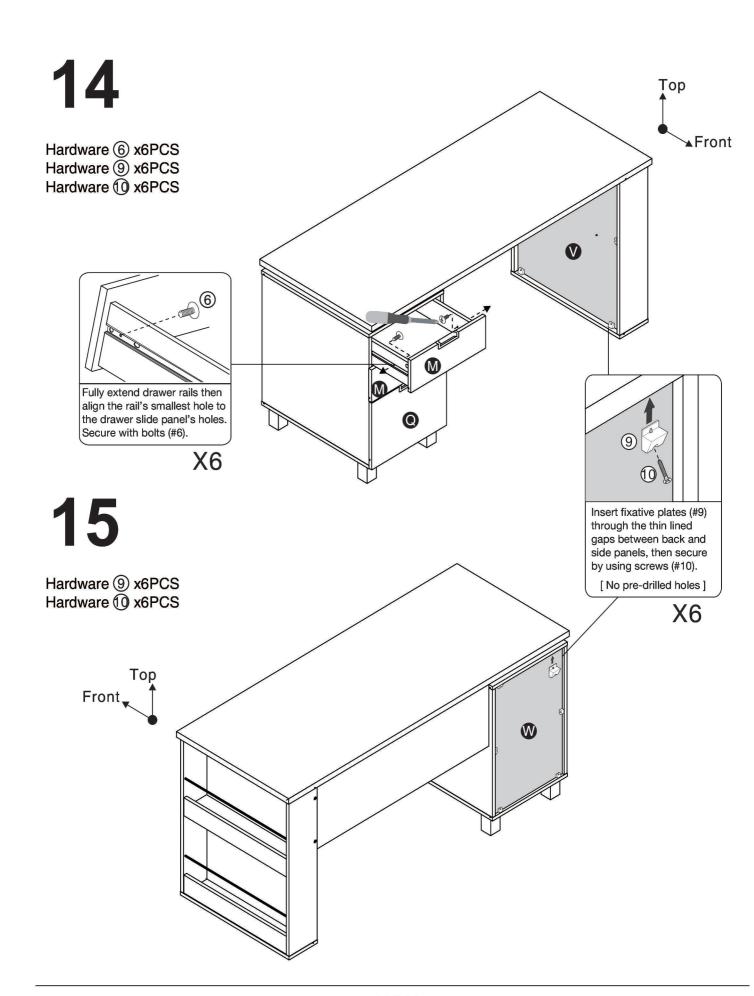

16

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the produst wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

Please retain this instruction manual and any order-related information for future reference.

✓ Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.

