 
Opera® Signature/Classic Easy-Press Handset Guide











ATTENTION

To avoid damage, the handset should always be hung up (e.g. on the mattress base or side rail) when not in use.

Press only one button at a time, pressing multiple buttons at one time, may overload and damage the system.





