

EVERVESSEL®

GLASS MULTI

User Guide

Built to last

Please read this information booklet to assist you in using, cleaning and caring for your Ever Vessel.

For more information visit evervessel.com

Care

Before first use give the vessel a basic clean.

Ensure silicone gasket is in working order before use. Fill vessel with water, tighten lid and turn upside down to check there are no leaks.

Do not heat in microwave, oven, stovetop or fire.

Not suitable for carbonated beverages.

Avoid dropping or other impact.

Do not freeze.

Warning

Glass is breakable and must be handled with care to avoid personal injury or property damage.

Do not use if glass is chipped, cracked or has significant scratches.

If product is damaged, discontinue use.

Not suitable for children.

Warranty

For product warranty information visit evervessel.com



Designed by Ever Vessel in Australia.

Made in China. To Last.

Basic clean



Dishwasher
(max 55 °C/130°F cycle)

or



Handwash
Wash with warm soapy water.
Rinse with fresh clean water.
Air dry completely.

Deep clean

1. Separate Tea Infuser and lid.
2. Soak in warm soapy water for 5 mins.
3. Brush scrub to remove any residue in base and lid.
4. Finish with basic clean.

Replacement parts

The silicone gasket can degrade and require replacement.

For all replacement parts visit evervessel.com

