



*Montana*  
*Woodworks®*  
*"From The Mountains of Montana to Your Home"*  
Assembly Instructions for Deck Bench and Deck Chair

Thank you for purchasing your heirloom quality furniture from Montana Woodworks®. Should you have any questions or need to contact sales or support, please do not hesitate to contact our corporate offices at 888.889.3728 or via E-Mail at: [cs@montanawoodworks.com](mailto:cs@montanawoodworks.com)

Tools Needed: 9/16" Wrench or Socket, Rubber Mallet

Before beginning assembly, please take a few moments to carefully read the instructions, familiarize yourself with the components and understand each step of the process. Likewise, please ensure that the hardware package contains the items as described below.

Parts List: (1) Back Assembly, (1) Seat Assembly, (1) Right and Left Arm Assembly

Hardware List: (8) 3" Lag Bolts & Washers

Assembly Instructions:

**Step 1.** Remove components from shipping boxes. You may lay the cardboard on the floor to prevent marring of finish.

**Step 2.** Lay one arm on the floor with holes facing upward.

**Step 3.** Insert tenons of seat assembly into the arm holes marked "A" & "B" in image on reverse side of this page.

**Step 4.** Insert tenons of back assembly into the arm holes marked "C" & "D".

**Step 5.** Leaving the newly created assembly in the same position, place the opposite arm onto the seat and back assembly tenons.

**Step 6.** Using a rubber mallet, tap arms as required to fully seat arms onto tenons of back and seat assemblies.

**Step 7.** Carefully set bench into upright position.

**Step 8.** Insert lag screws with washers into the pre-drilled holes on the outside of the arms.


**Step 9.** Ensuring all bench/chair legs are flush on the floor, slowly turn lag bolts until fully tight.

\*If bench/chair legs are not flush on floor, apply pressure on opposing corners of bench/chair until fully flush.

PLEASE NOTE: If you purchased your item "ready to finish" special care must be taken to properly apply a high grade final finish in a timely manner. Doing so will help protect your purchase from discoloration and damage caused by exposure to ultra-violet light and/or weather. If the products intended use is outside, please use an exterior rated finish to also protect from weather damage. See use and care instructions for further information. Failure to adequately protect item by application and as needed, re-application of a final finish may void warranty.



Back

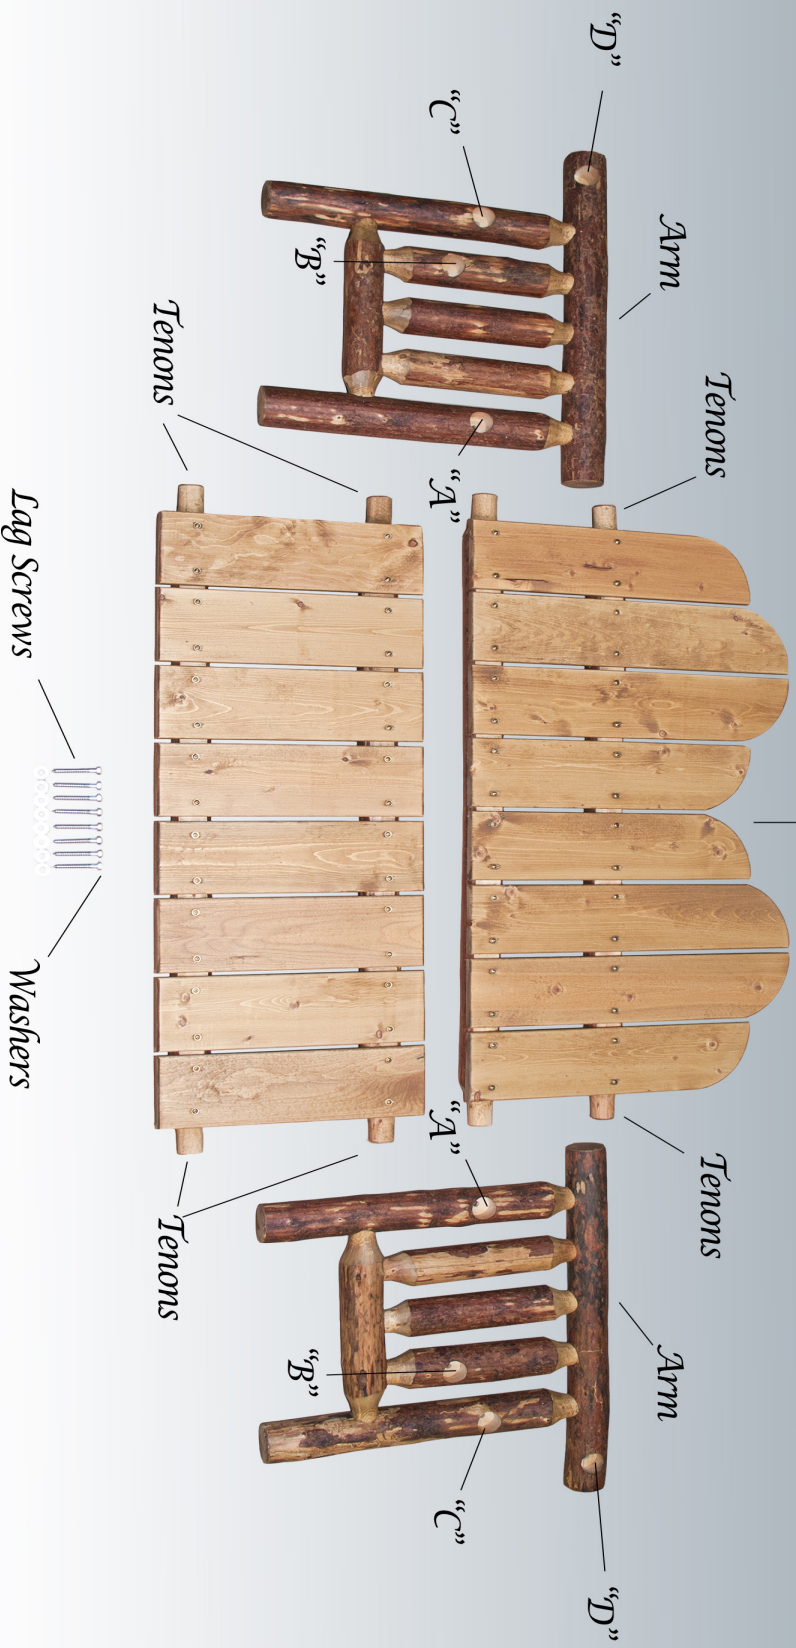

Glacier Collection Shown, Other Collections Similar