

INTERACTIVE WATCH & HEADPHONE SET

Thank you for choosing a Tikkers interactive watch & headphone set! This short guide will help you with the essentials, but please visit our website to access full instructions, helpful videos, FAQs and more, all designed to help you get the best from your Tikkers products.



CONTENTS

1. Interactive watch (with built-in Li-ion battery*1)
2. Micro USB cable
3. User's Manual

QUICK START GUIDE

First, ensure the switch on the back of the watch is set to ON. Press the home (on/off) button to wake the watch up. Press the home button for 3 seconds to wake up the watch from standby.

The watch may come with a small amount of charge, but we recommend a full charge before playing. A full charge will take about 3 hours.

When turning the watch on for the first time, the date and time setting screen will display first. Swipe up and down over the month, day, year, hours and minutes to change the current date and time.



When the clock is displayed on screen, press the home button to go to the home menu.

Note:

- If the battery level is too low and cannot keep the clock running, you will need to enter the time and date again after recharging.
- When the battery level is too low, only the clock display function is available. We recommend recharging the battery as soon as possible before further use.

AUTOMATIC SCREEN OFF

To preserve the battery life, the screen will automatically shut off after a short period of time when in clock mode.

Note: The auto screen off time can be set in Settings / Brightness Time. Please refer to the Settings section in this manual.

ACTIVITIES

CLOCK DISPLAY

When the home button is pressed, the clock will be displayed. Tap the middle of the screen to switch the clock face between analogue and digital. There are 10 analogue and 10 digital clock faces to choose from. Swipe left or right on the screen to see more clock faces. Press the home button to display the home menu for selecting other activities.



HOME MENU

Press the home button to display the home menu. There are 16 different sections to choose from.

- | | |
|-----------------|--------------------|
| 1. Time Teacher | 9. Video |
| 2. Alarm | 10. Photo Gallery |
| 3. Calendar | 11. Video Gallery |
| 4. Step Counter | 12. Calculator |
| 5. Stopwatch | 13. Torch |
| 6. Timer | 14. Voice Recorder |
| 7. Games | 15. Background |
| 8. Camera | 16. Settings |

- Tap the icon to enter the activity.
- Swipe left or right to scroll through the menu pages.

TIME TEACHER

Select the time teacher option from the main menu. Here you can make the owl character speak the selected time.

- Tap the hour icon or minute icon to select the time you want the owl to say.
- Tap to increase the hour / minute.
- Tap to decrease the hour / minute.
- Tap the clock or the owl to hear the time.



ACTIVITIES

ALARM

Select the alarm option from the main menu. Here you can set an alarm.

- Tap the clock icon on screen to change the alarm time.
- Tap the tick icon on screen to confirm the time setting. An alarm icon will appear in the top left of the home screen.



To change the alarm time:

- Select the hour and minute by swiping up or down on the hours and minutes.
- Tap 'OK' to confirm the chosen time.

Note: If the battery level is too low, the alarm will need to be set again.

CALENDAR

Select the calendar option from the main menu.

Here you can view the days of the year shown month-by-month.



STEP COUNTER

Select the step counter option from the main menu. Here you can record the amount of steps you take and the time in which you take them.

- Tap the play icon on screen to start recording the time.
- As you walk, it will count your steps automatically.
- Tap the pause icon on screen to stop recording.
- Tap the reset icon on screen to set your time and step count back to zero.



The step counter will keep recording whilst you use other activities until you instruct it to stop. When it is running, a small red icon will display on your home screen.

STOP WATCH

Select the stopwatch option from the main menu.

- Tap the play icon on screen to start the stopwatch.
- While the stopwatch App. is running, tap the pause icon on screen to pause the timer, tap it again to resume.
- Tap the reset icon on screen to stop the stopwatch and reset back to zero.



COUNTDOWN TIMER

Select the timer option from the main menu. Set a countdown timer here.

- Tap the play icon on screen to start the timer.
- Tap the pause icon on screen to pause the timer, tap it again to resume.
- Tap the reset icon on screen to stop the timer and reset back to full time.
- Tap the clock icon on screen to enter the timer settings. Swipe up or down on the minutes and seconds to change the time. Once set, press 'OK' to return back and save.



GAMES

Select the games option from the main menu. There are 5 built-in games to play. Swipe the screen to see the game icons, then tap one to play.

- **2048:** Swipe up, down, left or right to move the tiles across the board. The tiles will slide in the swipe direction; meanwhile a new tile will emerge randomly in the board. When the tiles with the same number meet, they will merge into one tile.
- **Basketball Shoot Master:** Press the basketball to shoot, when the backboard is going to move to the middle, control to shoot.
- **Bee War:** Tap the screen left or right to move the fighter to shoot. Blue enemies need to be hit twice. Score as many points as you can! You have three lives.
- **Pinball Hit Bricks:** Destroy all bricks to progress to the next level. White bricks give a special 3-ball bonus. Blue bricks need to be hit twice. Score as many points as you can!
- **Ultimate Racing:** Hold the car to move left and right to switch lanes. The car in front may drop gold coins. Eat as many gold coins as possible and power signs to speed up. You only have one life so avoid collisions!
- **Finger-Guessing:** Correct score in 60 seconds. Let's see how many points you can get.
- **ShakeFun:** Shake the watch, let the dice turn, random points
- **Cross the Road:** Click on the character to avoid crossing the road.

CAMERA

Select the camera option from the main menu.

- Press the shutter icon on screen to take a photo.
- Tap the playback icon on screen to view your photo gallery. (You can also view your photo gallery from the main menu.)
- To delete an image, tap 'options' on screen and select 'delete'.
- Tap 'back' to return to camera mode.



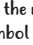 
Press the camera button, click the icon in the upper left corner to display the photo frame, then swipe left and right to select the photo frame you want. If you don't want a photo frame, click the icon in the upper left corner again.

PRODUCT SPECIFICATION

First, ensure the switch on the back of the watch is set to ON. Press the home (on/off) button to wake the watch up. Press the home button for 3 seconds to wake up the watch from standby.

Display	1.54" sensitive colour touch screen
Photo Resolution	240 X 240
Video Resolution	240 X 240
Internal Memory	128 MB built-in memory (shared with program data, actual memory available for user storage will be less)
Storage Capacity	Photos: approx. 450-600 Videos: approx. 3 minutes. Note, The above amounts are approximations, the actual amount depends on the shooting environments. Voice Recorder: approx 40 minutes.
File Format	Photos: Standard Baseline JPEG Video: AVI (Motion JPEG)
Connectivity	Micro USB 2.0 cable (included) for connection with computer
Battery	Li-ion Polymer battery (battery is not replaceable)
Optimum Operating & Charging Temperature	32°F - 10°F (0°C - 40°C)

BATTERY RECHARGING

Adult operation needed. • Connect the Interactive watch to a computer with the included micro USB cable to charge the battery • Pull up the rubber cover of the micro USB port at the side of your watch • Insert the small end of micro USB cable into the micro USB port on the watch • Insert the larger end of the micro USB cable into a USB port on computer. A USB port is usually marked with this  symbol • Once the connection is successful, you'll see the battery recharging symbol displayed on the watch screen for one second, then the data transferring symbol will appear. The battery charges during connection, you'll see a folder named 'Smart Watch' on your PC to transfer data • Check charging progress regularly throughout the process • When the battery is fully charged, a full battery symbol will display on the screen. You can then disconnect the watch from your computer. Note: It will take approx. 3 hours to fully charge the battery. The actual charging time depends on the power supply, the remaining charge and the ambient temperature of the charging environment. If your watch needs longer than 3 hours to fully charge, please try charging from a different USB power source.

BATTERY LIFE

The time the battery lasts between charges depends on use. Like other electronic devices, more frequent usage will mean the battery will drain more quickly. Some activities will be more demanding on the battery, such as taking photos and videos.

PLEASE NOTE

TIKKERS™ Interactive watch is not a toy. Some products contain small components that could be a choking hazard, and are not intended for use by small children below 6 years of age.

BATTERY TIME FOR REFERENCE

Condition	Battery Time
Low Usage	2 weeks
Typical Usage	2-3 days
Heavy Usage	1 day

Note: The above battery time is based on the assumption that the screen is turned off when not in use.

BATTERY MAINTENANCE

Charge the battery regularly to keep it at optimum performance, even when the watch is not in use. For example, fully charge the watch at least every 6 months.

IMPORTANT SAFETY INFORMATION

Misuse of batteries can lead to them bursting, causing a fire or chemical burns. Please read the below precautions • Do not attempt to replace the battery, open the device or disassemble your Interactive

watch. Doing so can result in a safety hazard • Do not crush and do not expose the battery to any shock or force such as hammering, dropping or stepping on the watch • Do not short circuit • Do not expose to high temperatures/humidity or place near a heat source • Do not leave in direct sunlight for any length of time • Do not dispose of in a fire, as substances in your Interactive watch/battery may harm the environment or cause injury if handled or disposed of improperly • Do not handle if the display is cracked • Do not handle damaged or leaking batteries • Keep your Interactive Watch dry and do not charge if wet • Do not wear your Interactive Watch while charging it • If you find the time between charges has considerably shortened with no change in usage, the battery could be nearing the end of its life. Please dispose of this product as described in this manual.

Occasionally some wearers may suffer skin irritation if the watch is worn for prolonged periods, especially if you suffer from sensitive skin or have allergies. If you notice any irritation you should remove your watch. To help prevent any irritation please ensure the watch is removed regularly for cleaning & do not over-tighten on your wrist. We recommend removing your watch each day for gentle cleaning.

CARE & MAINTENANCE

Keep the rubber cover over the micro USB port closed tightly while it is not in use in order to prevent dust or water from getting into the micro USB port • Do not wear your TIKKERS™ Interactive watch whilst applying sprays or creams • Do not allow contact with any corrosive agent (e.g. paint, solvents or adhesives as this may affect the case and finish) • Your TIKKERS™ Interactive watch is splash proof only. It is NOT suitable for swimming and showers. Do not immerse in water • Do not try to replace or disassemble the battery • Keep the lens clean. If the pictures taken are blurry, it could be because there is dust or dirt on the lens. You can clean the lens by gently wiping the lens with a dry cloth.

WARNINGS



WARNING!

CHOKING HAZARD - Contains small parts not suitable for children under 3 years or any individuals who have a tendency to place inedible objects in their mouths.

GUARANTEE

Your TIKKERS™ Interactive is guaranteed against defects of material and manufacture for 12 months from date of purchase. There are a few things not covered by the guarantee:

- Battery
- Band
- Damage caused from accidents or mishandling.
- Water penetration.

This guarantee does not affect your statutory rights.

We are confident you'll love your new Interactive watch, but if you do have any issues under the terms of the guarantee, return the watch to the TIKKERS™ Service Centre.

All products should be returned to: Precision House, Starley Way, Solihull, West Midlands, B37 7GN.

When sending us your Interactive watch, don't forget to include your proof of purchase and a note detailing the fault with your name and full address.

Manufactured by: Peers Hardy UK Ltd, Precision House, Starley Way, Birmingham Business Park, Bickenhill Lane, Solihull, B37 7GN, UK.

EU Address, Peers Hardy UK LTD, C/O Global E-commerce Experts, Rijnlanderweg 766, Unit H, 2132 NM, Hoofddorp, Netherlands.

DECLARATION OF CONFORMITY

The original UK and EU declaration of conformity may be found at : <https://www.tickers.co.uk/pages/declaration-of-conformity-certification>

DISPOSAL OF GOODS

The crossed out wheellie bin symbol is to remind you that waste electrical products, batteries & accumulators should not be disposed of in household waste. If you are unable to reuse or recycle your article it should be disposed of at a civic amenity site or a local authority recycling facility.

- Do not dispose of your TIKKERS™ Interactive product with household waste.
- Disposal of the packaging and your vv™ Interactive product should be done in accordance with local regulations.
- Batteries are not to be disposed of in municipal waste stream and require separate collection.

VIDEO

Select the video option from the main menu.





- Press the record icon on screen  to start recording. While recording, press the record icon again to stop.
- When you finish recording a video, tap the arrow  to save
- Tap the playback icon on screen  to go to your gallery. (You can also view your video gallery from the main menu.)
- To delete a video, tap 'options' on screen and select 'delete'.
- Tap 'back' to return to camera mode.



PHOTO GALLERY



Select the photo gallery option from the main menu. Here you can browse your photos.

- The latest file will be shown first, tap the arrow icons or swipe the screen to see the previous or next file.
- Tap the rubbish bin icon on screen  to display the delete menu.



VIDEO GALLERY

Select the video gallery option from the main menu. Here you can browse your videos.

- The latest file will be shown first, tap the arrow icons or swipe the screen to see the previous or next file.
- Tap the play icon on screen  to play the video.
- Tap the rubbish bin icon on screen  to display the delete menu.



CALCULATOR

Select the calculator option from the main menu. Functions include plus, minus, multiply and divide.

- Tap 'clear' to reset to zero.
- Tap 'back' to go back to main menu.



TORCH


Select the torch option from the main menu. A picture of a torch will appear.

- Tap the screen to turn the torch on and tap again to turn off. The torch will remain on whilst you use other activities until you return to the torch App. to turn it off.
- Please keep torch away from eyes and do not shine it at other people.



VOICE RECORDER

Select the voice recorder option from the main menu.

- Tap the record icon on screen  to start the voice recording. While recording, tap the record icon again to stop.
- Swipe the screen to see the previous or next file.





BACKGROUND

Select the background option from the main menu. Here you can select from 4 different colour options to have as your main menu background.

- Tap the arrows right and left to view the different colour options.
- Tap 'Select your background' to activate.
- The screen will automatically take you back to your home screen.



MUSIC PLAYER

- To upload music to the watch, use the Micro USB cable to connect your watch to a computer/laptop. Copy any MP3 music files to the watch folder "My Music". After transfer is complete, safely eject the watch from your computer and unplug the USB cable.
- To play music you have transferred to the watch, select the Music Player  icon from the main menu, then press play  to begin playing a file.





- Approx. 40 songs can be stored on the watch (this will depend on the duration of the song and sound quality).



SETTINGS

Select the settings option from the main menu. Swipe left or right on the screen to scroll through different setting items. Here you can adjust the following items:



(A) Volume

- Tap  to increase the volume.
- Tap  to decrease the volume.

(B) Brightness

- Tap  to increase the LCD brightness.
- Tap  to decrease the LCD brightness.

(C) Brightness Time

- Tap  to increase the time (seconds) that the screen will stay lit for.
- Tap  to decrease the time (seconds) that the screen will stay lit for.

(D) Date

- Tap screen to enter the date setup screen.
- On the date setup screen, swipe up or down on the month, day and year to scroll through the options.

(E) Time

- Tap screen to enter the time setup screen.
- On the time setup screen, swipe up or down on the hours and minutes, then press OK.
- You can select 12 hour or 24 hour display on the time main screen. Press the home button to set.

(F) Parental Control

- To access the parental control settings, hold your finger on the screen for 3 seconds until the screen changes.
- You will then be asked to enter a password which will be instructed on screen.
- You can now select the amount of game time per day, select the tick to set.

(G) Advanced

(i) Storage Location

- Here you can see the free memory remaining on your watch or choose to format the memory. Follow the instructions on screen if you would like to format the memory. Note: Format will erase all data in the memory, including all photos, videos and voice recordings.

(ii) Language

Tap to select the desired language, and then select 'done' to set.

(iii) Factory Reset

Factory Reset will erase the contents stored in the memory and reset all system settings to factory default, e.g file index, frequency, video resolution, game level and clock face. Follow the instructions on screen to confirm the action.

TURN SCREEN OFF

Return to the home screen and press the home button twice, consecutively.

TURN WATCH OFF

Return to the home screen and hold the home button for 3 seconds.

TIPS

1. How to use Touch Screen

When you touch the screen, ensure your entire fingertip is pressing the screen and hold for a second. Do not use your fingernails.

2. How to view images/videos on your laptop/computer.

Connect the interactive watch to your laptop/computer using the USB cable included. Photos and videos can be found in the 'Photo' folder, while voice recordings can be found in the 'Record' folder.

Troubleshooting

Go through this section if you experience difficulty in operating the Interactive watch.

Problem	Solution
The watch has stopped working or the screen display is abnormal	<ol style="list-style-type: none"> 1. Hold the home button for 3 seconds to turn off and then hold the home button again to turn back on. 2. The hole next to the USB cover is for resetting. To press the reset button, use an unfolded paperclip to insert and then remove (adult supervision needed). Hold the home button for 2 seconds to turn on. 3. If it doesn't work, try to recharge the battery and try again. (Refer to the battery recharging section for details).
Cannot connect to a computer	<ol style="list-style-type: none"> 1. Check the connections on the USB cable between the watch and the computer and review the appropriate connection procedures in this manual. 2. Hold the home button for 30 seconds to turn off. Hold it again to turn back on and re-connect to the computer.
Image taken is not clear	<ol style="list-style-type: none"> 1. Make sure the lighting conditions of the shooting environment are good. 2. Check to see if the camera lens is clean. If you find some dust or dirt on it, please see the steps to clean the lens in the Care & Maintenance section in this manual.
Not enough memory	<p>If you have run out of memory, you will need to delete some of your files. These may include photos, videos and voice recordings. Alternatively, to delete all data, please follow the instructions in the memory section under 'Settings > Advanced > Storage Location' in this manual.</p>



CONTACT US

If you cannot find what you are looking for then please get in touch with our Customer Service Team, they are here to help Monday to Friday, 9AM to 4PM.

 +44 (0) 121 524 1400  Support@Tikkers.co.uk

SUPPORT



[TIKKERS.CO.UK](https://www.tikkers.co.uk)

Don't forget to follow us on social media for lots of fun stuff! We'd love you to tag us in your photos showing your new TIKKERS™ products!

JOIN THE TEAM ON SOCIAL!

 [Tikkers.Official](https://www.facebook.com/Tikkers.Official)  [Tikkers.Official](https://www.instagram.com/Tikkers.Official)

[TIKKERS.CO.UK](https://www.tikkers.co.uk)