

WALKIE TALKIE WATCH SET

Thank you for choosing a Tickers walkie talkie set! This short guide will help you with the essentials, but please visit our website to access full instructions, helpful videos, FAQs and more, all designed to help you get the best from your Tickers products.



INSTRUCTIONS FOR USE

PLEASE CHARGE THE PRODUCT WHEN YOU RECEIVE IT TO ENSURE THAT THE PRODUCT HAS ENOUGH POWER TO USE!

1. MIC
2. On/Off
3. Flash light
4. Flash light button
5. Antenna
6. Compass
7. Time adjustment button
8. TALK button
9. Charging port

Intercom mode: After the Walkie-talkie is turned on, the indicator on the watch lights up, indicating that it is in the intercom state. If there is no need to talk, please turn off the Walkie-talkie switch to retain power.


USING THE INTERCOM FUNCTION

1. Push up the two Walkie talkie switches to turn on.
2. Press and hold the TALK button to speak.

Note:

- When both talk buttons are pressed at the same time, neither will be heard.
- Press the TALK key twice quickly, both walkie talkie's watch will ring.
- Operating range of walkie talkie watches are subject to surroundings. For best results use in an open area, buildings and other objects may reduce range.
- When using a strong radio signal nearby, it may be affected by interference and affect the call quality.

DISPLAY FUNCTION DESCRIPTION

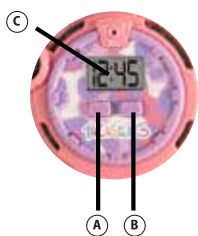

Display screen (C): Normal time display, hours and minutes.
 Middle two keys function:
 Left key (A): Setting
 Right key (B): 1. Press (B) once: Month and date automatically return to normal time display.
 2. Press (B) twice: Seconds (press B) again to return to normal time display).

RECHARGEABLE BATTERY

- Before the battery runs out, charge it in time; otherwise, the battery life will be reduced.
- If the battery runs out and shuts down, please charge it within 30 days, to avoid battery damage.
- Please use a 5V1A charger. Using a high power charger may damage and reduce battery life.

Note:

- When the red light on the Walkie-Talkie goes out, it means that the walkie talkie is fully charged.

SETTING THE WATCH:

1. Month: Press (A) twice to display month and set the month with (B).
2. Date: Press (A) to display the date and set the date with (B).
3. Hour: Press (A) to display the hour and press (B) to set the hour ("A" for AM and "P" for PM time).
4. Minutes: Press (A) to display the minutes and set the minutes with (B).
5. Press (A) once more to return to normal time display.

TECHNICAL SPECIFICATIONS

BATTERIES REQUIRED (per unit):

Watch: LR41-1.5V (x1) (replaceable and not rechargeable)
 Walkie-Talkie: 402030 LiPo (x1) (rechargeable and non-replacable)
 Rated voltage: 3.7V; Rated capacity: 150mah; Watt-hour rating: 0.555Mh
 Charging time: 2 hours
 Standby time: 2 hours.
 Usage time (approx): 45 minutes
 INPUT≤5V≤1A

SPEC:

1. Maximum output power: 8mW
2. Frequency: 446.00625Mhz
3. Overdischarge protection, 2.8V
4. Overcharge voltage protection, 4.2V
5. Current-limiting protection, 107mah
6. Short-circuit protection

The supply terminals are not to be short-circuited. Non-rechargeable batteries are not to be recharged. Rechargeable batteries should be charged under adult supervision. Different types of batteries or new and used batteries are not to be mixed. Batteries are to be inserted with the correct polarity (+ and -). Exhausted batteries are to be removed from the toy.

We recommend a watch technician changes the replaceable battery.

HOW TO CARE FOR YOUR WALKIE TALKIE

Do not wear your watch whilst applying sprays or creams. Do not allow contact with any corrosive agent e.g. paint, solvents or adhesives, as this may affect the finish of the smartwatch. Your watch is not suitable for swimming or showers. Do not immerse in water. Do not try to replace or disassemble the battery.

STRAP CARE

Environmental conditions can affect the durability of your strap. Please treat it with care and limit exposure to direct heat or sunlight. Keep your watch dry and away from wet surfaces. Do not use chemical cleaners on your strap and avoid contact with cosmetic products, such as fake tan or perfumes. Light soiling can be cleaned using a weak soapy water solution on a barely damp soft cloth. Please be aware light coloured straps i.e. whites, creams and pastel colours, are prone to attract colour transfer from other surface materials and cosmetic substances. Please take care whilst wearing these products as discolouration of straps is not covered within the guarantee.

GUARANTEE

Your TIKKERS™ watch is guaranteed against defects of material and manufacture for 12 months from date of purchase. There are a few things not covered by the guarantee:

- Batteries, straps or bracelets
- Damage caused from accidents or mishandling
- Water penetration

IMPORTANT SAFETY INFORMATION

BEFORE USING THE PRODUCT, PLEASE FAMILIARISE YOURSELF WITH ALL OF THE SAFETY INFORMATION AND INSTRUCTIONS FOR USE!

BATTERY WARNINGS

Do not attempt to replace the battery, open the device enclosure or disassemble your TIKKERS product. Doing so can result in a safety hazard • The integrated rechargeable battery cannot be removed or replaced • Substances within TIKKERS watch battery may harm the environment or cause injury if handled or disposed of improperly. In the unlikely event of contact with battery acid, thoroughly flush the affected area with plenty of clean water and seek IMMEDIATE medical attention • When the battery is fully charged disconnect from charger, DO NOT exceed 2 hour charge time.

DEVICE WARNINGS

Ensure your smartwatch correctly engages with the charging contacts • Before each use, please check the product for damage, do not use if the product is damaged • Never attempt to open your watch as this may result in harm or injury • Protect the product from strong impacts, vibrations, direct sunlight and dirt • Do not place heavy objects on the product • Do not exert pressure on the product • Avoid strong magnetic fields e.g. loudspeakers • Salt and thermal water can lead to the corrosion of metal parts. Remove the product before using saunas as the temperature difference can cause condensation • Do not operate the product near heat sources e.g. radiators or other devices emitting heat. Do not cover the product during operation or charging • Do not use your TIKKERS product if the display is cracked • Do not expose your TIKKERS product to extremely high or low temperatures • Do not use abrasive cleaners to clean your TIKKERS product • Remove your TIKKERS product immediately if it feels warm or hot • Do not attempt to wear or operate your TIKKERS product whilst charging • Do not charge your TIKKERS product if wet • Always be aware of your surroundings when using TIKKERS products and services.

PLEASE ENSURE CHILDREN USE IN A SAFE AND SECURE ENVIRONMENT, ALWAYS WITH THEIR PARENT/GUARDIAN'S PERMISSION

Tikkers products are manufactured by Peers Hardy:

UK - Peers Hardy UK Ltd, Precision House, Starley Way, Birmingham Business Park, Bickenhill Lane, Solihull, B37 7GN.

EU - Peers Hardy UK LTD, C/O Global E-com Experts, Rijnlanderweg 766, Unit H, 2132 NM, Hoofddorp, Netherlands.

DISPOSAL OF GOODS

The crossed out wheelite bin symbol is to remind you that waste electrical products, batteries and accumulators should not be disposed of in household waste. If you are unable to reuse or recycle your article it should be disposed of at a civic amenity site or a local authority recycling facility.

- Do not dispose of your TIKKERS product within household waste.
- Disposal of your TIKKERS packaging and product should be done in accordance with local regulations.

CONTACT US

If you require any further assistance using your TIKKERS Walkie Talkie Watch we are here to help!

You can also contact our friendly, UK based customer service team Monday to Friday, 9AM to 4PM on:

+44 (0) 121 524 1400 Support@Tikkers.co.uk

There is also lots of information on our website tikkers.co.uk that you may find helpful.

NEED SUPPORT?



TIKKERS.CO.UK

Don't forget to follow us on social media for lots of fun stuff! We'd love you to tag us in your photos showing your new TIKKERS™ products!

FOLLOW US ON SOCIAL MEDIA!

 Tikkers.Official  Tikkers.Official