

REFLEX ACTIVE


MINI BOOM SPEAKER

THANK YOU FOR CHOOSING REFLEX ACTIVE!

We know you want to get straight to the music, but please take a minute to read these instructions, they'll help you get the most from your Reflex Active product.

FEATURES

- Microphone
- Previous/Vol-
- Power Switch/Play/Pause
- Multi Function Button (MFB)
- Next/Vol+
- Micro SD Card Port
- Charging Port

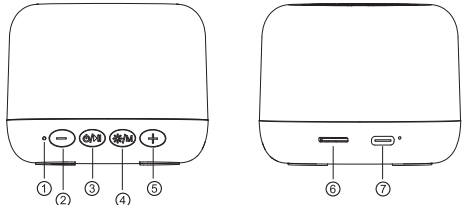

POWER ON/OFF

1. Long press the POWER switch for 3 seconds to turn on, the LED indicator flashes blue
2. Long press the POWER switch for 3 seconds to turn off, the LED indicator goes off.

BLUETOOTH MODE

1. Turn the speaker on, the LED indicator flashes blue continuously while waiting for pairing.
2. Then activate BT on your phone and search for "REF-MINIBOOM". Click manually to connect. If the connection is successful, the LED indicator will turn steady blue.

Note: The speaker will automatically reconnect to the last paired device when the BT on your device is on. Just turn on the speaker and it will automatically reconnect.

PLAYING MUSIC & VOLUME CONTROL

- Short press the Play/Pause to pause/play
- Long press the "-" for PREV
- Long press the "+" for NEXT
- Short press the "-" for VOL-
- Short press the "+" for VOL+

RGB LIGHT EFFECT SWITCHING

Short press the MFB button to switch/turn off the light effects on the speaker.

MODE SWITCHING

Long press MFB button to select mode. (BT/Micro SD Card)

MICRO SD CARD MODE: Insert a micro SD card, the speaker will automatically recognise it and play the music.

CARING FOR YOUR PRODUCT

Please follow these simple instructions to keep your speaker looking & sounding great!

- Clean product with a damp cloth & mild soap.
- Not designed to be submerged in water, should this occur product will malfunction.
- Keep away from steam & dust as these may affect quality of performance.
- Avoid excessive twisting / turning of charging cable as this can cause malfunction.
- Contains no serviceable components. Do not attempt to open the speakers or the casing as this may cause harm.
- Keep away from strong magnetic fields to avoid interference.
- Please charge the product with input power below 5V/1A, in order to protect the battery.
- Please do not use this product in or near water.
- Please store or use the product in a normal temperature environment.
- Please keep the product away from radiators, stoves, or other sources of heat.
- Don't jam the ports of the product, such as charger port, LED port and microphone etc.
- In order to protect your hearing and extend the speakers service life, it is not recommended to adjust the volume to the maximum level for a long time.

GUARANTEE

Your Reflex Active product is guaranteed against any defective construction or parts for 1 year from date of purchase. Please retain your receipt as proof of purchase. Breakages caused by water damage, accident or mishandling are not covered. This guarantee is in addition to your statutory consumer rights.

In the unlikely event you need to return your Reflex Active product, please contact us and we'll be happy to guide you through the process.

IMPORTANT INFORMATION

Enjoy your music, but please stay safe & ensure you stay aware of your surroundings at all times. We advise against listening to loud music for long periods of time. Do not use this product whilst driving or in other potentially dangerous situations. This product is not a toy, not for use by children. This is a class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures. Made in China by Peers Hardy UK Ltd, Precision House, Starley Way, Birmingham International Business Park, B37 7GN. EU Address, Peers Hardy UK LTD, C/O Global E-commerce Experts, Rijnlanderweg 766, Unit H, 2132 NM, Hoofddorp, Netherlands.

DISPOSAL OF GOODS

The crossed out wheelite bin symbol is to remind you that waste electrical products, batteries & accumulators should not be disposed of in household waste. If you are unable to reuse or recycle your article it should be disposed of at a civic amenity site or a local authority recycling facility. Do not dispose of your product within household waste. Disposal of the packaging & your product should be done in accordance with local regulations. Batteries are not to be disposed of in municipal waste stream and require separate collection.

EU DECLARATION OF CONFORMITY

The full UK & EU declaration of conformity can be viewed online at the following web page: <https://www.reflex-active.com/pages/audio-docc>

HELP AND CONTACT

If you need any help with your product, then please get in touch, we'll be happy to hear from you! We are available Monday - Friday 9am - 4pm.

✉ Support@Reflex-Active.Com ☎ +44 (0) 121 524 1400

CONNECTING TWO MINI BOOM SPEAKERS

You can connect two Mini Boom speakers as a pair for stronger stereo sound.

1. Make sure the BT function is OFF on your BT player.
2. Turn on the two speakers.
Double click the MFB button on one of the speakers (this will be the main speaker), both speakers will enter TWS pairing status. When the main speaker LED indicator flashes blue quickly and the auxiliary speaker LED indicator flashes blue slowly, it indicates that the TWS connection is successful.
3. Then activate the BT on your device and search for "REF-MINIBOOM". Click manually to connect and then the LED indicators on both speakers turn solid blue.

CHARGING

This product has a built-in non-removable and rechargeable battery, please use the provided Type C cable to charge.

The power LED indicator turns red when charging and goes out when fully charged.

CALLS

Answer incoming calls: Press the Play/Pause button to answer incoming calls.

Note: Since some mobile phones default to answer calls via their own receiver, please refer to the instructions on your phone and set on your phone.

END CALLS: Press the Play/Pause button once to end the current call.

REJECT INCOMING CALLS: Long press the Play/Pause button for 2 seconds to reject an incoming call.

LAST NUMBER REDIAL: Double press the Play/Pause button to redial the last calling number.

SPECIFICATIONS

Speaker / 52mm
BT Version / V5.3
Peak Power / 5W
Battery / 3.7V/600mAh
Playtime / 5-6 Hours (Medium Volume)
Charge Time / 1.5 Hours

Frequency Range / 20Hz-20KHz
Wireless Range / 10m
Charging / Type C
Input Voltage / DC 5V/500MA
Support / Hands Free Calling, BT, TWS, & TF
Product Size / 80 x 63mm approx

COME JOIN US OVER ON SOCIAL!

REFLEX.ACTIVE

REFLEX.ACTIVE

