REFLEX ACTIVE

Series 26 - getting started



Please take a few minutes to read through these instructions, they will help ensure you get the best from your smartwatch. You can also visit our website or scan this QR code for lots of helpful information and video guides. And of course, if you have any questions, please get in touch, we're here to help!



+44 (0)121 524 1400

support@reflex-active.co.uk

www.reflex-active.com/pages/support

POWER ON / OFF


- To switch on the watch, press and hold the mode button until the display is on.
- Switch off by long pressing the mode button, or go through settings and scroll to the bottom.

HOW TO CHARGE

- 1. Line up the 2 pins to the charging spots on the back of the watch case.
- 2. The pins are magnetic and will secure the charger in place.
- 3. Plug in the USB cable to a power source. Once connected, the charging icon will appear on screen.
- 4. Please charge the watch when it displays low battery.
- 5. A 2-3 hour charge time is sufficient to fully charge your smartwatch. Please ensure you do not overcharge.

FUNCTIONS NAVIGATION

You can navigate the watch by sliding left / right and up / down.

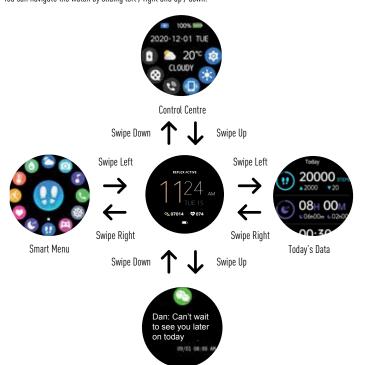

Messages

BLUETOOTH CALLING FUNCTION

After connecting the smart watch to your phone, you can use the watch to make and answer calls. You can also view the call history on the watch. Note: you need to retain the connection between the watch and the phone when using the phone call function.

This watch has a Bluetooth calling feature. You can make calls without reaching for your phone. You can also view your call history. The connection between the watch and your phone will need to be kept stable when using the calling

The watch also has a microphone and a built in speaker for use when making phone calls, listening to music and other notifications. Follow the steps to activate the calling function and much more:

DOWNLOADING THE REFLEX ACTIVE RED App.





To download our app, search for REFLEX ACTIVE RED App. or scan the appropriate QR code for installation. Use your smart phone camera or QR code reader app.

COMPATIBILITY

The REFLEX ACTIVE RED app will work on the following smartphones:

- Android (version 8.0 and above)
- Apple IOS (version 12.0 and above)

Please ensure the app is the latest version and has Bluetooth 5.0

CONNECTING YOUR SMART WATCH TO MOBILE PHONE

- 1. Enable Bluetooth on your smart phone.
- 2. Open the REFLEX ACTIVE RED App. on your smart phone.
- 3. Reveiw and accept privacy policy.
- 4. Set your profile following the steps presented.
- 5. To connect your watch, open device section & select 'add device'
- 6. Tap OK to allow notifications to appear on your smartwatch.
- -Allow permissions when prompted to gain full functionality of your watch.

DISCONNECTING YOUR SMART WATCH & PHONE

- 1. Open the REFLEX ACTIVE RED App. on your smart phone.
- 2. Tap disconnect device in device section of app.
- 3. You must also forget your device on your smart phones Bluetooth settings.

CALLING FUNCTION

HOW TO CONNECT

Step 1: After connecting the watch to the REFLEX ACTIVE RED app,you will be prompted to accept Bluetooth connection, please accept.

Once connected you should see that the device is 'connected for calls'.

Step 2: Go to your watch and swipe right for the menu and locate the phone.



There are three tabs on this screen:

- Recent calls
- Contacts



If you tap on the recent calls tab you can see the recent calls on your device.



When you tap on the dial pad you can then dial a number to call. Once you have dialled the number the call button on the bottom right corner will appear.



Once you tap on the call button the number will then be called.

- You can speak through the in built microphone on your watch.
- To adjust the speaker volume tap on the + or -
- To end the call tap on the red phone icon



When Bluetooth calling mode is activated the watch will ring and vibrate. You can answer or reject the call.

REFLEX ACTIVE

Series 26 - getting started

CALLING FUNCTION

HOW TO DISCONNECT

To disconnect Bluetooth calling, go to the phone's Bluetooth setting and "unpair" the "REFLEX ACTIVE 26". There is also a shortcut to temporarily switch this off on top of the settings page.

ADD CONTACTS

You can add up to 8 contacts to your watch. Add contacts from the REFLEX ACTIVE RED app. To add contacts go to "Favourite Contacts" and add contacts. The selected contacts will then be synced to your watch.



On the REFLEX ACTIVE RED app tap on "Favourite Contacts" to add your contacts.



HOW TO DISCONNECT



Switch between watch / phone during an active call: If your watch is connected to your phone via Bluetooth, all calls will show up on the watch by default. If during an active call you would like to switch to your phone, simply tap on the handset earpiece icon to select it. The call will then switch to your phone.

BATTERY NOTE

The battery lasts for 2 to 3 days with Bluetooth calling mode enabled. On standby the battery can last for approximately 5-7 days.

OTHER SETTINGS

WATCH FACE

Replacing the watch face via the watch: Long press the home screen to view the available watch dials. Tap on the dial you would like to set it.









REPLACING THE WATCH FACE VIA THE APP

Tap the watch face settings in the "Profile" > "Series 26" page. You can then download and sync the watch faces from the Dial Library. Replacing the watch face may take a minute to transfer.



WELLNESS FEATURES —

BC +60

UEADT DATE

The watch will record your heart rate during the day if activated in settings. You can also tap on the screen to start measuring your heart rate.



SPORTS

Tap your chosen exercise from the 8 options on the menu to track your sport. The last sport recorded will show on the training page.



SLEEP

If the watch is worn whilst you sleep, it will keep track of the hours slept and the quality of your sleep.

NOTE: Sleep Detection starts from 9pm to 8am the next day, sleep data will upload to the app after 10am.



STEPS

The watch automatically tracks the number of steps you have taken. Note: your movement stats reset to 0 at midnight.



Sp02

Measure blood oxygen levels or oxygen saturation in your blood.

LFIESTYLE FEATURES -



MIISIC PI AYER

Select your track & control volume from your watch. You'll also see artist & track name displayed on your watch screen.



CAMERA CONTROL

You can control the camera of your phone once the watch is connected to your phone. NOTE: The phone needs to be unlocked before the watch can control the camera.



MESSAGE NOTIFICATION

The device will sync incoming notifications from twitter, facebook, whatsapp, instagram etc. NOTE: You can select the notifications you wish to receive in the app.



WEATHER NOTIFICATIONS

You can view the current weather and forecasts for the next day. This information is synced from the app. Swipe up to view the weather forecast. Location must be selected from the App settings. NOTE: Phone must be connected to receive updated weather forecast.



REMINDER TO MOVE

The device will vibrate to remind you to move after 1 hour of inactivity. Note: you can switch on/off this feature in the app.



HYDRATION REMINDER

Hydration is key to feeling your best so the smart watch will remind you it's time to drink some water at the planned time. Note: you can set the feature in the

Using Quick View- Using quick view you can check the time on your smart watch without tapping. Just turn your wrist towards you and the time screen will appear for a few seconds.

SPECIFICATIONS

RAM/ROM RAM 256KB / ROM 1MB 1.26" Full Touch

LCD Screen Size BT 5 N Bluetooth **Call Notification** Yes

Message Notification Yes Multi-Sport Walking, Running, Cycling, Skipping,

Basketball, Football, Badminton. Battery Built-in rechargeable lithium battery 200MA

Battery Capacity Bluetooth Connected Up to 4 days **Standby Time** 10 days Charge Time 2 - 3 hours Water Resistant IP67 **Heart Rate** YES

2400-2483.5 Mhz **Operating Frequency**

HOW TO CARE FOR YOUR SMART WATCH

Do not wear your smartwatch whilst applying sprays or creams. Do not allow contact with any corrosive agent e.g. paint, solvents or adhesives, as this may affect the finish of the smartwatch. Your smartwatch is not suitable for swimming or showers. Do not immerse in water. Do not try to replace or disassemble the battery.

Environmental conditions can affect the durability of your strap. Please treat it with care and limit exposure to direct heat or sunlight. Keep your watch dry and away from wet surfaces. Do not use chemical cleaners on your strap and avoid contact with cosmetic products, such as fake tan or perfumes. Light soiling can be cleaned using a weak soapy water solution on a barely damp soft cloth. Please be aware light coloured straps i.e. whites, creams and pastel colours, are prone to attract colour transfer from other surface materials and cosmetic substances. Please take care whilst wearing these products as discolouration of straps is not covered within the guarantee.

To keep your silicone strap looking good, clean it regularly with mild soap and water to remove any dirt, oils, lotions etc., ensuring the case of your smartwatch does not get wet. When you are not wearing your smartwatch, we recommend you store it in the gift box received with purchase

STEP COUNTER

Smartwatches use multiaxis inertial sensors called accelerometers. These detect wrist movement in order to measure steps. However, some wrist actions whilst standing or sitting can mimic the arm movement of a step and can therefore falsely record steps. The step count recorded each day should be used as a guide only.

Quality and style are at the heart of what we do. REFLEX ACTIVE certifies this smartwatch is produced using premium materials and is fully tested before leaving our manufacturing centre.

Your timepiece is guaranteed against any defective parts and construction for 2 years from the date of purchase. Your guarantee is only valid if you present your original receipt when returning the item. This guarantee provides you with rights in addition to your consumer statutory rights and therefore does not limit your statutory rights. Please note this guarantee does not cover lenses, bands, straps or bracelets, water penetration or batteries. Additionally, breakages caused by accident or maltreatment are not covered.

All products should be returned to: PH Services Precision House Unit 4 Starley Way Solibull R37 7GN Please contact us before sending in your product and we'll guide you through the process

CONTACT US

If you require any further assistance using your REFLEX ACTIVE smartwatch or our REFLEX ACTIVE RED App we are here to help!

You can also contact the REFLEX ACTIVE customer service team Monday to Friday, 9AM to 4PM on:





+44 (0) 121 524 1400 support@reflex-active.com

There is also lots of information on our website reflex-active.com that you may find helpful.

PRIVACY POLICY

Please check www.reflex-active.com/pages/privacy-policy to view our privacy policy. Please remember to check for updates periodically.

IMPORTANT SAFETY INFORMATION - BEFORE USING THE PRODUCT, PLEASE FAMILIARISE YOURSELF WITH ALL OF THE SAFETY INFORMATION AND INSTRUCTIONS FOR USE!

BATTERY WARNINGS

Do not attempt to replace the battery, open the device enclosure or disassemble your REFLEX ACTIVE product. Doing so can result in a safety hazard • The integrated rechargeable battery cannot be removed or replaced • Substances within REFLEX ACTIVE smartwatch battery may harm the environment or cause injury if handled or disposed of improperly. In the unlikely event of contact with battery acid, thoroughly flush the affected area with plenty of clean water and seek IMMEDIATE medical attention • When the battery is fully charged disconnect from charger, DO NOT exceed 2 hour charge time.

DEVICE WARNINGS - This is a Class A product. In a domestic environment, this product may cause radio interference. In which case the user may be required to take adequate measures • Ensure your smartwatch correctly engages with the charging contacts • Before each use, please check the product for damage, do not use if the product is damaged • This is not a toy, children should not play with this product • Never attempt to open your smartwatch, this may result in danger • Protect the product from strong impacts, vibrations, direct sunlight and dirt • Do not place heavy objects on the product • Do not exert pressure on the product • Avoid strong magnetic fields e.g. loudspeakers • Salt and thermal water can lead to the corrosion of metal parts. Remove the product before using saunas as the temperature difference can cause condensation • Do not operate the product near heat sources e.g. radiators or other devices emitting heat. Do not cover the product during operation or charging • Never use the product on aeroplanes, in hospitals, service rooms, or near medical electronic systems. The wireless signals transmitted could impact the functionality of sensitive electronics • Do not use your REFLEX ACTIVE product if the display is cracked • Do not expose your REFLEX ACTIVE product to extremely high or low temperatures • Do not use abrasive cleaners to clean your REFLEX ACTIVE product • Remove your REFLEX ACTIVE product immediately if it feels warm or hot • Do not attempt to wear or operate your REFLEX ACTIVE product whilst charging • Do not charge your REFLEX ACTIVE product if wet • Do not check notifications or other applications on the products display while driving or in other situations where distractions could be hazardous. Always be aware of your surroundings when using REFLEX ACTIVE products and services Ensure your smartwatch is removed at regular intervals for gentle cleaning.

HEALTH WARNINGS - REFLEX ACTIVE smartwatches contain components that emit electromagnetic fields, with some of the models containing a magnetic charging dock, please be aware that these models contain magnets. These electromagnetic fields and magnets may interfere with medical devices, such as pacemakers and implanted defibrillators. Please consult your doctor and medical device manufacturer if you use any medical device before using a REFLEX ACTIVE smartwatch. • The REFLEX ACTIVE heart rate monitor is designed for recreational use only, it is not intended for any medical use such as diagnosing or monitoring any medical conditions. similar conditions. • The REFLEX ACTIVE heart rate monitor usually provides an accurate estimate of your heart rate, but the reading can be affected by factors such as fit of the smartwatch, the physical characteristics of the wearer and the intensity of the activity • Your REFLEX ACTIVE smartwatch will help calculate distances covered and calories burned during training. Please consult a doctor before starting new exercise regimes • REFLEX ACTIVE smartwatches contain sensors to track your movement to closely estimate your activity, sleep, calories used etc. These close estimations are not always fully accurate • Some wearers may suffer skin irritation if the smartwatch is worn for prolonged periods, especially if you suffer from sensitive skin or have allergies. If you notice any irritation you should remove your smartwatch. To help prevent any irritation please ensure the smartwatch is removed regularly for cleaning & do not over-tighten on your wrist • We recommend you remove your smartwatch each day for gentle cleaning • If your watch features cycle tracking, please note the menstrual cycle tracking feature should be used for your personal records only. It is not intended to be used to assist in, or prevent conception. Always consult your doctor should you notice anything unusual.

In the case of material damage or personal injury caused by incorrect handling or non-compliance with the safety instructions, no liability can be accepted by REFLEX ACTIVE. If you have any questions or concerns, please contact us, you'll find our contact details on

Manufactured by: Peers Hardy UK Ltd, Precision House, Starley Way, Birmingham Business Park, Bickenhill Lane, Solihull, B37 7GN, UK. EU Address, Peers Hardy UK LTD, C/O Global E-commerce Experts, Rijnlanderweg 766, Unit H, 2132 NM, Hoofddorp, Netherlands.

DECLARATION OF CONFORMITY

The original UK and EU declaration of conformity may be found at : https://www.reflex-active.com/pages/declaration-of-conformity-certification.

DISPOSAL OF GOODS . The crossed out wheelie bin symbol is to remind you that waste electrical products, batteries and accumulators should not be disposed of in household waste.

If you are unable to reuse or recycle your article it should be disposed of at a civic amenity site or a local authority recycling facility.

- Do not dispose of your REFLEX ACTIVE product within household waste.
- Disposal of your REFLEX ACTIVE packaging and product should be done in accordance with local regulations.
- Batteries are not to be disposed of in municipal waste & require separate collection.

