
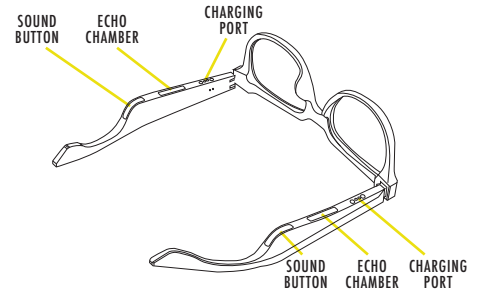


REFLEX ACTIVE

Sound Shades - getting started

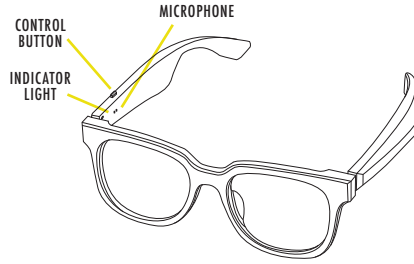

We know you want to get straight to the music, but please take a minute to read through these instructions, they will help ensure you get the best from your Reflex Active product.

You can also visit our website for lots of helpful information and video guides. And of course, if you have any questions, please get in touch, we're here to help!

POWER ON / OFF

1. When you unfold the arms of your Sound Shades, they will auto power on, you'll hear 'power on' & indicator lights will both flash, once connected, one light will continue to flash.
2. Your Sound Shades will automatically switch off when the arms are folded closed, or press & hold the right sound button for 3 seconds, you'll hear 'power off' to confirm.

HOW TO CHARGE

1. Connect the magnetic charger to the charging point on the arm of your Sound Shades, the red indicator light will illuminate.
2. Once charge is complete, indicator light will switch off.
3. Do not exceed a 1 hour charge time.

WHEN TO CHARGE

When you hear 'low battery', it is time to charge your Sound Shades. If you do not charge your smart shades when prompted they may auto power off, you'll hear 'power off' as this happens.

SPECIFICATIONS

Bluetooth Version	5.1	Battery Capacity	35mAh	Charge Current	DC5V
Playtime	4 Hours	Charge Case Battery Capacity	90 mAh on left & right arms.	Channel	Dual Speakers Stereo
Charge Time	1 Hour			Connection Distance	10 Metres

IMPORTANT SAFETY INFORMATION - BEFORE USING THE PRODUCT, PLEASE FAMILIARISE YOURSELF WITH ALL OF THE SAFETY INFORMATION AND INSTRUCTIONS FOR USE!

Enjoy your music, but please stay safe & ensure you stay aware of your surroundings at all times. Do not use this product whilst driving or in other potentially dangerous situations. Avoid use on aeroplanes, in hospitals, service rooms, or near medical electronic systems. The wireless signals transmitted could impact the functionality of sensitive electronics. Please consult your doctor and medical device manufacturer if you use any medical device before using REFLEX ACTIVE Sound Shades, as they may interfere with medical devices, such as pacemakers and implanted defibrillators. This product is not a toy, not for use by children. This is a class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures. Made in China by Peers Hardy UK Ltd. Precision House, Starley Way, Birmingham International Business Park, B37 7GN. EU Address, Peers Hardy UK LTD, C/O Global E-commerce Experts, Rijnlanderweg 766, Unit H, 2132 NM, Hoofddorp, Netherlands.

DISPOSAL OF GOODS

The crossed out wheelee bin symbol is to remind you that waste electrical products, batteries & accumulators should not be disposed of in household waste. If you are unable to reuse or recycle your article it should be disposed of at a civic amenity site or a local authority recycling facility • Do not dispose of your product within household waste • Disposal of the packaging & your product should be done in accordance with local regulations • Batteries are not to be disposed of in municipal waste stream and require separate collection.

DECLARATION OF CONFORMITY

The full UK & EU declaration of conformity can be viewed online at the following web page: <https://www.reflex-active.com/pages/audio-docc>

HELP AND CONTACT

If you require any further assistance using your REFLEX ACTIVE product we are here to help!

You can also contact the REFLEX ACTIVE customer service team Monday to Friday, 9AM to 4PM on:

+44 (0) 121 524 1400 support@reflex-active.com

There is also lots of information on our website [reflex-active.com](https://www.reflex-active.com) that you may find helpful.

SETTING UP

1. Your Sound Shades will be ready to pair after their first charge.
2. Open Bluetooth connections within phone or tablet settings. Search 'shade' and select. Once paired you'll hear 'connected' your glasses are now ready to use

LISTENING TO MUSIC

1. To play or pause your music, tap the right arm sound button.

PHONE CALLS

1. Tap control button to answer call when in use.
2. Tap control button again to end call.
3. Press control button for 2-3 seconds to reject call when in use.

VOICE CONTROL

1. Double tap the tap the right arm sound button to activate phone voice assistant.

CARING FOR YOUR GLASSES

Follow these simple instructions to keep your Sound Shades looking & sounding great! Your Reflex Active Sound Shades have polarised lenses and UV400 protection, designed to offer superior eye protection and vision. UV400 protection filters out up to 99% of UVA and UVA rays. Clean product with a damp cloth, using a single direction across lens. Do not submerged in water, should this occur product will malfunction. Avoid extreme temperatures (-10°C / +50°C). Contains no serviceable components. Do not attempt to open the Sound Shades or casing as this may cause harm. Keep away from strong magnetic fields to avoid interference.