

REFLEX ACTIVE

RETRO RADIO

THANK YOU FOR CHOOSING REFLEX ACTIVE!

We know you want to get straight to the music, but please take a minute to read these instructions, they'll help you get the most from your Reflex Active product.

FEATURES

- Power button
- Charging port
- Charging indicator
- USB C port
- AUX jack
- MODE
- Previous track
- Play/pause
- Next track
- FM tuner
- Bluetooth/AUX indicator
- Volume tuner
- FM/USB indicator

CHARGING

1. Insert the small connector of the USB-C charging cable into the charging port (2) on the back of the speaker.
2. Insert the large connector into the USB port on a computer, USB charging device or 5V USB adapter (not included) and plug into a wall outlet.
3. The charging indicator (3) will turn red while charging and the light will go off when fully charged. A tone will be heard on low power to indicate that the speaker needs to be charged.

BLUETOOTH OPERATION

1. Power control: Press the power button (1) to turn on or turn off the speaker. A sound will be heard to indicate the speaker is on.
2. Turn on the bluetooth function on your external bluetooth device, then search for the bluetooth device name 'REF-RETRO' then pair and connect. After a successful pairing, a tone will be heard.
*Bluetooth will work up to a 10m distance.

USING USB PLAYING

Insert USB drive to USB port (4) to play music, speaker will play music automatically.

USING AUX PLAYING

To use the speaker as a wired device, plug in an audio cable into the 3.5mm auxiliary input jack (5) on the speaker. Plug into the headphone jack of your chosen device.

MODE

Press button (6) to toggle between modes: Bluetooth, AUX, USB and FM. The bluetooth/AUX indicator light (11) will show solid blue. The FM/USB indicator light (13) will show solid red.

CONTROLS

PREVIOUS TRACK: Press the button (7) to skip back.

PLAY/ PAUSE: Press the button (8) to play or pause the music.


NEXT TRACK: Press the button (9) to skip forward.

USING FM: Turn the FM tuner (10) to tune the FM stations.

VOLUME: Turn the volume tuner (12) to adjust the volume.



USB C

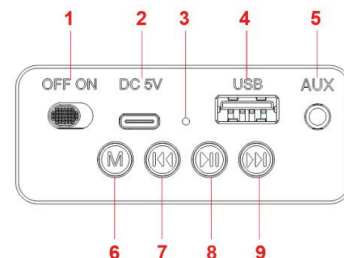

CARING FOR YOUR PRODUCT

Please follow these simple instructions to keep your radio looking & sounding great!

- Clean product with a dry cloth.
- Not designed to be submerged in water, should this occur product may malfunction.
- Keep away from steam & dust as these may affect quality of performance.
- Avoid excessive twisting / turning of charging cable as this can cause malfunction.
- Contains no serviceable components. Do not attempt to open the radio or the casing as this may cause harm.
- Keep away from strong magnetic fields to avoid interference.

GUARANTEE

our Reflex Active product is guaranteed against any defective construction or parts for 1 year from date of purchase. Please retain your receipt as proof of purchase. Breakages caused by water damage, accident or mishandling are not covered. This guarantee is in addition to your statutory consumer rights.

In the unlikely event you need to return your Reflex Active product, please contact us and we'll be happy to guide you through the process.

IMPORTANT INFORMATION

Enjoy your music, but please stay safe & ensure you stay aware of your surroundings at all times. We advise against listening to loud music for long periods of time. Do not use this product whilst driving or in other potentially dangerous situations. This product is not a toy, not for use by children. This is a class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures. Made in China by Peers Hardy UK Ltd. Precision House, Starley Way, Birmingham International Business Park, B37 7GN. EU Address, Peers Hardy UK LTD, C/O Global E-commerce Experts, Rijnlanderweg 766, Unit H, 2132 NM, Hoofddorp, Netherlands.

DISPOSAL OF GOODS

The crossed out wheelite bin symbol is to remind you that waste electrical products, batteries & accumulators should not be disposed of in household waste. If you are unable to reuse or recycle your article it should be disposed of at a civic amenity site or a local authority recycling facility • Do not dispose of your product within household waste • Disposal of the packaging & your product should be done in accordance with local regulations • Batteries are not to be disposed of in municipal waste stream and require separate collection.

EU DECLARATION OF CONFORMITY

The full UK & EU declaration of conformity can be viewed online at the following web page: <https://www.reflex-active.com/pages/audio-docc>



HELP AND CONTACT

If you need any help with your product, then please get in touch, we'll be happy to hear from you! We are available Monday - Friday 9am - 4pm.

✉ Support@Reflex-Active.Com 📞 +44 (0) 121 524 1400

COME JOIN US OVER ON SOCIAL!

REFLEX.ACTIVE

REFLEX.ACTIVE