

# REFLEX ACTIVE

SPORT

# THANK YOU FOR CHOOSING REFLEX ACTIVE!

We know you want to get straight to the music, but please take a minute to read these instructions, they'll help you get the most from your Reflex Active product.

## SETTING UP

1. Remove headphones from case once fully charged.
2. Open Bluetooth connections within device settings, search 'REFLEX-SPORT' & select.
3. Your device will now be paired with your headphones.

Your connection will now be automatic, but if you do have any connection issues, please repeat steps 1-3.

## CHARGING THE CASE

1. Insert charging cable into the charging port & connect to power supply.
2. The charging indicator light will flash red to show case is charging.
3. Allow to charge for around 2 hours, the charging indicator light will be illuminated continuously once fully charged.
4. Always take care not to exceed 2 hour charge time.
5. Earpod shows RED when charging, solid BLUE when charged. Fully charged in 1 hour.

## HANDS-FREE FUNCTIONS

When you have your phone & speaker connected you can take the following actions.

**ANSWER CALLS** Press either touch point once.

**REJECT A CALL** Press and hold either round button for 2 seconds.

**END A CALL** Press either round button once.

**MAKE A CALL** Double press either round button to call last number dialled.

**POWER ON** Take the headphones out of the case, or press round button for 5 seconds.

**POWER OFF** Put your headphones out of the case, or press round button for 5 seconds.

**PLAY / PAUSE** Click either round button.

**PLAY NEXT TRACK** Press and hold front of the long button for 2 seconds.

**PLAY PREVIOUS TRACK** Press and hold back of the long button for 2 seconds.

**ACTIVATE VOICE ASSISTANT** Triple tap either round button.

## CARING FOR YOUR PRODUCT

Please follow these simple instructions to keep your headphones looking & sounding great!

• Clean product with a damp cloth & mild soap. • Not designed to be submerged in water, should this occur product will malfunction. • Avoid excessive twisting / turning of charging cable as this can cause malfunction. • Contains no serviceable components. Do not attempt to open the ear pods or their casing as this may cause harm. • Keep away from strong magnetic fields to avoid interference.

## GUARANTEE

Your Reflex Active product is guaranteed against any defective construction or parts for 2 years from date of purchase. Please retain your receipt as proof of purchase. Breakages caused by water damage, accident or mishandling are not covered. This guarantee is in addition to your statutory consumer rights.

In the unlikely event you need to return your Reflex Active product, please contact us and we'll be happy to guide you through the process.

## IMPORTANT INFORMATION

Enjoy your music, but please stay safe & ensure you stay aware of your surroundings at all times. Do not use this product whilst driving or in other potentially dangerous situations. This product is not a toy, not for use by children. This is a class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures. Made in China by Peers Hardy UK Ltd. Precision House, Starley Way, Birmingham International Business Park, B37 7GN. EU Address, Peers Hardy UK LTD, C/O Global E-commerce Experts, Rijnlanderweg 766, Unit H, 2132 NM, Hoofddorp, Netherlands.

## DISPOSAL OF GOODS

The crossed out wheeltie bin symbol is to remind you that waste electrical products, batteries & accumulators should not be disposed of in household waste. If you are unable to reuse or recycle your article it should be disposed of at a civic amenity site or a local authority recycling facility • Do not dispose of your product within household waste • Disposal of the packaging & your product should be done in accordance with local regulations • Batteries are not to be disposed of in municipal waste stream and require separate collection.

## EU DECLARATION OF CONFORMITY

The full UK & EU declaration of conformity can be viewed online at the following web page: <https://www.reflex-active.com/pages/audio-docc>

## HELP AND CONTACT

If you need any help with your product, then please get in touch, we'll be happy to hear from you! We are available Monday - Friday 9am - 4pm.

✉ [Support@Reflex-Active.Com](mailto:Support@Reflex-Active.Com) 📞 +44 (0) 121 524 1400

## SPECIFICATIONS

- BLUETOOTH VERSION / V5.0
- FREQUENCY / 20 Hz - 20kHz
- CHARGING CASE BATTERY CAPACITY / 300mAh Li-Poly
- HEADPHONE BATTERY CAPACITY / 40mAh Li-Poly
- WORKING TIME / 6-7 HOURS
- CASE CHARGING TIME / 2 HOURS
- EARPHONE CHARGING TIME / 1 HOUR
- STAND BY TIME / 250 HOURS
- WIRELESS RANGE / 10 - 15 METERS



COME JOIN US OVER ON SOCIAL!

 REFLEX.ACTIVE

 REFLEX.ACTIVE