


- Fill beans**

- Fill water**

- Switch on**
To activate the mode "interrupt operation" press "enter"
Save energy!

- Observe display**
WARMING UP... ▶ wait...
or **RINSING** ▶ place cup under nozzle
or **ENERGY SAVING** ▶ press «enter»
- Ventilate if necessary** after long period of non-use
 Place empty receptacle under nozzle
 Draw off hot water until it flows evenly

Preheat cups
Switch on cup heater
→ see «programming»



ADJUSTMENT

Filling quantity <-> Adjust for cup size
if «store fillings» ON → see «programming»
1) Place cup beneath nozzle
2) Press and hold desired button
→ amount remains stored!

Coarseness Adjust only when grinding unit is running
Coffee flows too rapidly (fine grains)
Coffee flows too slowly (coarser grains)

only if necessary

PREPARATION

BEAN COFFEE

- Place cup under nozzle
Different cup sizes are possible
- Adjust coffee outlet
Outlet height is adjustable
- Select amount of powder
Stronger coffee (max. 9 g)
Weaker coffee (min. 6 g)
- Select desired coffee
Press 1 x ▶ for 1 cup
Press 2 x ▶ for 2 cups
- Remove cup

POWDER COFFEE

- Place cup under nozzle
Different cup sizes are possible
- Adjust coffee outlet
Outlet height is adjustable
- Fill in coffee powder
- Max. 1 measuring dipper (= 1 cup)
- NEVER use instant coffee!
- Select powder coffee
- Select coffee
▶ press 1 x only
- Remove cup

CAPPUCCINO

- Place milk receptacle
- Place cup with coffee
- Draw off milk froth
- Change froth quantity if necessary
more frothy / *less frothy*
Regulate the consistency of froth
- Remove cappuccino
To avoid encrustation rinse the steam nozzle with warm water

Improve froth (crema)
- Use another coffee mixture
→ make sure that it is an appropriate coffee sort for fully automatic Espresso coffee machines
- Use fresh roasted coffee beans
- Change the grinding coarseness
Coffee grounds are biodegradable!



STEAM

- Dip in nozzle completely into cold beverage
- Start preparation
- Rotate beverage while frothing
- End preparation
- Remove cup
- Clean nozzle with damp cloth

HOT WATER

- Place glass
- Draw off hot water
(Press hot water key)
- End preparation
(Press again)
- Remove glass

IMPORTANT!
We recommend to empty the dregs drawer each time the message is displayed. The intended time for this process has to exceed 5 seconds. If you reposition the empty drawer after this period has elapsed the display "DREGDRAWER FULL" will be replaced by "READY FOR USE"

PROGRAMMING

Function...	search select	Setting... search select + store
Start programming Start programming: Confirm selection: End selection mode: Leave menu: Browse between menus:	MENU ENTER ESC ESC	
Language	LANGUAGE	ITALIANO - FRANCAIS - Deutsch... Choose desired language: ITALIANO, FRANCAIS, Deutsch, JAPAN, NEDERLANDS, PORTUGUES, CASTELLANO, ENGLISH
Rinse Only for coffee outlet	RINSING	ON - OFF When this function is switched on, the coffee machine initiates, after a lengthy period of inactivity, an automatic rinsing of the coffee outlet parts
Water hardness	WATER HARDN.	HARDNESS 1 - ... 2 - ... 3 - HARDNESS 4 To regulate adjustment for water hardness, carry out a test with the supplied test strip
Preheat cups	CUP HEATER	ON - OFF Switch on cup heater and place cups on the plate
Temperature large coffee	TEMP. L. COFFEE	MINIMUM - LOW - MEDIUM - HIGH - MAXIMUM Enables precise setting of large coffee temperature
Temperature coffee	TEMP. COFFEE	MINIMUM - LOW - MEDIUM - HIGH - MAXIMUM Enables precise setting of coffee temperature
Temperature espresso	TEMP. S. COFFEE	MINIMUM - LOW - MEDIUM - HIGH - MAXIMUM Enables precise setting of espresso temperature
Prebrewing	PREBREWING	ON - OFF This function enables making the most out of the coffee powder. The powder is first moistened and after a short pause, hot coffee flows out
Pregrinding	PREGRINDING	ON - OFF This function triggers dosing and prepares a portion of ground coffee. It enables timesaving in a semi-professional environment
Programming hot water	PROG. HOT WATER	ON - OFF If this function is activated, always the same predefined quantity of water will be released
Programming cappuccino	PROG. CAPPUC.	ON - OFF If this function is activated, always the same predefined quantity of Cappuccino will be released. If this function is deactivated, the cappuccino is released as long as the user does not interrupt the release.
Number of brewings	TOTAL COFFEE	DISPLAY The counter displays the total number of issued coffees. The value cannot be changed.
Descaling (automatic)	DESCALING	AUTOMATIQUE This procedure should be carried out on the machine with cold parts. Never use VINAIGER. It could damage the machine. Descaling enables removal of calcification deposits from the internal components
Descaling reset	SIGNAL DESCAL.	QUANTITY WATER NOT REACHED By activating this function the internal water counter is reset to zero and the message DESCALING disappears
Shut down time	TIMER	+ 15 minutes - 15 minutes Press "Stand by" to activate the manual shut down time mode. To save energy, the machine can be set, in 15 minute intervals, to automatically shut down after a delay time from 15 minutes up to 12 hours
Vending	VENDING	See enclosed sheet
Cleaning cycle	RINSING CYCLE	FILL WATERTANK This program enables efficient removal of coffee fat deposits in order to avoid any changes in taste. The procedure takes 5 minutes and is divided into 4 cycles including rinsing with fresh water at the end. The rinsing program may not be interrupted. Fill water tank, place an empty receptacle with at least 1 litre capacity under the coffee outlet and start cycle.