

DO NOT DESTROY OR
MISPLACE THIS CARD

FOR YOUR SAFETY
DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE
VAPOURS AND LIQUIDS IN THE VICINITY OF THIS OR ANY
OTHER APPLIANCE.

IMPORTANT OPERATING AND
INSTALLATION DATA

Quest

HOT PLATE MODEL QGHP



Manufactured by:

Quest METAL PRODUCTS LTD.
889 ERIN ST., WINNIPEG, MAN R3G 2W6

NOTE: Purchaser must post in a prominent location, instructions to be followed in the event user smells gas.

FOR YOUR SAFETY
WHAT TO DO IF YOU SMELL GAS

- EXTINGUISH ANY OPEN FLAME.
- DO NOT TRY TO LIGHT ANY APPLIANCE.
- DO NOT TOUCH ANY ELECTRICAL SWITCH. DO NOT USE ANY PHONE IN YOUR BUILDING.
- IMMEDIATELY CALL YOUR GAS SUPPLIER FROM A NEIGHBOR'S PHONE. FOLLOW THE GAS SUPPLIER'S INSTRUCTIONS.
- IF YOU CANNOT REACH YOUR GAS SUPPLIER, CALL THE FIRE DEPARTMENT.

**DO NOT OBSTRUCT THE FLOW OF
COMBUSTION AND VENTILATION AIR**

WARNING:

IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE OR MAINTENANCE CAN CAUSE PROPERTY DAMAGE, INJURY OR DEATH. READ THE INSTALLATION, OPERATING AND MAINTENANCE INSTRUCTIONS THOROUGHLY. INSTALLING OR SERVICING THIS EQUIPMENT MUST BE DONE BY A CERTIFIED TECHNICIAN.

INSTALLATION INSTRUCTIONS

1. Installation must conform with local codes, or in the absence of local codes, with the Natural Gas and propane Installation Code, CAN/CSA B149.1 "Latest Edition.", including:
 - a) The appliance and its individual shutoff must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 psi (3.45 kPa).
 - b) The appliance must be isolated from the gas supply piping by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at pressures, equal to or less than 1/2 psi (3.45 kPa).
2. Set Hot Plate in position and level in both directions.
3. Connect gas supply and check all gas piping and tighten if required.
4. This equipment should be installed by authorized personnel and must be connected to gas supply by a licensed gas fitter.
5. Ensure adequate clearances for all air openings into the combustion chamber.
6. Maintain adequate clearance for servicing and proper operation.
7. Each Hot Plate is set up to operate on the type of gas indicated on the rating plate. No other type of gas may be used without the necessary changes being made. Manifold pressure 3.5" W.C. (natural gas) - 11" W.C. (Propane).

FLOOR CLEARANCES

Approved for installation on combustible surfaces with a minimum clearance of 12" to the sides and 18" to the rear from adjacent combustible construction.

LIGHTING INSTRUCTIONS

1. Allow 5 minutes shut down before lighting or relighting.
2. Using a screwdriver, turn pilot adjusting screw counter clockwise to stop position to fully open. Light pilot flame and turn adjusting screw to provide a flame approximately 3/4" long.
3. Test each burner to be sure they light properly by turning burner manual valves "ON"

IMPORTANT: IF PILOT FAILS, SHUT DOWN COMPLETELY FOR FIVE MINUTES.

TO COMPLETELY SHUT DOWN HOT PLATE

1. Turn off all top burners.
2. Turn off all pilot lights. Turn adjusting screw clockwise to stop.

TO OPERATE

1. Turn burner valves to setting desired.

CLEANING

1. Should be done at least at the end of each day or shift.
2. Wire brush the burners to ensure ports are not clogged.
3. Excess grease should be removed from all surfaces with recommended cleaning agents, to prevent it from burning on.
4. Empty and clean the stainless steel drip tray under the burners.

MAINTENANCE

1. Inspect pilot and burner flames to ensure they are burning correctly.
2. Orifice openings must be free and clear of any debris.
3. Lubricate burner valves with approved products approximately every 3-6 months.

GUARANTEE

1. QUEST Metal Products guarantee its equipment to the original purchaser, to be free from defects in material and workmanship for a period of one year, and will guarantee operational parts for a period of 90 days subject to the following conditions:
(A) Written claim by authorized dealer verifying authenticity of said claim.
(B) Replacement parts will be supplied and charged for.
Credit will be issued only when faulty parts are

- returned to the company prepaid and found to be faulty by the original manufacturer.
(C) If such conditions as faulty installation, misuse, lack of servicing, or servicing by unqualified personnel exist it voids the guarantee.
2. You have purchased the best equipment. With proper care and servicing it will give you years of trouble-free operation.

Quest METAL PRODUCTS LTD.

GUARANTEE VOID IF SERVICED BY UNAUTHORIZED PERSONS

(FRANÇAIS AU VERSO)