


QUICK START GUIDE AUBER RDK 300B PID CONTROLLER



FRONT AND BACK PANELS

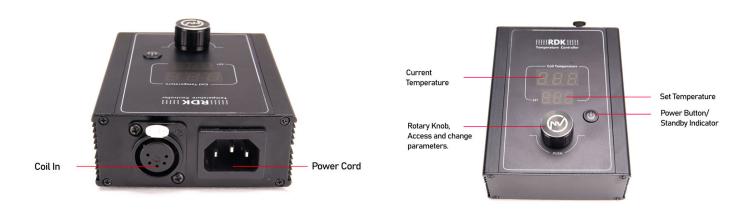

QUICK START



1. Plug in coil to the back of the controller.

2. Plug in power cord also to the back of the controller.





3. Once Power cord is plugged in, the Standby button will light up red.

4. Press Power Button to turn unit on. The coil will immediately start heating up. Proceed with caution and keep coil in a safe place.





5. Use rotary knob to dial-in target temperature.

5. Press rotary knob to set new target temperature.



For more technical information, please refer to the Auber Instruments