




QUICK START GUIDE CH - PID CONTROLLER



FRONT AND BACK PANELS

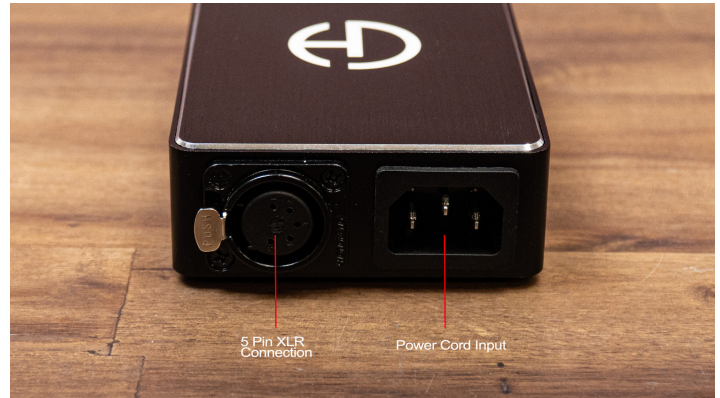

QUICK START



1. With all switches off, plug in your coil to the back of the controller.

2. Plug in your power cord also to the back of the controller. Once done, switch the red power button to the ON position. This is the button located in the back of the unit.



3. Once Power button is turned on, it will display the ambient temperature of the coil.



4. Use the ▲ or ▼ buttons to set your target temperature.



For more technical info, refer to the technical manual.
Scan this QR Code.



CH PID Controller is designed to be used along with an CH Flat Coil or an CH 20mm Coil only. Please determine whether your country requires 110v or 220v before making your purchase.

WARNING: Coil gets extremely hot when connected to this device. Please keep away from children and pets. Use caution when using this equipment.