## ASSEMBLY INSTRUCTION ITEM NO: 194S1068BR/BU/DG-1 ACCENT CHAIR



Legs & hardware are stored at the bottom of seat inside the dust cover as shown in drawing, please take out the legs and hardware for assembly.


Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.

**Component list** 

No	Drawing	Qty	Description
А		1 PC	CHAIR
В		2 PC	FRONT LEG L&R
с		2 PC	REAR LEG L&R
D		4 PC	BOLT (M8×80mm) (FRONT LEG)
E	$\bigcirc$	8 PC	WASHER
F		1 PC	ALLEN KEY
G		4 PC	BOLT (M8×65mm) (REAR LEG)

1

Step 1 Take out the Legs & hardware from the the bottom of seat inside the dust cover as shown in drawing.

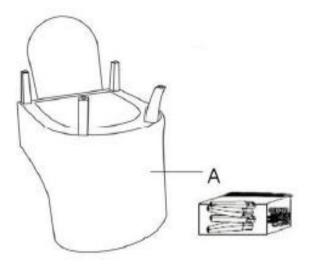


## Step 2 Front Leg Assembly:


Align and insert front legs to the front seat frame pre-drilled holes, make sure both pre-drilled holes are in line, insert bolts D and washers then tighten with Allen Key.

## **Rear Leg Assembly:**

Align and insert rear legs to the rear seat frame pre-drilled holes, rear legs curves must facing outward, make sure both pre-drilled holes are in line, insert bolts G and washers then tighten with Allen Key.

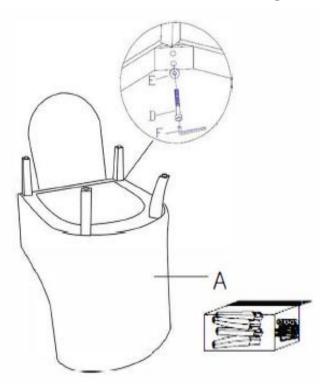

Step 3 Check all the bolts are tighten securely in position, put the dust cover back to the position. Upright the chair and make sure the chair is stable.

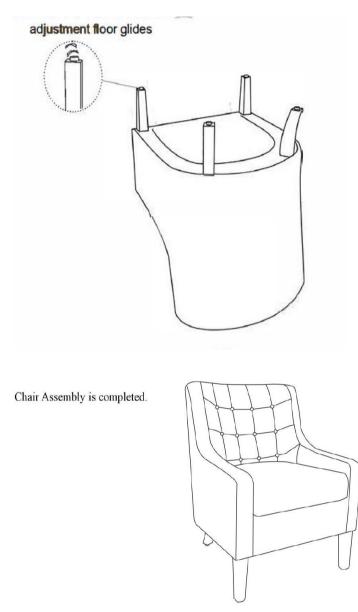

## **Care Instruction for Fabric Furniture:**

In order to maintain the original appearance of your fabric furniture, please follow below simple care procedures:

• Avoid exposing forniture directly to sunlight or heating and air conditioning outlets. Sunlight and/or exposure to heating and air conditioning outlets will fade/damage fabric.

- Vacuum or wipe with a soft brush to remove dust.
- Clean fabric furniture with professional cleanser.



• For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.