

Operation Manual

# SPYCRUSHERS CLOTHES HOOK CAMERA



**SPYCRUSHERS**



[www.spycrushers.com](http://www.spycrushers.com)

## BEFORE YOU BEGIN...

**IMPORTANT NOTE: A Micro SD Card is need in order to operate this device. (recommended size 4GB-16GB)**

**Once a Micro SD Card is installed please fully charge (5-8hrs) your device before use.**

**IMPORTANT NOTE: Prohibition against eavesdropping**

All jurisdictions have specific laws and regulations relating to the use of cameras and video recorders. Before using any camera or video recorder for any purpose, it is the buyer's responsibility to be aware of all applicable laws and regulations that prohibit or limit the use of such products and to comply with the applicable laws and regulations.

## PACKAGE CONTENTS

- SpyCrushers Clothes Hook Camera
- Mini USB 2.0 Cable
- Mounting Screws and Bracket
- Double-Sided Mounting Tape

\*(Added bonuses may be included depending on purchase)

- USB Charger (use to charge product via electrical outlet)
- OTG Card Reader (insert micro sd card to view recorded media when connected to smartpone. Works with Android phones only)
- Micro SD Card Adapter (insert micro sd card and use with OTG Card Reader or insert into any computers' card reader slot and view all recorded media)

# SPYCRUSHERS CLOTHES HOOK CAMERA

## Operation Manual

### SPYCRUSHERS CLOTHES HOOK CAMERA LAYOUT



1. Video Start/Stop Button

2. Camera

3. Reset

4. Status Indicator

5. Micro SD Card Slot

6. On/Off

7. Mini USB Cable Port

### Operating Instructions:

#### Turning the Clothes Hook Camera On

- Properly insert micro sd card in its slot (#5). Switch on/off switch to on position (#6). Press the video start/stop button (#1) and hold until the status indicator light (#4) turns on then release it.
- The status indicator light will stay lit. Device is now in standby mode for video recording.

#### Turning the Clothes Hook Camera Off

- With the Clothes Hook Camera in standby mode press and hold the video start/stop button (#1). The status indicator light (#4) will flash repeatedly 3 or 4 times and go out. The Clothes Hook Camera will shut down saving all video files automatically.
- **NOTE: The Clothes Hook Camera will not shut down and turn off if you do this while the Clothes Hook Camera is recording video. If the Clothes Hook Camera is recording you must press the video start/stop button (#1) once to stop recording and return to standby then press and hold it again to perform the shut-down sequence.**

#### Recording Video

- While in standby mode press the video start/stop button the status indicator light flashes and goes out. Video is now being recorded.  
**Note: Make sure there is adequate light and the camera lens is not blocked by other items. Recorded objects should be more than 19 inches from the camera.**
- Press the video start/stop button again to stop the video saving the file and returning to standby mode.

### Connect to Computer & View Recordings

- While the Clothes Hook Camera is off or in standby it can be connected to your computer using the Mini USB 2.0 Cable. Plug the Mini USB 2.0 Cable connector into the Clothes Hook Camera's Mini USB Cable Port (#7) and the other end into your computer's USB Port. The operating system will automatically recognize your device. Repeat connection if necessary until device is recognized.
- Navigate to and click to open the "Removable Disk" that represents your device in your computer's directory. Click to open video file to play, move or delete saved videos.
- **(IF APPLICABLE):** Recordings can also be viewed on Android smartphones when using the included OTG Card Reader. To do so, remove the micro sd card from the device and insert it into the OTG Card Reader, either alone or while inside the Micro SD Card Adapter. Next, connect the OTG Card Reader to your phone. Find the OTG Card Reader within your connected devices and open file to view saved video. NOTE: Depending on your current apps capabilities an AVI video player app may be required to view video on phone. If so, the free "VLC for Android" app is recommended.
- To disconnect safely from your computer when finished please click "Safely Remove Hardware and Eject Media" icon on the right bottom corner of your task bar. Then click the "Eject" choice and disconnect the Mini USB 2.0 Cable from both your computer and device.

### Charging Device

- Use the Mini USB 2.0 Cable to connect the Clothes Hook Camera to your computer, USB Charger Adapter or any USB power source. When the battery is charging you will see a status indicator light (#4) blinking slowly. The battery is fully charged when the light stops and remains static. **Note: If the indicator light continues to blink after the recommended 5-8hr initial charging time disconnect and use normally. The Clothes Hook Camera can be charged at anytime, but for maximum battery life please use battery until completely drained and fully recharge to its capacity for the first 5 times.**

### Setting the Time Stamp

- There are 2 ways:
- Creating a new txt file: Connect the Clothes Hook Camera to your computer. Under the Devices and Removable Storage Directory click on and open the “Removable Disk” or the name that represents the Clothes Hook Camera on your computer. Right-click inside the white space and go to “New” then click and create a ‘Text Document’. Name the text file “Time” and save. Open Time.txt and type the date and time in this format: yyyy-mm-dd hh:mm:ss Therefore, fifteen seconds past 2:02pm on December 25th 2012 would be written as: 2012-12-25 14:02:15. Note the use of 24-hour time. Ensure you save your changes. Save the file, disconnect the USB cable, make a new recording and verify.
- 2. Editing the existing .txt file: If after opening the Removable Disk there is already an existing time or tag file visible to change the date and time stamp simply open the TAG.txt or TIME.TXT file and edit the numbers on it with the current date and time. Do not modify the format which should be the same as above. Do not perform any other modifications, only rewrite to the current time and date. Save the file, disconnect the USB cable make a new recording and verify.
- **Note: Still need help? Watch our Time & Date Stamp instructional video on <http://www.spycrushers.com/pages/video>**

### Reset

- To reset the Clothes Hook Camera use a toothpick or non-metal pointed object to push the reset button (#3). Metal objects may damage the SpyCrushers Clothes Hook Camera and should be avoided. This will not reset the time or delete any files. Use this only if the Clothes Hook Camera is not responding.

### Cautions

- a) **Battery:** As the usage time grows, the battery life will shorten. Please recharge battery to its full capacity before using after long periods of inactive use.
- b) **File Security:** The Clothes Hook Camera is not a dedicated storage device. SpyCrushers does not warrant the completeness and safety

# SPYCRUSHERS CLOTHES HOOK CAMERA

## Operation Manual

- created files. Please back-up the important files onto your computer or other storage device.
- c) **Video Quality:** The Clothes Hook Camera is not professional grade video recorder or camera. SpyCrushers makes no assurance that the video or photo quality will meet your particular standards.
  - d) **Operating Temperature :** 0—40°C。
  - e) **Operating Humidity :** 20%—80%, Please do not use this product at above normal humid environment. The Clothes Hook Camera is not water resistant.
  - f) **Filming:** In order to protect the optics within from the hard light please do not expose lens directly to sunlight or other strong or harsh lighting sources for long periods.
  - g) **Cleaning:** Please only use lens paper or soft eye cloth to clean camera lens.
  - h) **Durability:** The Clothes Hook Camera is a precision electronic product. Please do not use around high magnetic fields or high electric fields.

### Specifications

Subject	Relatively Parameter
Video Format	AVI
Video Encoding	M-JPEG
Video Resolution	720x480 VGA
Video Frame Rate	30fps±1fps
Media Player Software	Most major operating system media players or mainstream media playing software.
Image Scaling	4:3
Operating Systems	Windows me/2000/xp/2003/vista, Mac OS X, Linux
Charging Voltage	DC-5V
Interface-Type	Mini USB 2.0 Cable
Memory Interface	Micro SD Card (Not included) (Max Size: 16GB)
Battery Type	High-Capacity Polymer Lithium Battery
Recording Time Per Full Charge	60 Minutes
Full Battery Charging Time	120 minutes

### **Warranty Information**

SpyCrushers brand and all SpyCrushers products are owned and operated by Crushers, Inc. Crushers, Inc warrants this product against defects in workmanship and material for a period of one (1) year from its original purchase date. You must present your receipt as proof of date of purchase for warranty validation. Any unit which proves defective during the stated period will be repaired without charge for parts or labor or replaced at the sole discretion of Crushers, Inc.. The end user is responsible for all freight charges incurred to send the product to Crushers Inc's repair centers. The end user is responsible for all shipping costs incurred when shipping from and to any country other than the country of purchase. The warranty does not cover any incidental, accidental or consequential damages arising from the use of or the inability to use this product. Any costs associated with the fitting or removal of this product by a tradesman or other person or any other costs associated with its use are the responsibility of the end user. This warranty applies to the original purchaser of the product only and is not transferable to any third party. Unauthorized end user or third party modifications to any component or evidence of misuse or abuse of the device will render all warranties void.

By law some countries do not allow limitations on certain exclusions in this warranty. Where applicable by local laws, regulations and legal rights will take precedence.

Crushers Inc.

[info@crushersinc.net](mailto:info@crushersinc.net)

© Crushers Corporation Communications 2013

### **FCC Verification**

This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on,

# SPYCRUSHERS CLOTHES HOOK CAMERA

## Operation Manual

the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

WARNING: Modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

**ATTENTION: Learn how you can get other great Crushers, Inc. products like the SpyCrushers Clothes Hook Camera for FREE by going to [www.vipgroup.crushersinc.net](http://www.vipgroup.crushersinc.net)**

**Socialize with us!**

[www.facebook.com/Spycrushers](http://www.facebook.com/Spycrushers)

[www.twitter.com/spycrushers](http://www.twitter.com/spycrushers)

[www.pinterest.com/spycrushers](http://www.pinterest.com/spycrushers)

[www.instagram.com/spycrushers](http://www.instagram.com/spycrushers)

[www.youtube.com/user/SpyCrushers](http://www.youtube.com/user/SpyCrushers)

# SPYCRUSHERS CLOTHES HOOK CAMERA

## Operation Manual