

RAPTOR GUARD PERCHING DETERRENTS

SUPER STRAP INSTALLATION



SUPPLIES

- Slip-on Raptor Guard (RGSO-36 featured here)
- Super strap banding, buckles, and tightening tool (not included)



RGSO-36



SUPER STRAPS

INSTRUCTIONS



Position raptor guard with 5" of air gap clearance between the edge of the raptor guard and edge of the insulator.



Wrap straps around the saddles (between the bolts) and tighten by hand.



Use the super strap tightening tool to tighten each strap.



Cut the tails off of each strap.

VIDEO TUTORIAL

Scan the QR code to see a quick video of a live install >

Or visit powerlinesentry.com/install-support for a full library of support materials.



TRUE POWER RELIABILITY DEMANDS EFFECTIVE WILDLIFE PROTECTION

POWERLINESENTRY.COM | INFO@POWERLINESENTRY.COM | 970.599.1050