

P&R Technologies, Inc. Phone 503-292-8682 Toll Free 800-722-8078 www.pr-tech.com

## **SnapFast<sup>™</sup> Clamp** Instructions

## **General Information**

Installing the SnapFast clamp is easy. For live lines up to 115 kV, you need the SnapFast Installation Tool (part number #SF03003) and an insulated hot stick. For higher voltages we advise installing on the top static/ground wire. SnapFast is also safe for OPGW lines. The clamp comes in two sizes for wire diameters from 10–70 mm (0.39–2.75 in.) or 4–16 mm (0.16 to 0.63 in.). Recommended spacing is every 30 feet.

## Products mounted with SnapFast clamps




Mounting Instructions

**2.** Open the SnapFast clamp with your hands, using the large finger holes to avoid getting hurt.



**Warning!** Handle the opened clamp very carefully, as it snaps closed with significant force and could cause injury.

## **3.** Place the open SnapFast clamp on the installation tool.

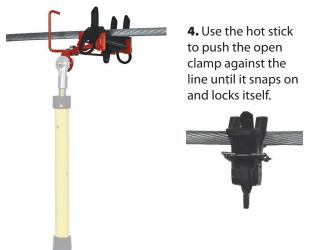

Unmounting Instructions To unmount the SnapFast clamp, use the hook on the installation tool. Insert the hook into a large finger hole and pull down.