

29-31 Richland St. Kingsgrove. Sydney NSW 2208 Australia

Phone: 02 9554 9600 | Fax: 02 9554 9433

enquiries@domuslighting.com | www.domuslighting.com

## **Installation Manual**

July 25, 2022 12:18 PM AQUA-10


Item No.	Variants				ССТ	Description
	Standard		DALI			
	Blk	Wht	Blk	Wht		·
AQUA-10	21270	21271	21287	21288	TRIO	10W Round Downlight

Thank you for purchasing your new LED AQUA, Please take the time to read and understand the instruction sheet below. Failure to do so may void warranty.

## **Specifications**

_								
Voltage:	240V	Lumen (±5%):	Warm White 3000K - 870Im	Dimmable:	Yes*			
			Neutral White 4000K - 980lm					
			White 5700K - 930lm					
Power:	10W	Beam Angle:	60°	Operating Temp:	-20°C~45°C			
IP Rating:	65	CCT:	3000K - 4000K - 5700K	Power Factor:	≥0.9			
CRI:	≥90	Lifespan:	50,000hrs	Cutout:	Ø75-80mm			
*Fully dimmable with suitable dimmers.								

## Minimum clearance distances to flammable building elements.

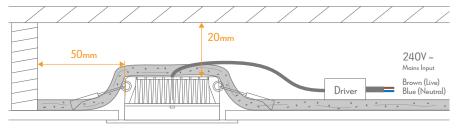

The LED driver is NOT suitable for covering with insulation material.

Warning-Risk of overheating or fire if the clearance distances are compromised


The flexible cable cannot be replaced, if this cable is damaged the luminaire will need to be replaced.

The light source of this luminaire is not replaceable; at the end of life the whole luminaire should be replaced.






1. Open a hole according to the cutout size of led downlight.

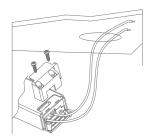

2. Use screw-driver to open the driver terminal cover, feed the main AC wire L.N. in terminal block respectively, then fix the cover back.

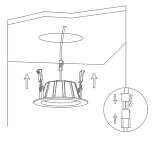

3. Connect the downlight with driver, hold back the spring clip then push the downlight into the hole.



4. Make sure the downlight fixed tightly in ceiling, turn on the power.

**Note:** -The lamp must be installed by professional electrician

-Ensure the power supply is switched off before fitting this product

-Do not touch the lamp when in use

-Keep away from hot steam and corrosive gas