



# Tivah Bar Light Installation Instructions

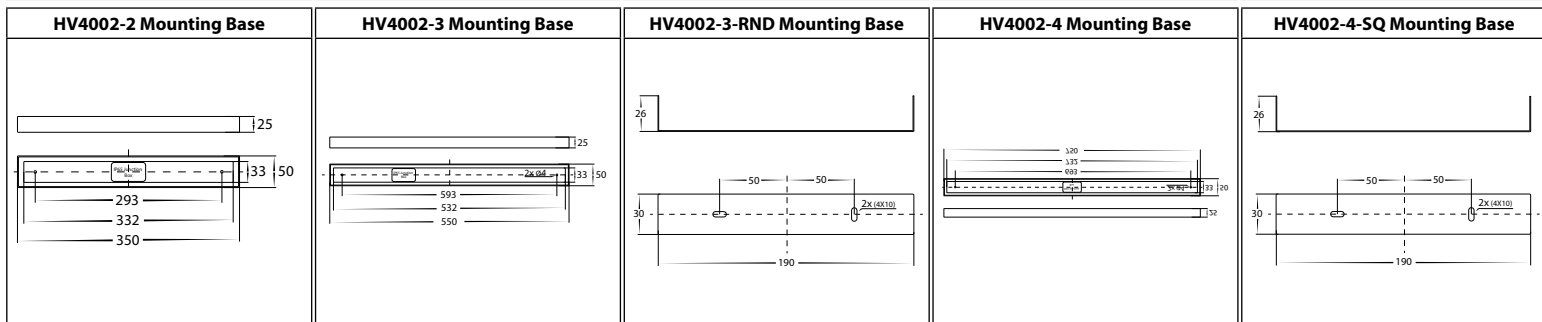

## Product Specifications

Model No.	HV4001T-2-BLK	HV4001T-2-WHT	HV4001T-2-TTM	HV4001T-3-BLK	HV4001T-3-WHT	HV4001T-3-TTM	HV4001T-4-BLK	HV4001T-4-WHT	HV4001T-4-TTM
				HV4001T-3-BLK-RND	HV4001T-3-WHT-RND	HV4001T-3-TTM-RND	HV4001T-4-BLK-SQ	HV4001T-4-WHT-SQ	HV4001T-4-TTM-SQ
Name	Tivah								
Material	Aluminium								
Colour	Black	White	Titanium	Black	White	Titanium	Black	White	Titanium
IP Rating	IP65								
Input Voltage	240v AC								
Protection Class	1 (Requires Earth)								
Lamp Base	GU10								
Lamp Wattage	2x 5w			3x 5w			4x 5w		
Colour Temp	TRI Colour - 3000k, 4000k, 5500k								
Lumens	2x 270lm, 2x 285lm, 2x 300lm			3x 270lm, 3x 285lm, 3x 300lm			4x 270lm, 4x 285lm, 4x 300lm		
CRI	> 80								
Dimmable	No (not with globes supplied)								
Warranty	3 Years Replacement*								

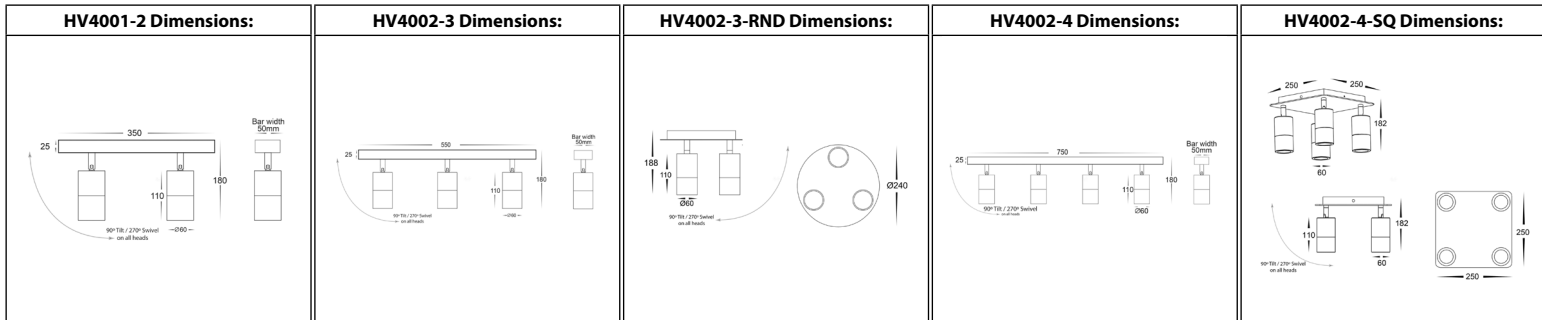

### Important Safety Issues:

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Do not exceed maximum wattage restrictions for globes: 240V GU10 = 35w / 12V MR16 = 20w
- Modification of this product will void any warranty.
- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- Aluminium and 304SS fittings must not be installed within 5km of any salt water environments.
- All o-rings and seals must be in place correctly to maintain warranty.
- These instructions may be updated at any time due to product improvements. Please visit website for most current installation instructions.

### Steps for Installation:

1. Make sure that the electrical circuit is free of voltage (master switch off)
2. Locate IP rated junction box within fitting. Undo screws from junction box and remove cover.
3. Insert cable through cable gland on junction box. If your cable is not circular you must fix entry of your cable to maintain IP rating. Failure to do so will void warranty.
4. Connect the cable - use wire with earth; connect the earth first, then live and neutral wire.
5. Reattach cover to IP rated junction box making sure screws are tight and seals are still in place.
6. Install the backing plate securely using appropriate screws for application.
7. Apply silicon seal around the whole base plate to avoid any water getting into electrical connections.
8. Colour temperature and wattage is preset to 3000k, to change remove covers from fitting by twisting anti clockwise and set aside. Remove globes and select desired colour temperature by moving switches on side of globe and reinsert globes into lampholders.
9. Reattach covers by turning clockwise making sure the seals are still in place and caps are tight to avoid any water penetration.
10. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

### Steps for Changing Globe:

1. Remove the cover by twisting anti-clockwise and set aside, remove globe by also twisting anti-clockwise.
2. Re-insert the appropriate globe by inserting the 2 circular pins into the lampholder and twisting clockwise.  
(Make sure not to exceed max wattage, see product label for correct info)
3. Reattach cover by turning clockwise making sure the seals are still in place and caps are tight to avoid any water penetration.

## Must be installed by a licensed electrician

### Contact Details:

143 Beauchamp Road  
Matraville NSW 2036  
Australia

Tel: 02 9381 8300  
Fax: 02 9666 8881  
Email: sales@havit.com.au  
Web: www.havit.com.au

### Warranty Terms & Conditions\*



### Additional Information

