


Nella Surface Mounted Downlight Installation Instructions





| Product Specifications | | | | | | |
|------------------------|-----------------------------------|-------------|-----------------------------------|-------------|-----------------------------------|-------------|
| Model No. | HV5812T-BLK | HV5812T-WHT | HV5813T-BLK | HV5813T-WHT | HV5815T-BLK | HV5815T-WHT |
| Name | Nella Tilt | | | | | |
| Material | Aluminium | | | | | |
| Colour | Black | White | Black | White | Black | White |
| IP Rating | IP40 | | | | | |
| Input Voltage | 240v | | | | | |
| Protection Class | 1 (Requires Earth) | | | | | |
| Lamp Base | Built in LED | | | | | |
| Lamp Wattage | 1x 7w | | 1x 12w | | 1x 18w | |
| Colour Temp | TRI-Colour - 3000k , 4000k, 5500k | | TRI-Colour - 3000k , 4000k, 5500k | | TRI-Colour - 3000k , 4000k, 5500k | |
| Lumens | 600lm, 640lm, 605lm | | 980lm, 1015lm, 985lm | | 1100lm,1120lm, 1110lm | |
| CRI | >80 | | | | | |
| Wiring | Parallel | | | | | |
| Dimmable | Yes - Triac Dimmable | | | | | |
| Warranty | 3 Years Replacement* | | | | | |

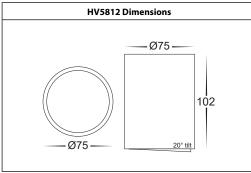


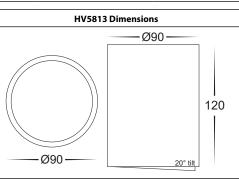

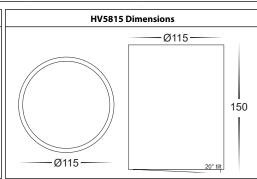

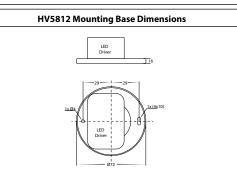

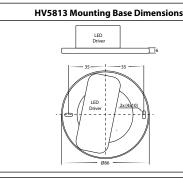

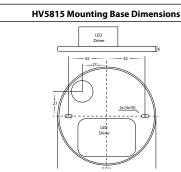

Important Safety Issues:

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Modification of this product will void any warranty.
- · Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- Aluminium and 304SS fittings must not be installed within 5km of any salt water environments.
- All o-rings and seals must be in place correctly to maintain warranty
- · This form may be updated at any time due to product improvements, please check online installation form for most current version.

Steps for Installation:

- 1. Make sure that the electrical circuit is free of voltage (master switch off)
- 2. Remove base plate by twisting anti clockwise.
- Unplug fitting from driver and set fitting aside
- Install base plate in desired location using appropriate screws for application. If fitting is installed in an outdoor environment,
- 5. Connect the cable: Use wire with earth, connect earth first then positive and then neutral
- 6. Reconnect plug from fitting to base plate.
- 7. Fitting is preset to 3000k, To change slide switch inside fitting to desired colour temperature
- 8. Reattach fitting to base plate by twisting clockwise
- 9. Tilt fitting to desired direction if necessary by pushing gently on centre of fitting.
- 10. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

Must be installed by a licensed electrician

Contact Details:

143 Beauchamp Road
Matraville NSW 2036
Australia

Tel: 02 9381 8300 Fax: 02 9666 8881 Email: sales@havit.com.au Web: www.havit.com.au







