


Lexan Surface Mounted Downlight Installation Instructions




Product Specifications				
Model No.	HV5831T-BLK	HV5831T-WHT	HV5832T-BLK	HV5832T-WHT
Name	Lexan			
Material	Polycarbonate			
Colour	Black	White	Black	White
IP Rating	IP54			
Input Voltage	240v AC			
Protection Class	2 (No Earth Required)			
Lamp Base	Built in LED			
Lamp Wattage	1x 3/5/7w			
Colour Temp	TRI Colour - 3000k, 4000k, 5500k			
Lumens	200-560lm, 255-595lm, 270-630lm			
CRI	> 80			
Wiring	Parallel			
Dimmable	Yes - Triac Dimmable			
Warranty	3 Years Replacement*			

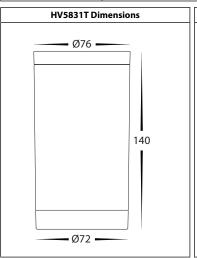

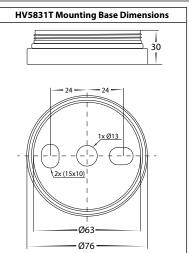

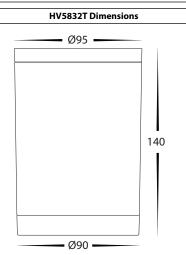

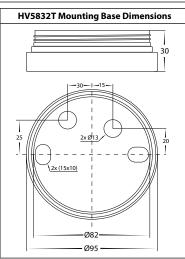

Important Safety Issues:

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Modification of this product will void any warranty.
- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- All o-rings and seals must be in place correctly to maintain warranty
- This form may be updated at any time due to product improvements, please check online installation form for most current version.

Steps for Installation:

- Make sure that the electrical circuit is free of voltage (master switch off)
- 2. Remove base plate by twisting anti clockwise.
- 3. Remove globe and set aside.
- Install base plate in desired location
- 5. Connect the cable: First positive and then neutral
- 6. Colour temperature and wattage is preset to 3000k and 7w, Select desired colour temperature and wattage by moving switches on bottom of globe and insert globe into lampholder.
- 7. Reattach fitting to base plate by twisting clockwise
- 8. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

Steps for Changing Globe:

- 1. Remove the cover by twisting anti-clockwise and set aside, remove globe by also twisting anti-clockwise.
- Re-insert the appropriate globe by inserting the 2 circular pins into the lampholder and twisting clockwise. (Make sure not to exceed max wattage, see product label for correct info)
- 3. Reattach cover by turning clockwise making sure the seals are still in place and is tight to avoid any water penetration.

Must be installed by a licensed electrician

Contact Details:

143 Beauchamp Road Matraville NSW 2036 Australia Tel: 02 9381 8300 Fax: 02 9666 8881 Email: sales@havit.com.au Web: www.havit.com.au

Warranty Terms & Conditions*





