


## Nella Surface Mounted Downlight Installation Instructions





Product Specifications								
Model No.	HV5841S-BLK	HV5841S-WHT	HV5842S-BLK	HV5842S-WHT	HV5843S-BLK	HV5843S-WHT	HV5844S-BLK	HV5844S-WHT
	HV5841S-BLK-EXT	HV5841S-WHT-EXT	HV5842S-BLK-EXT	HV5842S-WHT-EXT				
Name	Nella Baffled							
Material	Aluminium							
Colour	Black	White	Black	White	Black	White	Black	White
IP Rating	IP54							
Input Voltage	240v							
Protection Class	1 (Requires Earth)							
Lamp Base	Built in LED							
Lamp Wattage	1x 7w		1x 12w		1x 18w		1x 24w	
ColourTemp	5-Colour - 2700k, 3000k , 4000k, 5000k, 5700k		5-Colour - 2700k, 3000k , 4000k, 5000k, 5700k		5-Colour - 2700k, 3000k , 4000k, 5000k, 5700k		5-Colour - 2700k, 3000k , 4000k, 5000k, 5700k	
Lumens	499lm, 512lm, 558lm, 593lm, 601lm		688lm, 840lm, 916lm, 931lm, 1004lm		1371lm, 1410lm, 1518lm, 1600lm ,1617lm		1554lm, 1638lm, 1796lm, 1893lm, 1968lm	
CRI	>80							
Wiring	Parallel							
Dimmable	Yes - Triac Dimmable							
Warranty	3 Years Replacement*							

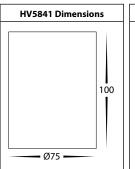


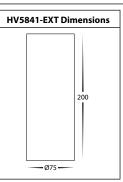


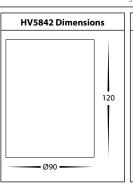


 


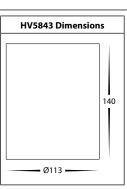


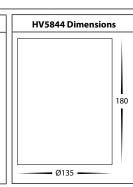

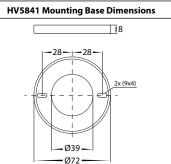

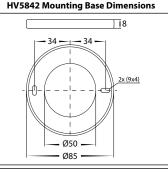

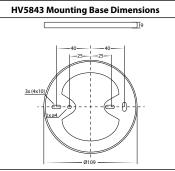

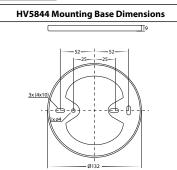

#### Important Safety Issues:

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Modification of this product will void any warranty.
- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- Aluminium and 304SS fittings must not be installed within 5km of any salt water environments.
- All o-rings and seals must be in place correctly to maintain warranty
- This form may be updated at any time due to product improvements, please check online installation form for most current version.

### Steps for Installation:

- 1. Make sure that the electrical circuit is free of voltage (master switch off)
- 2. Remove base plate by twisting anti clockwise.
- Unplug fitting from driver and set fitting aside
- Install base plate in desired location using appropriate screws for application. If fitting is installed in an outdoor environment, Seal must stay in place to keep fittings IP Rating.
- . Connect the cable: Use wire with earth, connect earth first then positive and then neutral
- 6. Reconnect plug from fitting to driver.
- 7. Fitting is preset to 3000k, To change slide switch inside fitting to desired colour temperature
- Reattach fitting to base plate by twisting clockwise
- All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

#### Steps for Installation of inserts:

- 1. Inserts are held in by magnets, To remove pull on inside of insert and remove.
- Insert honey comb into new insert.
- 3. Push new insert into fitting allowing magnets to stick to fitting.

## Must be installed by a licensed electrician

# **Contact Details:** 143 Beauchamp Road

Matraville NSW 2036 Australia Tel: 02 9381 8300 Fax: 02 9666 8881 Email: sales@havit.com.au

Web: www.havit.com.au

## Warranty Terms & Conditions\*



#### **Additional Information**

