


Sunrise Wall Light Installation Instructions




Product Specifications				
Model No.	HV8069W	HV8069C	HV8070W	HV8070C
Name	Sunrise			
Material	Plaster			
Colour	White (Can be painted)			
IP Rating	IP20			
Input Voltage	240v AC			
Lamp Base	G9 - 25w Max		E14	
Lamp Wattage	1x 2w			
Colour Temp	3000k	5500k	3000k	5500k
Lumens	120lm	130lm	220lm	240lm
CRI	>80			
Dimmable	No - Not with globes supplied			
Warranty	3 Years Replacement*			

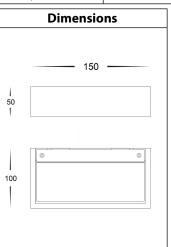

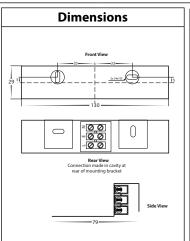

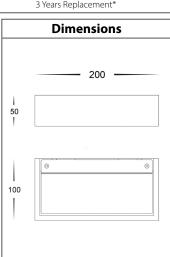

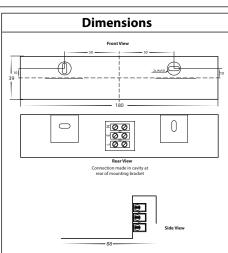

Important Safety Issues:

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Modification of this product will void any warranty.
- · Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- Aluminium and 304SS fittings must not be installed within 5km of any salt water environments.
- All o-rings and seals must be in place correctly to maintain warranty
- · This form may be updated at any time due to product improvements, please check online installation form for most current version.

Steps for Installation:

- 1. Make sure that the electrical circuit is free of voltage (master switch off)
- 2. Remove Mounting Bracket from fitting by removing screw from bottom of fitting
- 3. Connect the cable use wire with earth; connect the earth first, then live and neutral wire.
- 4. Install mounting bracket in desired location using appropriate screws for application.
- 5. Slide fitting back over bracket and tighten screws, Be careful not to overtighten as this may cause plaster to crack.
- . Insert globe into fitting
 - HV8069 Models Align pins of globe into lampholder and gently push globe into place.
 - HV8070 Models Insert globe into lampholder and twist clockwise.
- 7. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

Steps for Changing Globe:

- 1. When Changing globes make sure not to exceed maximum wattage Check product label for correct wattage.
- HV8069 -
 - Grab side of globe and gently pull until globe is dislodge from lampholder
 - Align pins of globe into lampholder and gently push globe into place.
- 3 HV8070
 - Grab side of globe and twiat anti clockwise until globe can be removed from fitting
 - · Insert globe into lampholder and twist clockwise.

Must be installed by a licensed electrician

Contact Details:

143 Beauchamp Road Tel: 02 9
Matraville NSW 2036 Fax: 02
Australia Email: s

Tel: 02 9381 8300 Fax: 02 9666 8881 Email: sales@havit.com.au Web: www.havit.com.au





