

Instructions for the Safe Removal of Viewing Surfaces from Folding Screens by Draper

- ① With one hand, grasp frame and black border of projection surface near a corner. Try not to grab the white portion of the viewing surface. With the other hand, grasp the very edge of the black border, right over the corner point (see Fig. 1).

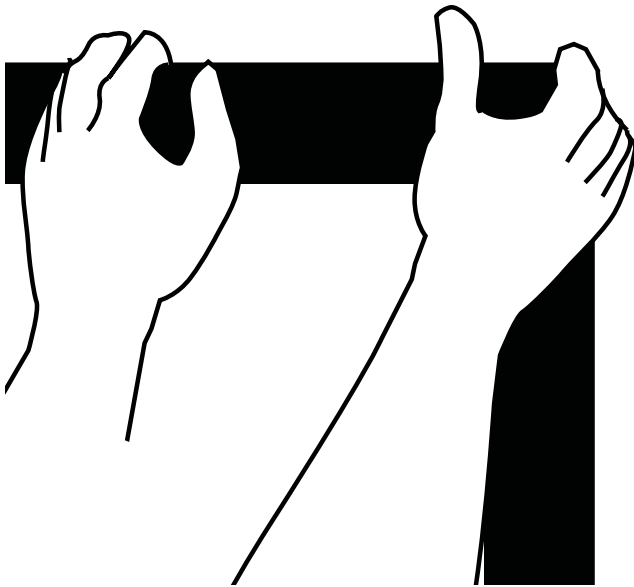


Figure 1

- ② Carefully pull up on the viewing surface until the corner of the screen unsnaps from the frame (see Fig. 2).

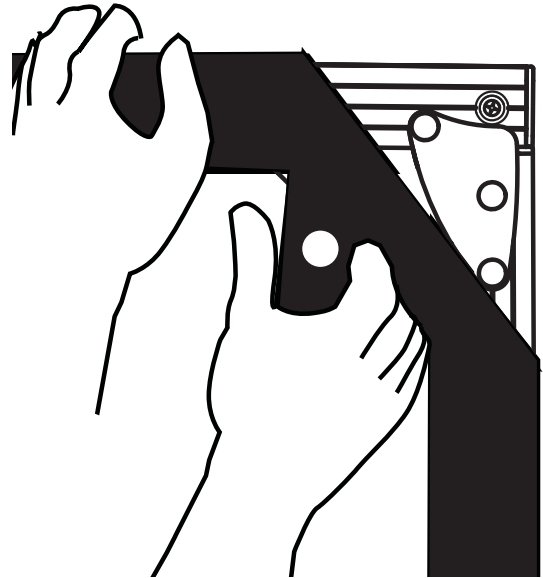


Figure 2

- ③ While still grasping the screen frame with one hand, move to the next snap location and pull up on the viewing surface until that snap is also released (see Fig. 3).

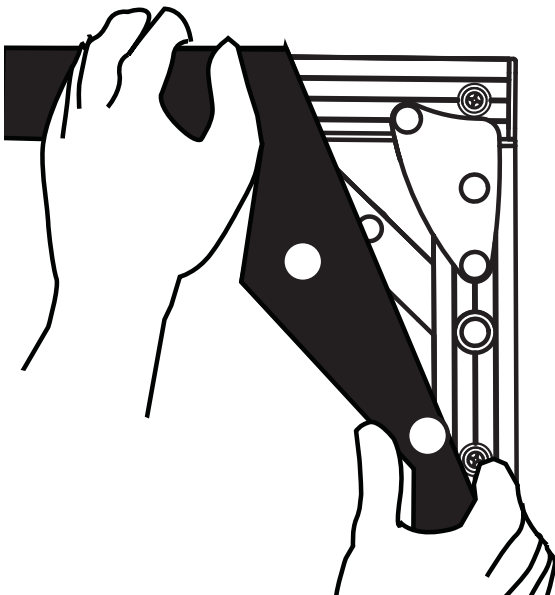


Figure 3

- ④ Repeat, moving around the screen releasing one snap at a time.
⚠ Caution: DO NOT "Grip and Rip," or grab the surface and pull it away from several snaps at once. This can lead to screen surface or snap damage (see Fig. 4).

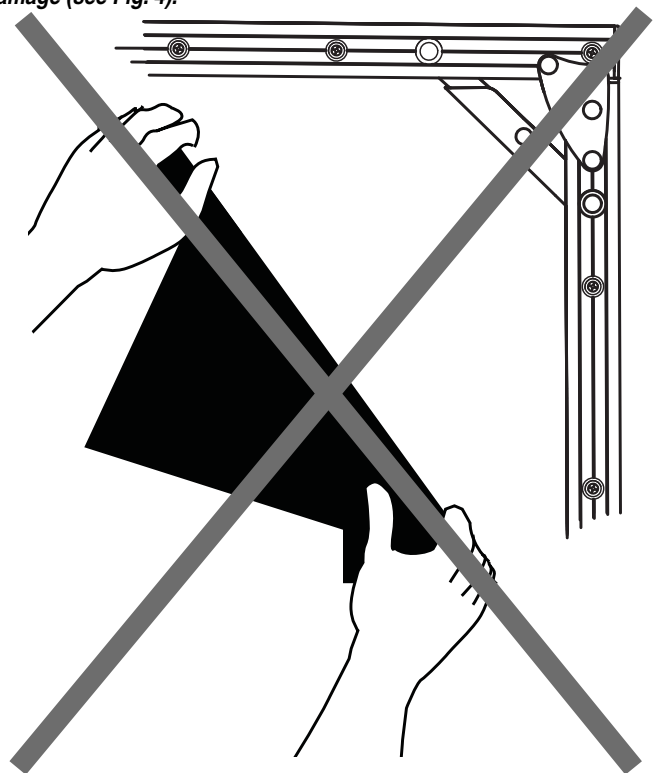


Figure 4

DRAPER®

411 S. Pearl St., Spiceland, IN 47385 USA ■ 765-987-7999
www.draperinc.com ■ fax 765-987-7142

Copyright © 2011 Draper Inc. Form FoldingSurfaceRemoval_Inst11 Printed in U.S.A.

Always fold with snaps face-to-face. Do not permit screen fabric to contact border material or snaps when folded. Store in pouch provided.

If you encounter any difficulties installing or servicing your screen, call your dealer or Draper, Inc., Spiceland, Ind., (765) 987-7999, or fax (765) 987-7142.