


Setup Instructions


A. Wireless trigger and Yard Master Electric projection screen set up [CODE] button:

1. Unplug the Power Cable attached to your motorized Elite Screen from the wall.
2. Connect the Projector's Power Cable to the wireless trigger, then plug the cable into a nearby power outlet.
3. Locate the [CODE] button on the back of the trigger, then press and hold (use a small pin) the [CODE] button.
4. While holding down the [CODE] button, plug the screen's power cord into a nearby outlet, and release the [CODE] button when you hear a beep sound from the screen.
5. Please press and hold the [CODE] button again within 3 seconds after releasing the [CODE] button, until you hear 3 rapid beeps, it means the synchronization (pairing) process is successful.
6. If unsuccessful repeat from Step 1.

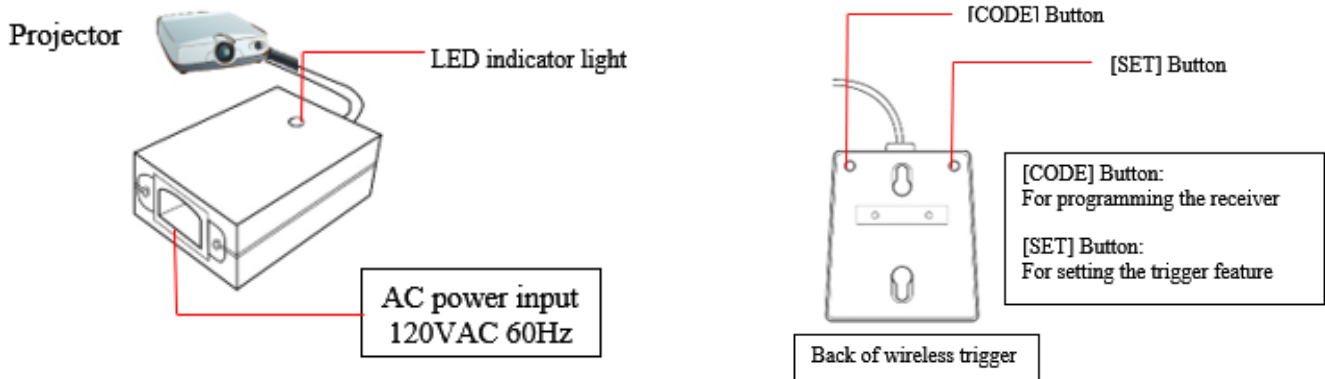

B. Wireless trigger and projector set up [SET] button:

1. Plug the wireless trigger's IEC cable into the projector's power receptacle.
2. Locate the [SET] button on the back of the trigger, then press and hold (use a small pin) the [SET] button for about 3 seconds until you hear a beep sound.
3. Turn on the projector within 10 seconds after the LED indicator light emits a flash and a beep.
4. At this step in the process, the trigger will record the running current of the projector when it is turned on, and then the process is completed.
5. Power ON the projector. The screen should drop the screen automatically.
6. Power OFF the projector. The screen should retract the screen automatically.
7. If unsuccessful repeat from Step 1.

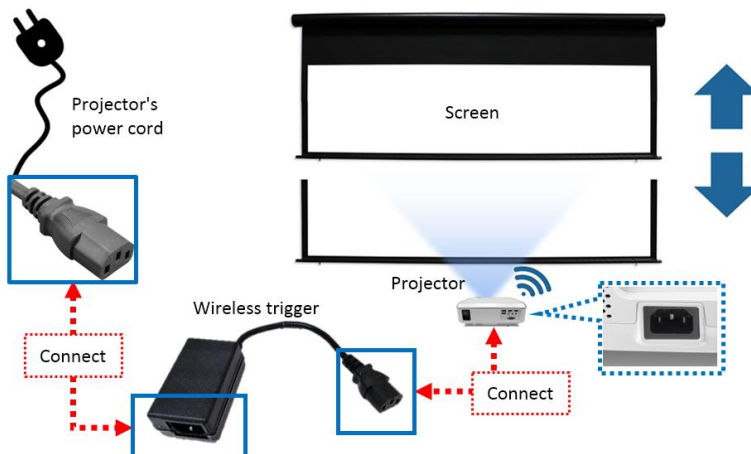

Note

- When powering off the projector, assure it is completely powered off (ex, fan off), then the screen will retract automatically
- If the motorized screen does not automatically drop or retract, repeat the process from Step 1.