



ZOMS-TR12V

Wireless 12V Trigger for Yard Master Electric Series

Setup Instructions

Step 1. Unplug the Yard Master Electric's power cable from the power outlet.

Make sure it is as quiet as possible for the next steps

Step 2. Locate the **small hole** on the trigger and have a pointy object ready.

Step 3. Press and Hold on the small hole located on the trigger (red light turns on)

Step 4. Plug-in the electric screen into a power outlet (you will hear a faint beep sound).

Step 5. Continue Pressing the small hole on the trigger until you hear four faint beeps.

Once you hear the beeps the trigger has been synchronized to your electric screen.

Step 6. Connect the ZOMS-T12V into the projector's trigger output port.
Make sure to enable this feature on your projector if needed.

Step 6. Power ON the projector. The screen should drop the screen automatically.

Step 7. Power OFF the projector. The screen should retract the screen automatically.

NOTE

- **When powering off the projector, assure it is completely powered off (ex. fan off), then the screen will retract automatically.**
- **If the motorized screen does not automatically drop or retract, repeat the process from step one.**



For Technical support or an Elite Screens contact in your area, visit
www.elitescreens.com | info@elitescreens.com