

# Pretika

# Facial Brush

## Exfoliate & Cleanse

Instructions  
for Use  
& Warranty  
Information

Model ST102

Pretika.

**Pretika**<sup>®</sup>

Merging Science  
with Skin Care<sup>®</sup>

# Pretika Facial Brush

*Congratulations and thank you for being a customer of Pretika! Before you start, please take a moment to get to know your Facial Brush and how it works. For important information about safety and how to use the device, read the full Instructions for Use booklet. Contact the experts at Pretika for any assistance in helping you get started.*

Customer Service Contact:

1-949-481-8818

Email: [customerservice@pretika.com](mailto:customerservice@pretika.com)

Or visit our website at [www.pretika.com](http://www.pretika.com)

Hours of Operation:

Monday – Friday, 8:00 AM to 4:00 PM Pacific Standard Time

## **IMPORTANT INFORMATION**

It is our experience that if a product uses batteries, many of the problems thought to be product defects are simply caused by weak batteries. To save any unnecessary inconvenience and expense, we encourage you to try replacement batteries before you return the product.

## Facial Brush Features

---

### To Install or Replace Batteries

1. Hold the battery compartment cover in the right hand horizontally with the brush head attachment toward you.



2. Grip the top of the device in the left hand.
3. With the right hand, press down on the battery compartment cover. (See image above.)
4. Then with the left hand, pull the top of the device outward away from the battery compartment cover.
5. Insert two (2) AA batteries (not included), aligning +/- symbols as directed.
6. Replace battery compartment cover by pressing firmly into place until it clicks.



Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. To dispose of alkaline batteries, place in the trash (normal municipal waste). Recycling of batteries at your local recycling center is good for the environment.

### Installing Brush Head:

Press the brush head (included) onto the connection pin until it locks into position with a click. If replacing the brush head, gently pull brush head to remove. For best results, replace the brush head every three (3) months, or sooner if the bristles become depressed.

## Daily Treatment

---

### Step 1: Exfoliate and Cleanse Skin

Dampen face with warm water. Press the Facial Brush to treated area and turn on. Press Power Button once for high power or press again for low power, speed is dependent on sensitivity of skin type. Press firmly to treated area and move Facial Brush in an upward, circular motion. Recommended time per treated area is 20 seconds for each area– forehead, nose, chin and each cheek. To turn off– from low speed setting, press once to turn off.

### Step 2: For Use In Combination With Your Daily Beauty Routine

Facial Brush can be used with many of your daily beauty routines– from cleansers, scrubs to microdermabrasion crèmes. Dampen face with warm water, dot your face in five (5) areas: forehead, each cheek, chin, and nose lightly with beauty treatments. Move Facial Brush in an upward, circular motion to apply treatments. Gently rinse skin thoroughly with warm water and pat dry.

This Facial Brush can be used daily, morning and night, but if you have especially sensitive skin or other skin concerns, talk to your doctor or dermatologist about frequency of use.

## Caring For Your SonicDermabrasion®

---

### Micro-Fiber Bristle Brush Heads

1. Clean Brush Heads after every use. Remove Brush Heads, rinse clean with warm water and mild soap to remove any build-up that may have accumulated, shake off excess water and towel dry– or gently rub the Brush Head against a towel for 5-10 seconds while the Facial Brush is on. Do not attach wet brush heads to handle while charging.
2. Do not allow liquid cleansers or moisturizers to accumulate on Brush Heads.

### Facial Brush Handle

1. Do not use abrasive cleaners or chemicals to clean any part of the Facial Brush.
2. Clean handle with damp cloth – using mild detergent or warm water and towel dry immediately.

**\*DO NOT IMMERSE FACIAL BRUSH IN WATER.**

## Warning

---

For external use only. KEEP OUT OF REACH OF CHILDREN. Please be sure to use as directed. Avoid contact with eyes. Do not use Facial Brush without replaceable brush head attached. As with any product, discontinue use if rash, redness or itching occurs. Consult physician if irritation persists. Use this appliance only for its intended use as described in the Instructions For Use booklet. Do not apply extreme pressure when using unit or when replacing attachments. This could damage product. The attachments are delicate and must be attached and removed with care. Not following operating instructions carefully may result in damage to the Facial Brush unit and attachments. Basic safety precautions should always be followed when using any battery-operated product, especially when children are present.

AVOID DIRECT CONTACT WITH EYES AND HAIRLINE/HAIR. IF SKIN IRRITATION OR REDNESS OCCURS, DISCONTINUE USE. As this product increases exfoliation effect of facial cleansers, it may also increase your skin's sensitivity to the sun.

## Limited 90 Day Warranty

---

Your Pretika product is warranted to be free from defect in material and workmanship for a period of 90 days after its original purchase date under normal use. This warranty extends only to the original retailer purchaser with original proof of purchase and only when purchased from an authorized Pretika retailer or reseller. This warranty does not cover products determined by Pretika Corporation to be damaged by any of the following:

- Accident, misuse, abuse or alteration
- Servicing by unauthorized persons
- Use with unauthorized accessories or use other than instructed
- Use of incorrect charging adaptor types
- Any other conditions beyond our control

Some states do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal its negligence. Pretika's entire liability for any defective product shall not exceed the purchase price for the defective product. Pretika disclaims any liability for general, consequential, incidental or special damages, even if aware of the likelihood of such damages.

**During Warranty Period with Proof of Purchase (store receipt)**

Should your product become defective during the warranty period, package the item securely and return it prepaid/insured – along with proof of purchase to the address shown below:

**Outside Warranty Period**

Should your product become defective outside the warranty period– or you do not have store receipt, package the item securely and return it prepaid/insured along with a check or money order payable to Pretika Corporation in the amount of \$20.00 to cover handling and postage charges. Be sure to include legible name, street address, email and phone number information and send to the address below:

Return to:  
Pretika Corporation  
Warranty Repair Department  
12215 Holly Street  
Riverside, CA 92509 USA

To insure prompt repair or replacement, provide complete, legible name, street address, email and phone number information and a note indicating the nature of the product defect. We will Repair or Replace (at our sole discretion) product at no charge and return via ground shipment.

**Save these instructions for future reference.**



# Pretika Facial Brush

---

## Exfoliate & Cleanse

**Pretika** Corporation  
Riverside, CA 92509  
**p** 949.481.8818 | **f** 949.481.8828  
**e** customerservice@pretika.com  
**w** www.pretika.com

 Facebook.com/pretikaskincare

 Twitter.com/pretikaskincare

