



Pretika
SonicDermabrasion®
Facial Brush

Exfoliate and Cleanse

Operating Instructions
& Warranty Information

Pretika®

Merging Science
with Skin Care®

Model ST255A

Pretika SonicDermabrasion® Facial Brush

Exfoliate and Cleanse

Congratulations and thank you for being a Pretika customer. Before you start, please take a moment to get to know your SonicDermabrasion® by carefully reading the Operating Instructions and Warranty Information included with your new product.

IMPORTANT INFORMATION

1. Your SonicDermabrasion may show a “green” light when charged for the 1st time (no “red” blinking light) – this is normal since each product is fully checked before shipment. If you’re charging for the 1st time and the green light is on – still charge the device to get a “full” charge before first use.
2. **IMPORTANT:** Make sure waterproof silicone cover and base of handle are dry before placing charging connector into handle for charging. **Insert silicone cap securely and tightly into place after each charge.**
3. The SonicDermabrasion has an automatic shut-off feature to ensure use within the recommended treatment time.

It is our experience that if a product uses rechargeable batteries, many of the problems thought to be product defects are simply caused by not following the above charging instructions. To save any unnecessary inconvenience and expense, we encourage you to follow these steps.

SonicDermabrasion® Facial Brush Features

- High frequency micro-pulsating oscillating cleansing technology works with the natural elasticity of the skin to deeply cleanse and gently exfoliate.
 - Water-resistant facial brush for use in the shower or bathroom sink with cordless design for better control.

Charging

Using the "lift tab" on the waterproof silicone cover located on the base of the SonicDermabrasion handle, lift and open to insert connector into opening and plug Charger Cord into wall outlet– a red light will blink indicating the SonicDermabrasion is charging. When fully charged indicator light will turn green. Once charged, simply store the charging adaptor and place the SonicDermabrasion into Countertop Stand. Do not use the SonicDermabrasion while recharging batteries. Fully charged batteries will provide approximately 2.5 hours of use. It's time to recharge your SonicDermabrasion when the power output is reduced. Keep Away From Water during charging.


IMPORTANT: Insert silicone cap securely and tightly into place after each charge. Never use with silicone cap not secured tightly into place. Never place in countertop stand without silicone cap securely in place. Make sure waterproof cover and base of handle are dry before placing charging connector into handle for charging.

Specifications

Input: 100-240V~50/60HZ

Output: 6.5VDC 500mA

Battery: Ni-MH Battery

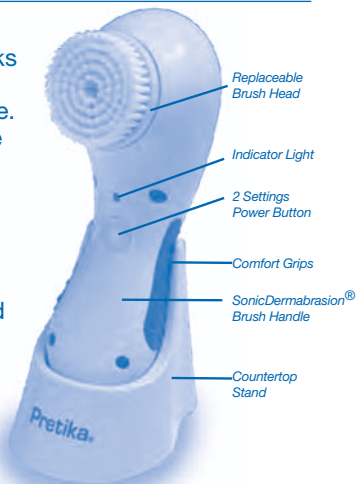

Using SonicDermabrasion® Daily Treatment

Use daily to remove the Epidermal (outer) layer of dry and flaky skin cells and reduce the appearance of fine lines and wrinkles so your skin feels smoother. Gentle enough for use as part of your daily beauty routine. Helps reduce appearance of pores, oily areas, dry skin patches and blemishes. Cleans so effectively for Healthier Skin and prepares the skin to better absorb skin care treatments.

Step 1: SonicDermabrasion® Exfoliate and Cleanse Skin

Dampen face with warm water. Press the Facial Brush to treated area and turn on. Press Power Button once for high power (red light) or press again for low power (green light), speed is dependent on sensitivity of skin type. Press firmly to treated area and move Facial Brush in an upward, circular motion. Recommended time per treated area is 20 seconds for each area— forehead, nose, chin and each cheek. Your SonicDermabrasion® Facial Brush will shut off after one minute of use in each speed setting, turn on as needed. To turn off - from low speed setting, press once to turn off.

Step 2: For Use In Combination With Your Daily Beauty Routine

SonicDermabrasion® can be used with many of your daily beauty routines – from cleansers, scrubs to microdermabrasion crèmes. Dampen face with warm water, dot your face in five (5) areas: forehead, each cheek, chin, and nose lightly with beauty treatments. Move Facial Brush in an upward, circular motion to apply treatments. Gently rinse skin thoroughly with warm water and pat dry.

Micro-Fiber Bristle Brush Heads– Attach and Remove

To attach Brush Head, place center of the Brush Head on matching hexagonal attachment point located on the handle. Press from center of the Brush Head and push down until it snaps into place. To remove the Brush Head, simply grip the outer plastic base of the Brush Head firmly in one hand and the facial brush handle in the other hand – then pull up evenly.

Caring For Your SonicDermabrasion®

Micro-Fiber Bristle Brush Heads

1. Clean Brush Heads after every use. Remove Brush Heads, rinse clean with warm water and mild soap to remove any build-up that may have accumulated, shake off excess water and towel dry – or gently rub the Brush Head against a towel for 5-10 seconds while the SonicDermabrasion® is on. Do not attach wet brush heads to handle while charging.
2. Do not allow liquid cleansers or moisturizers to accumulate on Brush Heads.

Facial Brush Handle

1. Do not use abrasive cleaners or chemicals to clean any part of the SonicDermabrasion.
2. Clean handle with damp cloth – using mild detergent or warm water and towel dry immediately.

Countertop Stand

1. Use mild detergent or warm water and towel dry immediately.

***DO NOT IMMERSER CHARGING ADAPTOR IN WATER. ADAPTOR CONNECTOR MUST REMAIN DRY AT ALL TIMES.**

*Replace **Brush Heads** as needed– they can be purchased from your retailer or online at www.pretika.com.*

Pretika®

Customer Service

For questions or assistance relating to the use of this product– or for information on all of the innovative Beauty, Skin Care, Spa and Personal Care products manufactured by Pretika, contact our Customer Service Team at 949-481-8818 Phone (8:00 AM to 5:00 PM, Pacific Standard time, Monday through Friday), 949-481-8828 Fax or by email at customerservice@pretika.com.

Warning

1. For external use only. Keep out of reach of children and please use as directed. Avoid contact with eyes. As with any product, discontinue use if rash, redness or itching occurs. Consult physician if irritation persists. Anyone suffering from acne or any skin disorder should consult physician before using this product. Do not use on sore or injured areas.
2. Use this appliance only for its intended use as described in the Operating Instructions.
3. Do not use attachments not recommended by manufacturer.
4. Do not leave unit on when not in use.
5. Do not apply extreme pressure when using unit or when replacing attachments. This could damage product. The attachments are delicate and must be attached and removed with care. Not following operating instructions carefully may result in damage to the SonicDermabrasion® unit & attachments.
6. Basic safety precautions should always be followed when using any electrical product, especially when children are present.
7. Never operate the SonicDermabrasion® Charger if it has a damaged cord or plug, if it is not working properly, or has been dropped into water.
8. Do not place or store the cradle and charging cord unit where it can fall or be pulled into tub, sink, water or other liquid.
9. Do not reach for cradle or charger cord unit that has fallen into water, unplug immediately.
10. Keep the cord away from heated surfaces
11. Do not attempt to open the Brush Handle to clean the interior.
12. Do not plug into an incorrect voltage source outlet, use only with appropriate voltage.

Complies with the limits for a Class B digital device, under Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product on and off, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna
- Increase separation between equipment and receiver
- Connect the product into an outlet on a circuit different from the circuit the receiver is connected to.
- Consult the dealer or an experienced radio/television technician for help

Limited 90 Day Warranty

Warranted from date of purchase against defects in material and workmanship. This warranty does not include damage to the product as a result of misuse or accident. Some states do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary, from state to state. Pretika Corporation shall not be liable for any incidental or consequential damages arising out of defects in this product, whether or not caused by its negligence.

During Warranty Period with Proof of Purchase (store receipt)

Should your product become defective during the warranty period, package the item securely and return it prepaid/insured – along with proof of purchase to:

Pretika Corporation
Warranty Department
12215 Holly Street
Riverside, CA 92509-2315

To insure prompt repair, provide complete, legible name, address and phone number information and a note indicating the nature of the product defect. We will Repair or Replace (at our sole discretion) product at no charge.

Outside Warranty Period

Should your product become defective outside the warranty period– or you do not have store receipt, package the item securely and return it prepaid/insured along with a check or money order payable to Pretika Corporation in the amount of \$25.00 to cover repair/replacement, handling and return shipping charges.

To Order Replenishment Sets or Replacement Parts

Visit our website at www.pretika.com – to see the innovative beauty, skin care, spa and personal care products from Pretika. Click on “Replenishment Sets” link to order using a credit card on our secure site.

Mail or fax orders to:

Pretika Corporation

Customer Service Department

12215 Holly Street, Riverside, CA 92509-2315

Phone: 949-481-8818 (8:00 AM to 5:00 PM, PST)

Fax: 949-481-8828

E-Mail: customerservice@pretika.com

Website: www.pretika.com

Pretika®

Merging Science
with Skin Care®