

QUICK START + INSTRUCTION GUIDE

ITEM: AOWM1

ARCHER

WIRED OPTICAL MOUSE

Welcome to audeeo

Thank you for choosing this product. We are striving for excellence in both design & comfort. But we could not do this without you. Let's take accessories to new heights together.

- Welcome**
 - 1.1 What's In The Box
- Your Wired Optical Mouse**
 - 2.1 Getting To Know Your Mouse
- All Features & Contents**
- Quick Start Guide**
 - 4.1 Mouse Setup
- Specifications**
- Troubleshooting & Customer Support**
- Care & Warnings**
- Warranty & Legal**
- Notes**

- Welcome**
 - 1.1 What's In The Box

Guide Booklet



Wired Mouse



- Your Wired Optical Mouse**
 - 2.1 Getting To Know Your Mouse

A **Left Mouse Button**

standard left click to select applications & programs

B **Right Mouse Button**

standard right click to select pop-up menu of common commands

C **Scroll Wheel**

roll the scroll wheel to move up or down. It also doubles as a button


D **Shift Button:**

Press to shift between very fast (free-spinning) and precision (click-to-click) scrolling.

E **Backward & Forward Buttons:**

* Press to flip between Web pages or folders.

*depends on your operating system & settings

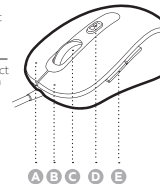

Manufactured & Distributed by:
iHip Europe Ltd., Chartwell House,
292-294 Hale Lane, London, UK, HA8 8NP
audeeo™ is a registered trademark of iHip Europe Ltd.
MADE IN CHINA



3 All Features & Contents



FORWARD & BACKWARD BUTTONS
press to flip between Web pages or folders



ADVANCED WHEEL SCROLLING
precise scroll wheel is faster and quieter



HAND SCULPTED COMFORT
ergonomic design for less hand cramps



800DPI-1200DPI
fast & accurate reactions for precise movements



COMPATIBILITY WITH
PC/LAPTOP/DESKTOP
MAC® • WINDOWS® • CHROME™

+ OTHER DEVICES WITH A USB PORT



PLUG & PLAY CONNECTION

no hassles just plug the cord into a free USB port and you are ready to go


Plug the mouse cable into a USB port and wait until the system default driver is installed.

CONTENTS: • Corded Mouse • Quick Start & Instruction Guide

4 Quick Start Guide

4.1 Mouse Setup

- 1 Turn on your computer
- 2 Plug the mouse cable into a USB port and wait until the system default driver is installed.

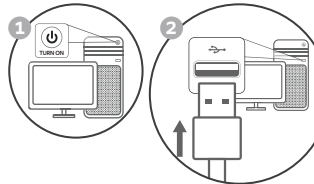

WIRED MOUSE - ARCHER

5 Specifications

Specifications: Mouse	
RATING	5V, 22mA
SIDE BUTTONS	2
SHIFT WHEEL BUTTON	YES
SENSOR	Laser-grade optical sensor
SCROLL WHEEL	Yes
ADJUSTABLE DPI	1200/1800/2400/3600

6 Troubleshooting & Customer Support

Troubleshooting:

MOUSE IS NOT RESPONSIVE

- Check the connection between the mouse and USB port
- Try re-inserting your mouse into another USB port on your computer.
- Reset your computer and try again

WIRED MOUSE - ARCHER

7 Care

Continuous use of any Mouse may cause injury to hands, wrists, arms, neck or backward. If you feel ache, numbness or weakness in these areas, consult a qualified health professional.

TO REDUCE THE RISK OF SUCH INJURIES FOLLOW THESE PRECAUTIONS:

- **Position Yourself:** Choose a chair that provides support for your lower back. Adjust your work surface height and your chair to assume a comfortable and natural body posture.
- **Go Lightly:** Type with a light touch, keeping your hands and fingers relaxed. Avoid resting your palms or your wrists on any type of surface while typing. Don't rest on edges, such as the edge of your desk.
- **Take Breaks:** Take frequent short breaks. Get up and walk around at least a couple of times every hour. Adjust your chair so the seat does not press in to the back of your knees.

8 Warranty & Legal

The condition of this warranty and our responsibilities under this warranty are as follows: Supplier's warranty is non-transferable. This warranty is limited to the original purchaser only.

- You must be able to prove the date of original purchase of the unit with a dated receipt up to one year.
- The warranty is not applicable if the product has been subject to physical abuse, improper installation, modification or repair by unauthorized third party.
- The responsibility of supplier's products shall be limited to the repair or replacement of the product as its sole discretion.
- Specifically exempt from any warranty are limited-life consumable components subject to normal wear and tear such as batteries, decorates and other accessories.
- A supplier will not take any responsibility if the failure of the unit has resulted from accident, abuse, misuse, or any unauthorized repair, modification or disassemble.
- Modification and repair of the unit should be done by authorized and qualified service personnel, Center or returned to the manufacturer.
- This warranty give you specific legal rights, and you may also have other rights which vary under local laws.

Guidelines for protection of the environment



This appliance should not be put into the domestic garbage at the end of its useful life, but must be disposed of at a central point for recycling of electric and electronic domestic appliances.



This symbol on appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.



The information contained herein is subject to change without notice. Microsoft and Windows are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. Mac® is a trademark of Apple Inc., registered in the U.S. and other countries. Chrome OS™ is a trademark of Google LLC. All other trademarks are the property of their respective owners.

WIRED MOUSE - ARCHER