

Replacing the Kestrel Impeller

Using your thumbs press FIRMLY on the impeller module to remove the entire unit.

Press only **the sides of the new impeller** when installing to avoid damaging the precision hub bearing.

Insert the impeller so that the side that has a small triangle (close to the perimeter) faces the front of the Kestrel when installed. Orient one "arm" straight up (fig.1 & fig.2). The impeller can be pushed in from either side.

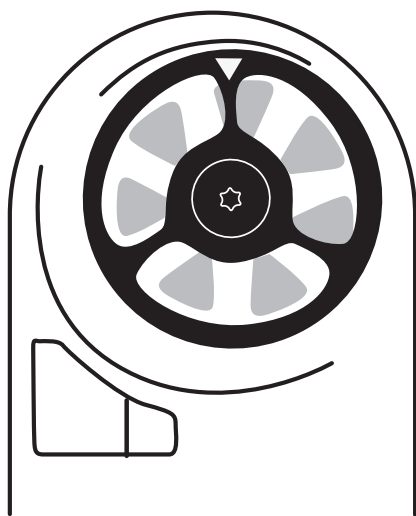


fig.1 Kestrel
1000 - 3500

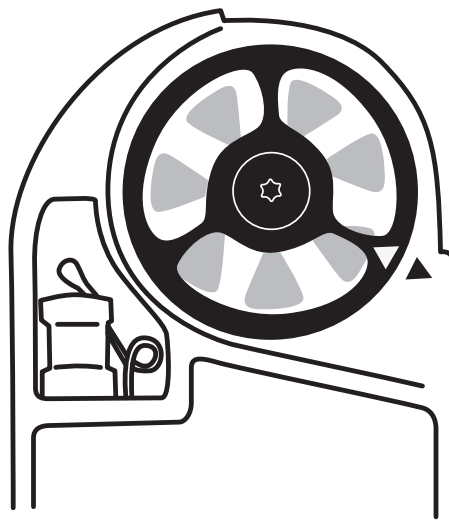


fig.2 Kestrel
4xxx-5xxx



ExtremeMeters.com
AUTHORIZED NK KESTREL DISTRIBUTOR
A WEATHER REPUBLIC, LLC STORE