

TROUBLESHOOTING CHANGING SENSORS & WIRING WHICH IS CALLED THE LOOM

1. If you need to change sensors first disconnect sensors from control box the flat plug.
2. Pull capping off loom cover downside of unit.
3. Twist sensors to remove.

Return faulty part to us for checking and/or replacing.

4. To put in new sensors place each sensor into cut out peel of protection on tape press sensors onto bin replace cover.
5. Pull flat plug and cable up through mounting housing & connect flat plug back into control box.
6. You must put back cover on to cover control box and pump if this is not done the unit will not work.



E: sales@proplaster.com.au

TROUBLESHOOTING GUIDES AVAILABLE

1. Power Box
2. Changing the Bags
3. Changing the Sensors
4. Clean & Warranty
5. Control Box
6. Leaking & Poor Pressure
7. Removing Pump



FILL OUT BELOW AND RETURN WITH FAULTY EQUIPMENT

POST REPLACEMENT PART TO:

C/o Customer Care Department
31 Neumann Road, Capalaba Qld 4157

- PROOF OF PURCHASE **ENCLOSED/EMAILED.**
- DETAILED EXPLANATION OF THE DAMAGE/ISSUE
- PICTURES/VIDEOS AND ANY OTHER ADDITIONAL MATERIAL TO SHOW THE DAMAGE **EMAILED.**
- DETAILED EXPLANATION OF THE DAMAGE/ISSUE **ENCLOSED/EMAILED.**

The more information you supply, the easier and quicker we will process your request.

Name: _____

Phone: _____

Return Address: _____

Email: _____