

CONTROL BOX REMOVAL

You have checked Power Box with no problems – next check control box due to NO RED LIGHT

1. Remove switch - chrome round end & black lead
2. Remove pump – flat plug black and red lead (2 wires)
3. Remove Loom – flat plug (3wires)
4. Lift control box out.

Return faulty part to us for checking and/or replacing.



E: sales@proplaster.com.au

TROUBLESHOOTING GUIDES AVAILABLE

1. Power Box
2. Changing the Bags
3. Changing the Sensors
4. Clean & Warranty
5. Control Box
6. Leaking & Poor Pressure
7. Removing Pump



FILL OUT BELOW AND RETURN WITH FAULTY EQUIPMENT

POST REPLACEMENT PART TO:

C/o Customer Care Department
31 Neumann Road, Capalaba Qld 4157

- PROOF OF PURCHASE **ENCLOSED/EMAILED.**
- DETAILED EXPLANATION OF THE DAMAGE/ISSUE
- PICTURES/VIDEOS AND ANY OTHER ADDITIONAL MATERIAL TO SHOW THE DAMAGE **EMAILED.**
- DETAILED EXPLANATION OF THE DAMAGE/ISSUE **ENCLOSED/EMAILED.**

The more information you supply, the easier and quicker we will process your request.

Name: _____

Phone: _____

Return Address: _____

Email: _____