

## TROUBLE SHOOTING LEAKING & POOR PRESSURE

1. Always check for leaks when you install clean filter cartridges.
2. Use smear of rubber grease to help sealing & stop 'O' ring kinking on both filter housing 1uM & 5uM
3. Check 'O' is not stuck in black lid
4. Use a smear rubber grease on all hose fittings that have rubber 'O' rings
5. Check inline filter near control box squeeze sides and pull up clear top rinse off any product on filter mesh & smear rubber grease in top to help sealing and stop kinking push clear top onto black base – it snaps shut.
6. As the system uses a pressure pump any leaking will cause lack of pressure.
7. Remember to replace back cover – NO cover system will not work.

Replacement Filter Cartridges and 'O' rings available [online here](#)



E: [sales@proplaster.com.au](mailto:sales@proplaster.com.au)

### TROUBLESHOOTING GUIDES AVAILABLE

1. Power Box
2. Changing the Bags
3. Changing the Sensors
4. Clean & Warranty
5. Control Box
6. Leaking & Poor Pressure
7. Removing Pump



### FILL OUT BELOW AND RETURN WITH FAULTY EQUIPMENT

#### POST REPLACEMENT PART TO:

C/o Customer Care Department  
31 Neumann Road, Capalaba Qld 4157

- PROOF OF PURCHASE **ENCLOSED/EMAILED.**
- DETAILED EXPLANATION OF THE DAMAGE/ISSUE
- PICTURES/VIDEOS AND ANY OTHER ADDITIONAL MATERIAL TO SHOW THE DAMAGE **EMAILED.**
- DETAILED EXPLANATION OF THE DAMAGE/ISSUE **ENCLOSED/EMAILED.**

The more information you supply, the easier and quicker we will process your request.

Name: \_\_\_\_\_

Phone: \_\_\_\_\_

Return Address: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

Email: \_\_\_\_\_