

TROUBLESHOOTING REMOVE PUMP

1. Firstly, unclip hoses pull back orange clips pull out hoses and put out of way.
2. Undo 2 bolts at front of pump using 3mm Alan key for top of bolt and 6mm open ended spanner underneath where you removed hoses.
3. Disconnect flat plug (Black & Red wires)
4. Push pump back – leaving 2 front rubber feet on pump & 2 back rubber feet on base of stainless steel.
5. When Pump is replaced don't forget to put cover over pump and control box – NO cover system will not work.

Return faulty part to us for checking and/or replacing.



E: sales@proplaster.com.au

TROUBLESHOOTING GUIDES AVAILABLE

1. Power Box
2. Changing the Bags
3. Changing the Sensors
4. Clean & Warranty
5. Control Box
6. Leaking & Poor Pressure
7. Removing Pump



FILL OUT BELOW AND RETURN WITH FAULTY EQUIPMENT

POST REPLACEMENT PART TO:

C/o Customer Care Department
31 Neumann Road, Capalaba Qld 4157

- PROOF OF PURCHASE **ENCLOSED/EMAILED.**
- DETAILED EXPLANATION OF THE DAMAGE/ISSUE
- PICTURES/VIDEOS AND ANY OTHER ADDITIONAL MATERIAL TO SHOW THE DAMAGE **EMAILED.**
- DETAILED EXPLANATION OF THE DAMAGE/ISSUE **ENCLOSED/EMAILED.**

The more information you supply, the easier and quicker we will process your request.

Name: _____

Phone: _____

Return Address: _____

Email: _____