


SWIFTCAST

UNIVERSAL ROD HOLDER FOR RAFTS

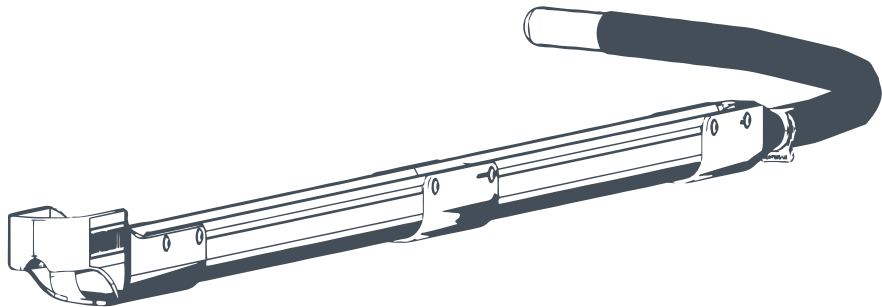

ASSEMBLY & INSTALLATION INSTRUCTIONS

WWW.RIVERSMITH.COM

@RIVERSMITHUSA



Patent Pending

CONTENTS

- 1 INCLUDED PARTS & TOOLS NEEDED
- 2 MOUNTING OPTIONS
- 3 STEP 1 - PREPARE PARTS FOR ASSEMBLY
- 4 STEP 2 - INSTALL REEL BOX & NOSE CONE ON CHANNELS
- 5 STEP 3 - INSTALL UNIVERSAL MOUNTS
- 6 STEP 4 - JOIN CHANNEL EXTRUSIONS
- 7 STEP 5 - MOUNT SWIFTCAST ON RAFT FRAME
- 8 STEP 6 - ATTACH CURVED TUBES AND PIPE CLIPS
- 9 MAINTENANCE & SAFETY INFORMATION

TOOL NEEDED

4mm Hex
Wrench



We know that all
rafts
and frames are
unique, so please
use
QR code to access
FAQs that may help
during your
installation
of your Swiftcast
Rod Holder.



INCLUDED PARTS

SWIFTCAST ROD HOLDER KIT



CHANNEL
EXTRUSION
(2)



CHANNEL
CONNECTOR
(1)



REEL BOX
(1)



NOSE CONE
(1)



24IN CURVED
TUBE
(2)



TUBE CAP
(1)



UNIVERSAL
MOUNT
(2)



20MM UNIVERSAL
MOUNT BOLT
(4)



PIPE CLIP
(2)



SLOT BOLT
& NUT (12)




BRACKET
BOLT & NUT(2)




MOLLE
(2)

The SWIFTCAST Rod Holder is built and tested to the highest possible standards to securely transport and protect your gear, however it is not meant as a long term storage solution.

MOUNTING OPTIONS INBOARD OF OAR TOWER

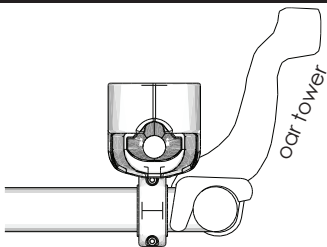


Standard Mounting
Inboard of Oar Tower

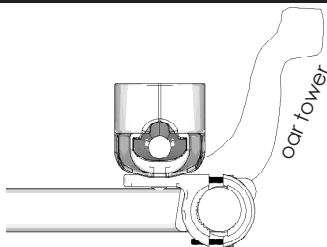


Offset Mounting
Inboard of Oar Tower

OUTBOARD OF OAR TOWER

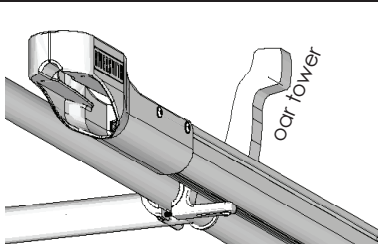

Standard Mounting
Outboard of Oar Tower

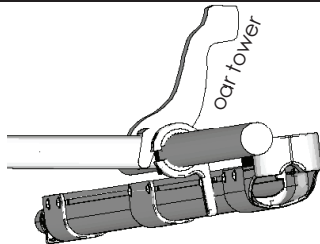

Dropdown Mounting
Outboard of Oar Tower

BEFORE ASSEMBLING THE SWIFTCAST DETERMINE YOUR PREFERRED MOUNTING OPTION (SEE PREVIOUS PAGE). USE ORANGE RUBBER SPACERS WITHIN UNIVERSAL MOUNTING BRACKETS WHEN ATTACHING THE SWIFTCAST TO FRAMES THAT ARE 1.625" OUTSIDE DIAMETER OR SMALLER.

STEP 1


STEP 1

Prepare Parts For Assembly - DO NOT ASSEMBLE SWIFTCAST HALVES UNTIL STEP 4

1

Pre-assemble slot hardware (Slot Bolt & Nut) onto Reel Box, Nose Cone, and Channel Connector

- Fasteners should be loose, the nuts should be threaded on 2-3 threads. DO NOT OVER TIGHTEN.

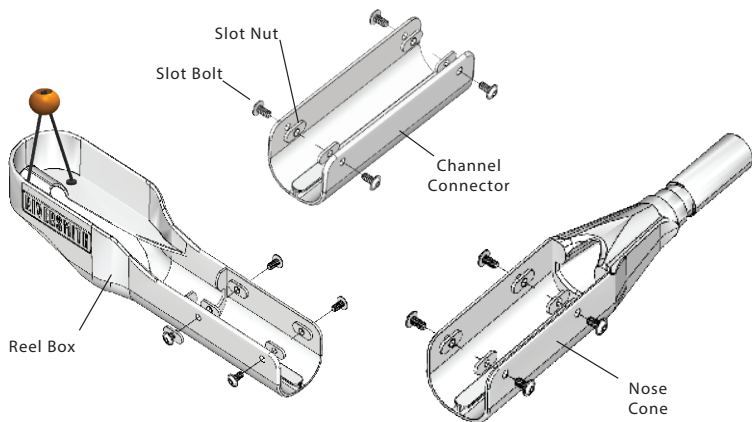

3


STEP 2

Attach Nose Cone and Reel Box onto Channel Extrusions - DO NOT ASSEMBLE SWIFTCAST HALVES UNTIL STEP 4

2

Slide the Reel Box and Nose Cone onto one end of each Channel Extrusion with the Slot Nuts running into the T-Track of the Channel Extrusion. Ensure Channel ends are pressed tight against the Reel Box and Nose Cone before tightening bolts. Tighten pre-assembled slot hardware with 4mm Hex Key.

▲ DO NOT OVER TIGHTEN.

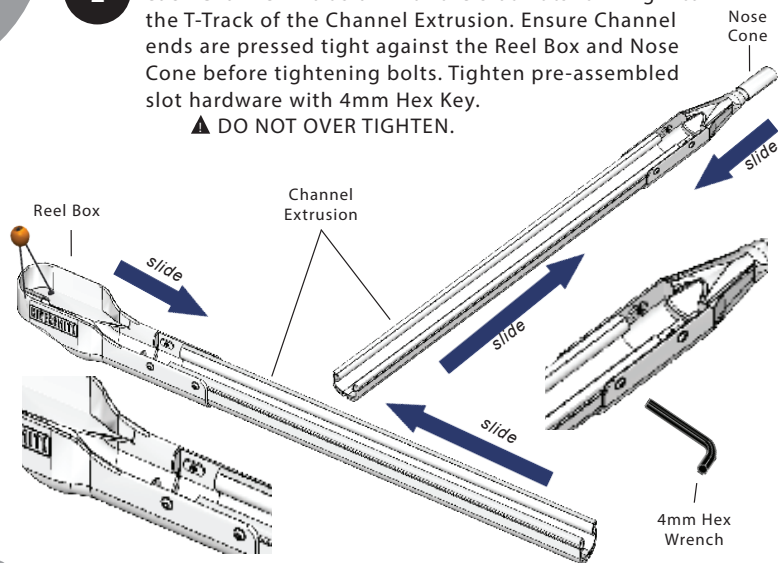


STEP 3

Install the Universal Mounting Brackets

3

Install a Universal Mount into bottom T-Track on each Channel Extrusion. Leave loose until mounted onto raft frame crossbars.

▲ DO NOT OVERTIGHTEN OR DAMAGE
WILL OCCUR

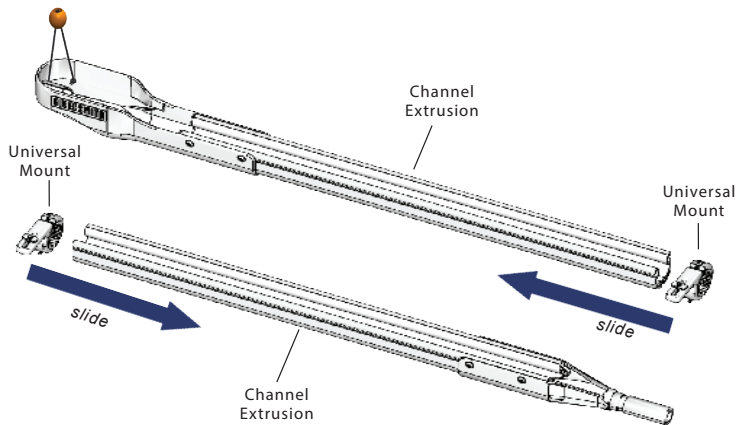


STEP 4

Join the Channel Extrusions

4

With the Universal Mounts pre-attached, now connect the two Channel Extrusion halves together with the Channel Connector. Center Channel Connector on the seam. Tighten pre-assembled slot hardware with 4mm Hex Key.

▲ DO NOT OVERTIGHTEN OR DAMAGE WILL OCCUR

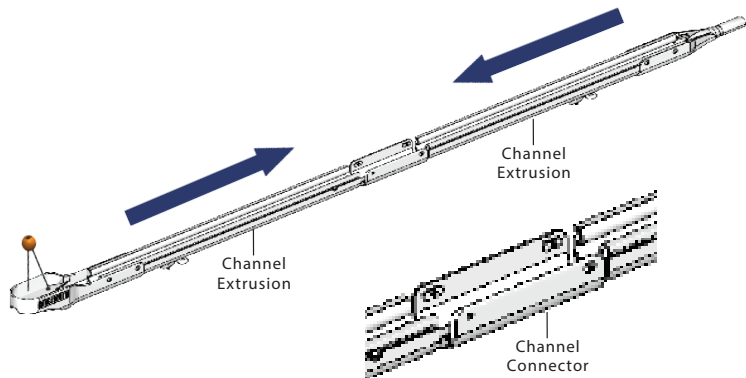


STEP 5

Mount SWIFTCAST Rod Holder onto raft frame

5

Secure the main portion of each Universal Mount around each frame cross bar, then slide the Swiftcast Rod Holder into your preferred position. Once positioned, fully tighten all bolts on the Universal Mount with 4mm hex key. ▲ DO NOT OVERTIGHTEN OR DAMAGE WILL OCCUR

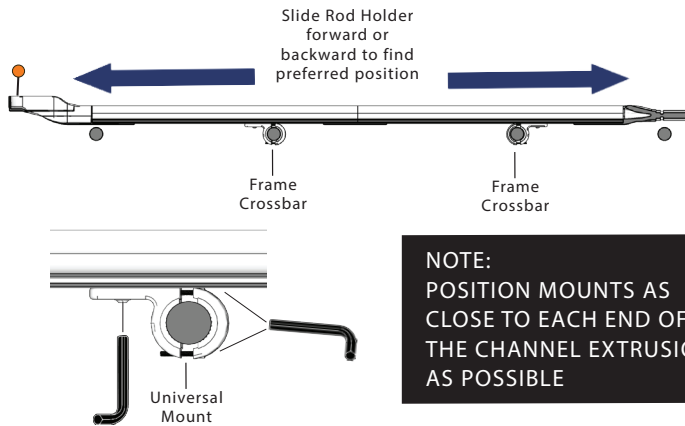


STEP 6

Attach Curved Tubes and Pipe Clips

6

Once the rod holder is fully secured to the raft frame, install both 24in Curved Tubes. Slide tube 1 onto the end of the Nose Cone and secure it with a Pipe Clip. Then slide tube 2 onto the end of tube 1 and secure it with a Pipe Clip. Finally, install the Tube Cap on the end of tube 2. Twist tubes until they match the shape of your raft. You can use the Molle to secure the tube to the raft by securing the velcro strap around the tube and attaching the Molle to an existing tie down strap/webbing

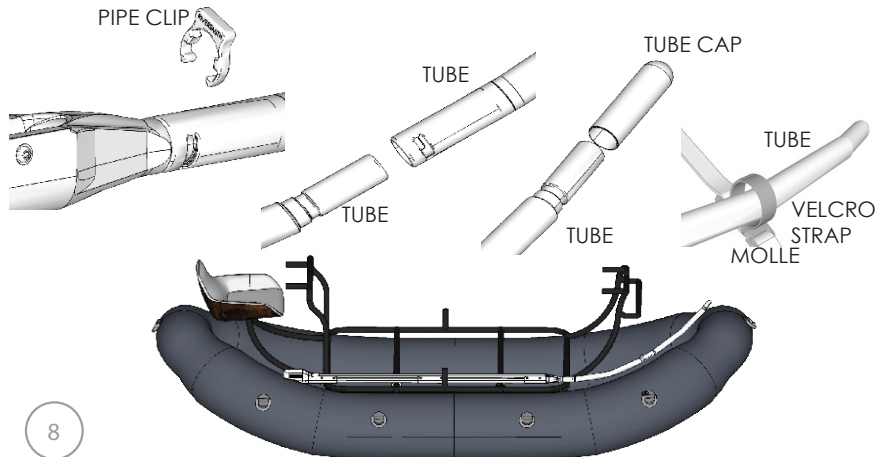

MAINTENANCE AND USE

- Swiftcast Rod Holder should be cleaned regularly with mild soap and water for maximum longevity.
- Always travel with rod fully rigged in Swiftcast Rod Holder.
- Periodically inspect Swiftcast Rod Holder and frame for damage. Replace lost, damaged, or worn parts with original replacement parts from Riversmith.
- Any modifications made to the Swiftcast Rod Holder or repairs made with parts other than those supplied by the manufacturer will void warranty and liability.
- To replace lost or damaged components or purchase accessories search online at www.riversmith.com


SAFETY INFORMATION

- Improperly secured loads and incorrectly mounted rod holders or accessories can come loose causing damage to property, serious injury, or death.
- Always place Universal Mounting Brackets as far apart as possible before securing the Swiftcast Rod Holder.
- Check all rack and accessory hardware:
 - Before any trips
 - After a short drive or float following initial install
 - At regular intervals during use
 - Anytime rough terrain is encountered on the road or the river
- Do not use more than one rod in a Swiftcast Rod Holder.
- Do not attach unauthorized accessories to Swiftcast Rod Holder
- Do not step on any part of the Swiftcast Rod Holder when entering or exiting the raft.

— SWIFTCAST ROD HOLDER IS A PRODUCT BY —

RIVERSMITH

BOULDER • CO

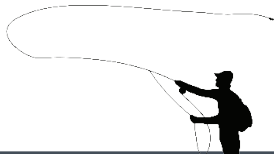

LOCKED & LOADED LIMITED LIFETIME WARRANTY

Riversmith takes pride in the products we manufacture and will warrant that all Rod Holders will be free from defects in workmanship and materials for the life of the product to the original purchaser ("you"), subject to the below conditions:

- Swiftcast Rod Holder was purchased from a Riversmith authorized dealer;
- You can provide proof of purchase from the Riversmith authorized dealer;
- The product was used only as intended and in accordance with the Swiftcast Rod Holder installation guide.

If a defect occurs during intended use (according to the installation guide), we will replace, at our discretion, the defective product or part. The warranty does not cover defects caused by misuse, overloading, modifications, or improper assembly. Cosmetic damage, loss, theft, normal wear and tear, and the natural breakdown of colors and materials over time and use are not warranted. If damage is deemed outside of the scope of this warranty, replacement parts will be available at discounted prices.

Warranty Disclaimer:

UNDER NO CIRCUMSTANCES, WHETHER FOR BREACH OF WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, OR OTHER TORT, OR ANY STRICT LIABILITY THEORY, WILL RIVERSMITH BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES TO NON-RIVER QUIVER PRODUCTS USED IN CONJUNCTION WITH RIVER QUIVER PRODUCTS.

The warranty is only available in the United States. No Riversmith reseller, agent, or employee is authorized to make any modification, extension, or addition to this warranty.