BAJARACK WARRANTY

This Limited Warranty covers BajaRack products and all accessories for a period of 2 years from the date of purchase to the original owner of the product and does not apply once the equipment is sold or transferred to another person.

This Warranty does not cover the cost of removal of reinstallation or the product. BajaRack warrants (subject to conditions listed in this warranty) all products to be free of manufacturing defects in materials and workmanship.

Warranty claim requirements

The claim has to be submitted during the warranty period at the place of purchase or directly at our corporate office located:



BajaRack Adventure Equipment 2275 Michael Faraday Drive, Suite 6 San Diego, CA 92154 USA Phone Number: 760-621-0171

On your product you will find a label with a serial number. If you remove this label, please save the serial number in a safe place. You will need it if you want to make a warranty claim in the future. Any cost incurred to transport the defective product "to and from" will be the customer's responsibility.



Warranty resolution

Subject to BajaRack inspection of the product, the company will remedy defects in materials and/or workmanship by repairing or replacing, at BajaRack's option, the defective product without charge for parts or labor, subject to the limitations and exclusions described in this warranty. BajaRack may elect, at its option, not to repair or replace a defective product, in which case BajaRack will issue to the original retail purchaser, at BajaRack's option, either a full refund equal to the purchase price paid for the product, or a credit to be used toward the purchase of new BajaRack products or accessories.

Limitations of Liability

BajaRack is not liable for damage caused by shipping or transport of BajaRack products. It is the responsibility of the original retail purchaser to inspect all products prior to acceptance and to notify the shipping carrier in a timely manner so that any claim for damages can be made. If timely notification to the shipping carrier by the original retail purchaser is not made regarding damage caused during the transport of the product, a claim for damages may not be possible, and all liability falls to the original retail purchaser. This warranty does not apply if accident, abuse, misuse, collision, overloading, modification, misapplication, improper installation, or improper service has damaged the Product.

BAJARACK SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, CONSEQUENTIAL, INCIDENTAL, SPECIAL, EXEMPLARY, OR PUNITIVE DAMAGES OR FOR ANY OTHER DAMAGES OF ANY KIND OR NATURE [NO PERIOD.] (INCLUDING, BUT NOT LIMITED TO, LOST PROFITS, DOWN TIME OR LOSS OF USE) UNDER ANY LEGAL THEORY, EVEN IF BAJARACK WAS ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BAJARACK'S SOLE LIABILITY IS LIMITED TO THE REMEDY SET FORTH ABOVE.

BajaRack reserves the right to change Product design without notice.





RACK COMPONENTS



A) Maxtrax support plate (2x)
B) Holding Plate (2x)



What's in the box

C) 2" Hex Cap Screw Zinc Finish	(4x)
D) Flat Washer Zinc Finish	(8x)
E) Nylon Insert Lock Nut Zinc Finish	(4x)
F) Lock Pin	(4x)
G) Outer Washer ZInc Finish	(4x)
H) Wing Nut	(4x)
	D) Flat Washer Zinc Finish E) Nylon Insert Lock Nut Zinc Finish F) Lock Pin G) Outer Washer ZInc Finish



- 9/16" wrench for installation
 9/16" ratchet tool for support
 - Tips and recommendations (please read)
- · Please Install the Maxtrax with the help of a friend.
- The load limit of your rack is 300lb please do not exceed.

INSTALLATION STEPS

- Place the maxtrax support plate (A) on an edge of your Bajarack as shown in picture above.
- Place plate (B) on top of the tubing floor and add bolts (C) Washer (D) and nut (E) to tighten support.







- Insert the second support plate (A) thru the smaller diameter holes of your maxtrax. It will have a snug fit. This is how it should look like once the support plate (A) bolts are inserted between 2 maxtrax pads.
- Place the maxtrax and plate on the rack and insert the bolts of the previously installed support plate. Install it on the smaller diameter holes.

Repeat step 2, to tighten the second support plate and secure the accessory to the rack.







INSTALLATION STEPS

4

With the maxtrax in place insert Outer Washer (G) and tighten Wing Nut (H) for each bolt. Insert Lock Pin (F) in each bolt or for added security add a lock.







TECHNICAL SPECIFICATIONS

MAXTRAX MOUNT FOR FLAT RACKS

BR-MAXTRAX-UT-0
Tubing and Mesh Racks





Material and Thickness: 1/8 Inch (3.175 mm) and 3/16 Inch (4.7mm) steel.

Finish: Epoxy primer (rust barrier) with black powder coating **Mounting Method:** These mounts install on the floor of the rack.