

Electric Golf Trolley with Lithium Battery

Contents and components




- Transport bag with separate wheel compartment
- 2 drive (rear) wheels
- Longitudinal axis with front wheel
- Drive axle with double-tube motor
- Collapsible caddy frame with control handle and panel
- Scorecard holder with screws and Allen key
- Umbrella holder with fixing screw
- Beverage holder
- Lithium-ion 10 Ah battery with holder
- Charger
- Replacement seals
- Wrench for easy dismantling (T tool)
- Axis protection (connected with an elastic strap)
- Instructions for use with extra O rings

Initial start-up

Assembling the trolley:

- Fit the longitudinal axis to the drive axis (Fig. 1).
- Fit the drive (rear) wheels: Push in the pin on the wheel hub and click the wheel into place (Fig. 2). **Important:** Click once = freewheel mode (smooth manual operation). Click twice = motor mode. Ensure that both wheels have been correctly fitted by listening for the number of clicks. The tire profiles should face the direction of travel (like front wheel) (Fig. 2).
- Attach the caddy frame and adjust to desired height (Fig. 3).
- Lower bag rest: Lift and turn in the direction of travel.
- Upper bag rest: Click into desired position and secure.
- Insert the battery into the holder and plug in the cable (Fig. 4).
- Scorecard holder: Screw onto the caddy frame. Tighten the screws using the Allen key (Fig. 5).
- Umbrella holder: Fix to the handle in the desired position using the locking screw (Fig. 6).
- Beverage holder: Screw on to the caddy frame. Tighten the screws using the Allen key (Fig. 7+ 8).
- Place your golf bag on the trolley and secure it to the two holders using the elastic strap.

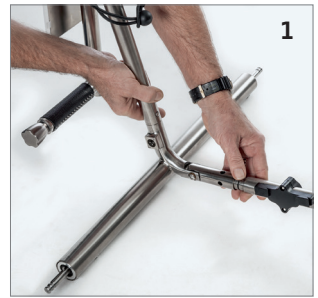

Setting wheel alignment

If the cart veers away when driving straight ahead, this can be easily adjusted:

1. Loosen the lug nut on the left side slightly (in the direction of travel).
2. The wheel position can be adjusted by turning the two small Allen screws at the front and back of the wheel suspension.
3. After adjusting, tighten the lug nut again.



Charging and servicing the battery

Important:

Before using the battery for the first time, it should be charged continuously for at least 6 hours.


- Red lamp = battery charging
- Green lamp = battery charged
- Charge the battery fully as soon as possible after each round of golf, even if there is still enough charge left in the battery for further use. Always begin a round of golf with a fully charged battery.
- The battery should be stored flat in a warm place. Once the battery is charged, disconnect it from the power supply. **Important:** Always ensure the battery is charged before storing it.
- If the battery has not been used for a long period of time, for example over winter, connect the battery to the power supply and charge it again. If it is not used for more than 3 months, recharge it during this period.
- Only use the charger supplied with the trolley.

Safety information

- Use only the intended charger to charge the battery. Using an unapproved charger can cause severe damage to the battery.
- Store the battery in a dry location away from extreme temperatures.
- If it is not used for a longer period (more than 3 months), recharge it during this period.
- Keep your trolley under control: always keep your hand on the handle when driving so you can stop or avoid objects in time.
- Always park the trolley crosswise in steep terrain to prevent it from rolling away.
- When crossing water hazards, make sure the axle is not immersed. If water gets into the axle, the motor and electronics can be damaged.

Operating

- **LED display:**
 - No light = no power/battery not plugged in
 - Slow flashing = power too low, charge battery!
 - Fast irregular flashing = standby, parking brake active
- **To start:** Press button A. The trolley will run at the last speed selected.
- **To stop:** Press button A. The automatic parking brake prevents the trolley from rolling forward.
- **Release the parking brake (to push the trolley manually):** Turn the knob back to zero and press the Start/Stop button.
- **Activating the brake again:** Press the Start/Stop button.
- **Distance timer (this function allows the trolley to drive on for 10 or 20 seconds):**
 - While the trolley is stationary, press button A for 3 seconds until the LED display flashes quickly, then release it. The trolley will move forward for 10 seconds at the set speed.
 - While the trolley is stationary, press button A for at least 5 seconds until the LED display flashes slowly, then release it. The trolley will move forward for 20 seconds at the set speed.
- **Setting the speed:** Speed can be set variably by turning the potentiometer (cog B).
 - Turn in the direction of travel = faster
 - Turn backward = slower

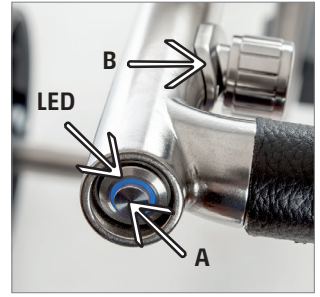

Cleaning/Care/Storage

- Clean the trolley with a damp cloth and/or compressed air. Avoid spraying it with water.
- Always store the trolley in a dry location.

Transport

- Please use the transport bag to transport the caddy. This bag has a compartment for the rear wheels at the bottom and dividers for 3 compartments in the upper storage area. To prevent damage during transport (e. g. scratches), put the motor axle, the control arm, and the front axle with wheel in separate compartments.
- **Important:** The zipper for the wheel compartment should be opened and closed only when the compartment above is empty to prevent it from tearing.