




PRETEND PLAY

BELLA'S DREAM DOLL HOUSE

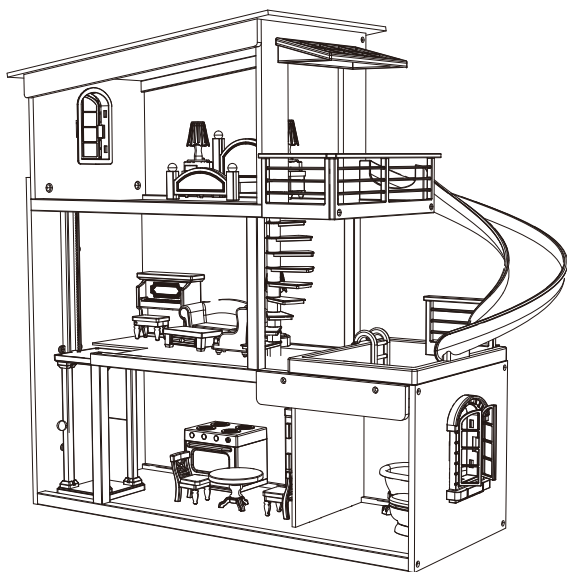

* 120426 *



⚠ WARNING:

All packaging materials, such as tapes, plastic sheets, binding wires and labels, are not part of the product and are not suitable for children to play with. For the safety of your child, please properly handle the above packaging materials. The user manual contains important information, please keep it for later use.

BATTERY INSTALLATION:

1. Confirm the toy is in the closed state.
2. Unscrew the battery box cover at the bottom of the toy with a screwdriver.
3. Stove: Install 2 new 1.5V AAA batteries as shown in Figure1;
Piano: Install 2 new 1.5V AAA batteries as shown in Figure2;
Lamp&Floor lamp: Install 1 new 3V(CR2032)button battery as shown in Figure3(Included);
Toilet: Install 1 new 3V(CR2032)button battery as shown in Figure4(Included);
4. Put on the battery cover and tighten the screws.

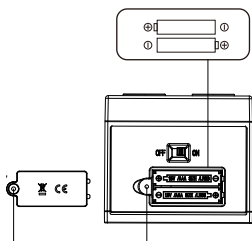


Figure 1

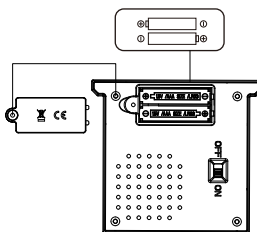


Figure 2

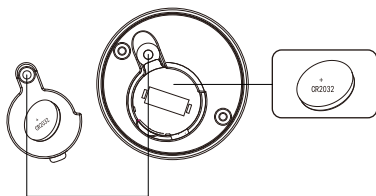


Figure 3

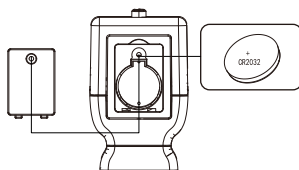


Figure 4

NOTE FOR BATTERY USAGE:

1. Alkaline, carbon and zinc batteries can be used.
2. Only rechargeable batteries can be charged.
3. Rechargeable batteries can only be charged under adult supervision.
4. The rechargeable battery should be removed from the toy before charging.
5. Do not use different types of batteries or old and new batteries in mixture.
6. The battery should be put in the correct polarity (+, -).
7. Depleted batteries should be removed from toys.
8. The power terminal shall not be short-circuited.
9. Remove the battery when not in use for a long time.
10. Don't put the battery in the fire.

MAINTENANCE:

 
1. Wipe the outside of the main machine with a soft dry cloth to keep the machine clean.
2. Avoid direct sunlight and keep away from any heat sources.
3. Remove the battery, When not in use for a long time
4. Avoid coniding with hard objects and disassembling.
5. Do not immerse the main machine in the water and avoid damp.

COMMON TROUBLESHOOTING:


The host stops responding if for some reason ,please follow these steps:

1. Close the host.
2. Remove the battery and interrupt the power supply.
3. Place the machine for several minutes and then reload the battery.
4. Reboot then use it.
5. If the machine is still not working, please install new batteries.

Parts List



001X1

 

002X1



 
003X1



004X1



006X1



007X1



010X1



011X1



005X1



008X1



009X1



012X1



013X1



017X1



020X1



021X1



022X1



023X1



014X1



018X1



024X1



025X1



 
026X1



015X1



019X1



016X1



027X9



028X1



029X1



030X1



031X2



032X1



033X1



034X1



035X1



036X2



037X1



038X2



039X1



040X1



041X1



042X1



043X1



044X1



045X1



046X1



047X1



048X2



049x5



050X8



051X17



052X2



053X2



054X2



055X6



056x2




057X1




058x1

Assembly


①

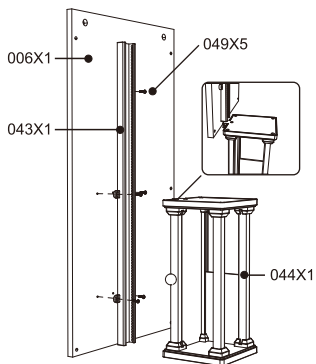


②

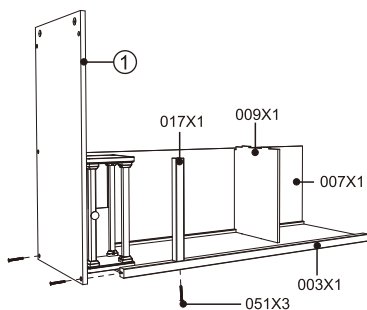


③

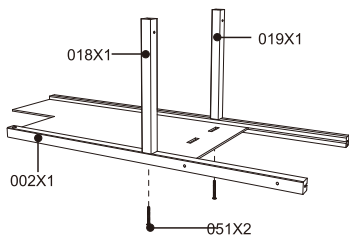


④

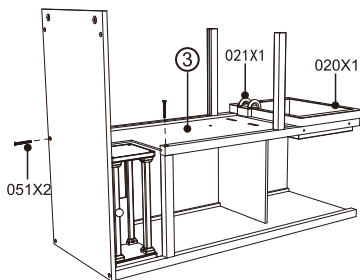


⑤

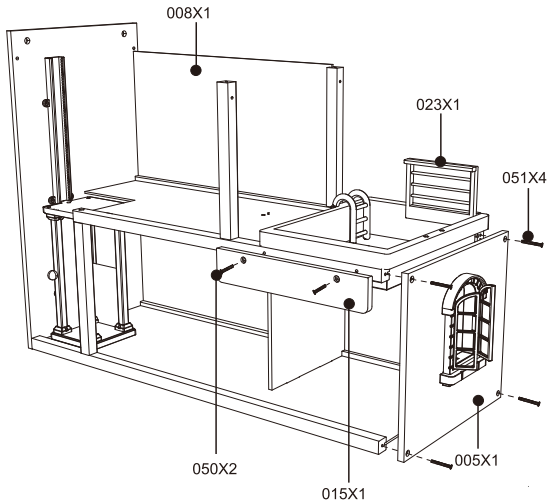


⑥

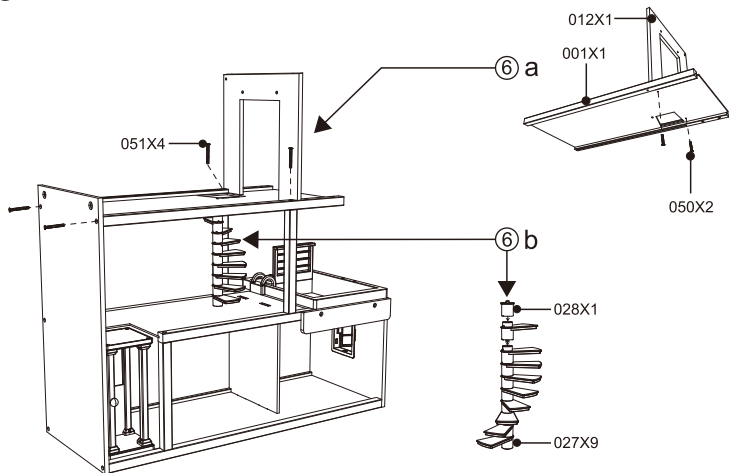


⑦

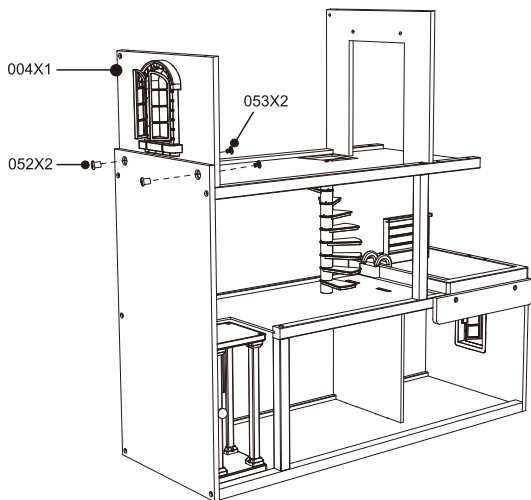


⑧

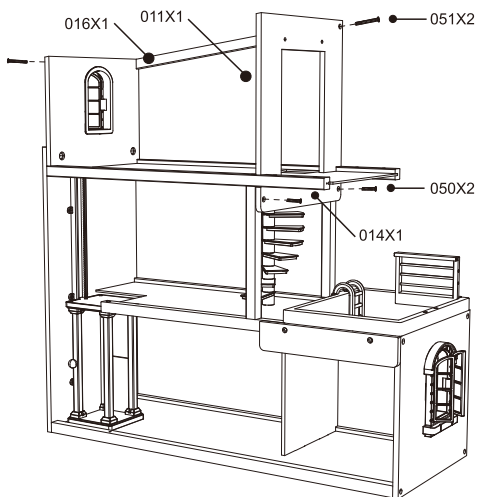


9

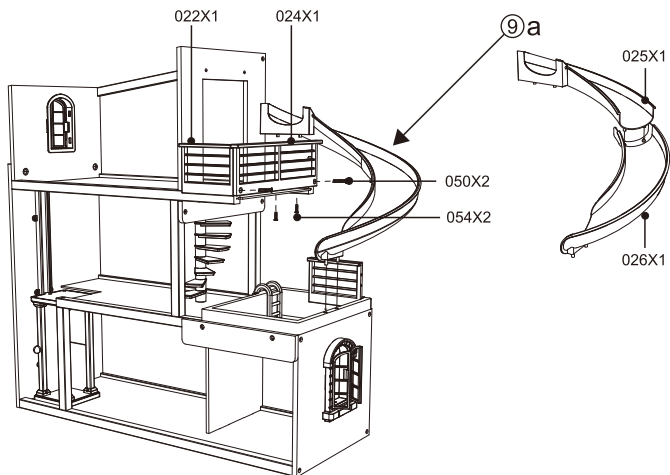


10

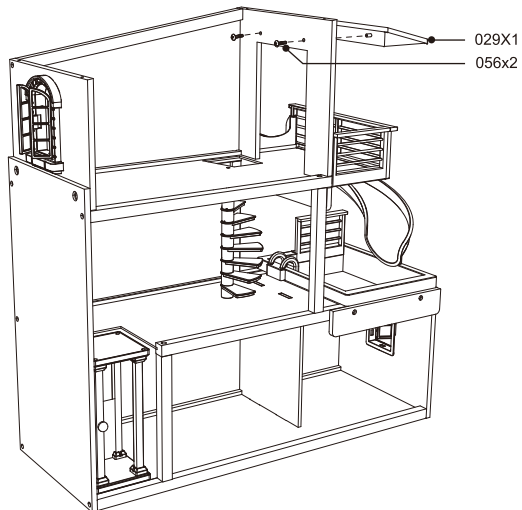

11

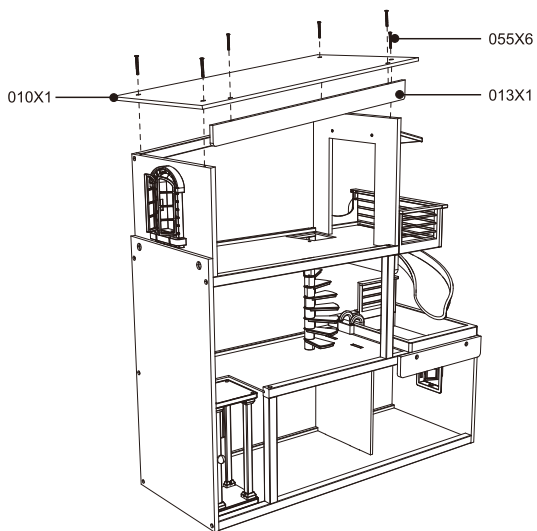

12

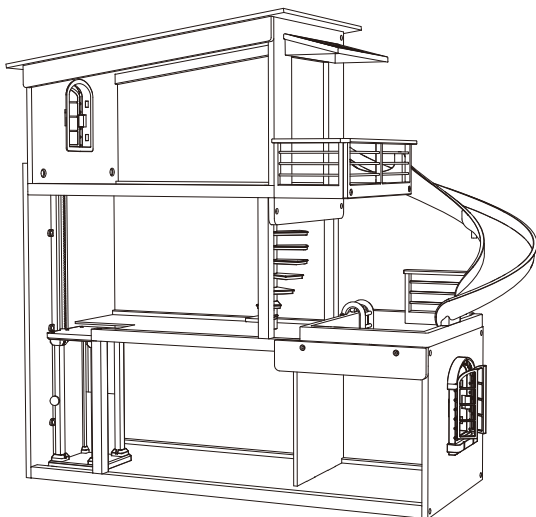



Light up children's talent