



Button functions hardcopy

Instructional videos available on: www.U-Level.us and on the home screen button on iPhone app

Download the App!

U-Level app for iPhone: <https://apps.apple.com/us/app/u-level/id1448340593> or just search the app store for U-Level.

U-Level app for Android:

https://play.google.com/store/apps/details?id=com.smartleveler.ulevel&hl=en_US or just search Google Play for U-Level.

Power, tap once turns on, hold 5 seconds turns off

Power, after the level is on pressing power will change from inches, to fractions, to cm for 30 seconds.

After 30 seconds you can no longer change the mode you are reading until you power off then back on.

Zero, tap once for backlight

Zero, hold 5 seconds for auto zero, you will hear a beep Auto zero will set your reference to the height the display is at that time. The reel can be anywhere but needs to be laid flat on its back.

Range, hold power down, tap zero, release power You can then change the range up and down using the power or zero buttons individually. Range is displayed until you finish adjusting then in 5 seconds the height is displayed.

Bluetooth, hold zero down, tap power, release zero You will see the wireless icon displayed. Hold zero and tap power to turn Bluetooth off.

If for any reason the level does not come on, or starts and dies it is the batteries.

First make sure you have good batteries. Weak batteries can start the level but fail to keep it going.

Second make sure the batteries are inserted as per the photo in the battery compartment.

Third make sure the batteries make good connection. If the unit has been wet or stored for extended periods of time corrosion can prevent good connection. Clean or file the contacts if necessary.